### Manuals+

Q & A | Deep Search | Upload

### **Dprofy V7-M**

# **Dprofy Magnetic Bluetooth Golf Speaker Instruction Manual**

Model: V7-M

### Introduction

Thank you for choosing the Dprofy Magnetic Bluetooth Golf Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Designed for robust outdoor use, this speaker combines powerful audio with convenient features like magnetic mounting and long battery life, making it an ideal companion for your golf rounds and other adventures.

### **Setup**

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C cable to the speaker's charging port and a compatible USB power adapter. The charging indicator light will show charging status. A full charge provides up to 24 hours of playtime at 60% volume. Fast charging allows for 70% charge in 60 minutes.



# POWER BANK

When fully charged, it can charge the iphone 15 about 60~70%



# FAST CHARG

The Type-C interface supports PD-18W input, 70% Charge in 60 Minutes.

Image: Dprofy speaker with USB-C port highlighted for fast charging and an illustration of its power bank capability charging a smartphone.

### 2. Bluetooth Pairing

Turn on the speaker by long-pressing the power button. The speaker will automatically enter Bluetooth pairing mode, indicated by a blinking blue LED. On your device (smartphone, tablet, laptop), enable Bluetooth and select 'Dprofy V7M' from the list of available devices. Once connected, the LED indicator will become solid blue.

# **WIRELESS STEREO PAIRING** Automatic pairing of two speakers when powered on. )))

Image: Two Dprofy speakers wirelessly paired for stereo sound, with a visual representation of Bluetooth waves between them. For True Wireless Stereo (TWS) pairing, ensure both Dprofy speakers are powered on and not connected to any device. They will automatically pair with each other for a synchronized stereo experience. The Bluetooth 5.3 technology provides a stable connection up to 100 feet.

### 3. Magnetic Mounting

The speaker features a built-in N52 SUPER strong magnet for secure attachment to any metal surface, such as a golf cart frame. Simply place the speaker against the desired metal surface, and the magnet will hold it firmly in place. For non-magnetic surfaces or golf bags, use the included metal clip or hang hook accessories.





Image: Dprofy speaker mounted magnetically on a golf cart, along with included accessories like a storage case, metal clip, and hang hook.

# **Operating**

### 1. Button Functions

- Power On/Off: Long press the power button to turn the speaker on or off.
- Multifunction Button (M): Short press to switch between Bluetooth, Micro SD, and AUX modes. Long press to cycle through tracks (next/previous).
- Volume +/-: Short press for next/previous track. Long press to adjust volume up or down.
- Play/Pause: Short press to play or pause music.

### 2. Light Modes

The speaker supports two light modes: breathing light and multi-color rhythm. Press the dedicated light button to switch between modes and create an engaging atmosphere.

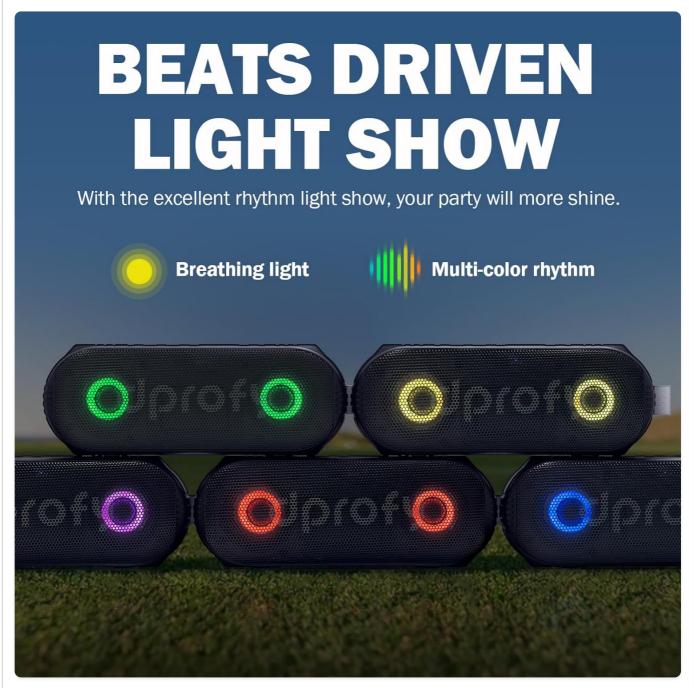


Image: Multiple Dprofy speakers showcasing different LED light colors and patterns, including breathing light and multi-color rhythm.

### 3. Micro SD Card & AUX Input

Insert a Micro SD card (up to 32GB) loaded with MP3/WAV audio files into the designated slot to play music directly from the card. Alternatively, connect an external audio device using the AUX in jack.

### 4. Power Bank Functionality

The speaker can also serve as a power bank. Connect your smartphone or other USB-powered device to the speaker's USB-C port to charge it. It can charge an iPhone 15 approximately 60-70%.

The Dprofy speaker is IPX6 certified waterproof and dustproof, making it suitable for use in various outdoor conditions, including rain or dusty environments. However, it is not designed for submersion in water. Avoid prolonged exposure to extreme temperatures or direct sunlight. Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.



Image: Dprofy speaker being splashed with water, emphasizing its IPX6 waterproof rating for use in rain or shine.

## **Troubleshooting**

- **No Power:** Ensure the speaker is fully charged. Connect it to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Cannot Pair via Bluetooth: Make sure the speaker is in pairing mode (blinking blue LED). Check that Bluetooth is enabled on your device and that the speaker is within the 100-foot range. Try forgetting the device from your Bluetooth settings and re-pairing.
- Poor Sound Quality: Ensure the speaker is fully charged. Check the volume levels on both the speaker and your connected device. Move closer to the speaker to rule out range issues. If using an SD card, ensure the

audio files are not corrupted.

• **Speaker Not Responding:** If the device is unresponsive, long press the power button for at least 8 seconds to reset it.

# **Specifications**

Model Name: V7-M BlackX2

Material: Synthetic material (plastic or rubber)

Speaker Type: Outdoor

**Special Features:** Magnetic, SD Card Slot **Product Dimensions:** 1.8"D x 8.05"W x 2.95"H

**Battery Life:** Up to 24 Hours **Battery Capacity:** 5200mAh

Water Resistance Level: IPX6 Waterproof Wireless Communication: Bluetooth 5.3

Bluetooth Range: 100 Feet
Speaker Output Power: 80 Watts

Audio Output Mode: Stereo
Control Method: Touch

### What's in the Box

- · Dprofy Magnetic Bluetooth Golf Speaker
- USB-C Charging Cable
- · Auxiliary Audio Cable
- Metal Clip
- Hang Hook
- Storage Bag
- User Manual

# **Warranty and Support**

The Dprofy Magnetic Bluetooth Golf Speaker comes with a One Year Warranty from the date of purchase. This warranty covers manufacturing defects and workmanship. For warranty claims or technical support, please contact Dprofy customer service through the retailer where the product was purchased or visit the official Dprofy website for contact information.