



[Manuals.plus](#) /

› [Lankey Pro](#) /

› Lankey Pro Wireless Headphones User Manual

## Lankey Pro BX17

# Lankey Pro Wireless Headphones User Manual

Model: BX17 | Brand: Lankey Pro

## INTRODUCTION

Thank you for choosing Lankey Pro Wireless Headphones. These headphones are designed to provide a superior audio experience with advanced features for sports and daily use. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new headphones, ensuring you get the most out of your device.



Image: Lankey Pro Wireless Headphones in their charging case, displaying the LED battery indicator.

## WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Wireless sports headphones (2 earbuds)
- Headphone charging case (1)
- USB-C fast charging cable (1)
- S/M/L size spare silicone ear cups
- User Manual (this document)

## SETUP

### 1. Charging the Headphones and Case

Before first use, fully charge the headphones and the charging case. Connect the provided USB-C cable to the charging case and a power source. The smart LED digital display on the charging case will show the battery percentage, allowing you to monitor the charging status of both the case and the earbuds.



Image: Diagram illustrating the 75-hour total playtime, with 15 hours from earbuds and 60 hours from the charging case, along with the LED display.

### 2. One-Step Pairing

The Lankey Pro headphones feature advanced Bluetooth 5.3 technology for stable and low-latency connections. Pairing is designed to be quick and seamless:

1. Take both wireless earphones out of the charging case. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, etc.), open the Bluetooth settings.
3. Look for "BX17" in the list of available devices and select it to connect.
4. Once connected, the headphones will automatically reconnect to your device when taken out of the case in the future.



Image: Visual guide demonstrating the one-step pairing process with a smartphone.

## OPERATING INSTRUCTIONS

### Button Controls

The headphones are controlled by physical buttons, ensuring precise and responsive commands. Here's a guide to the various functions:

| Action                | Function                   |
|-----------------------|----------------------------|
| Single Click          | Play / Pause music         |
| Double Click          | Answer / Hang up call      |
| Long press 2s         | Reject call                |
| Long press "+" button | Next song / Voice up       |
| Long press "-" button | Previous song / Voice down |
| Long press 5s         | Power on / off             |

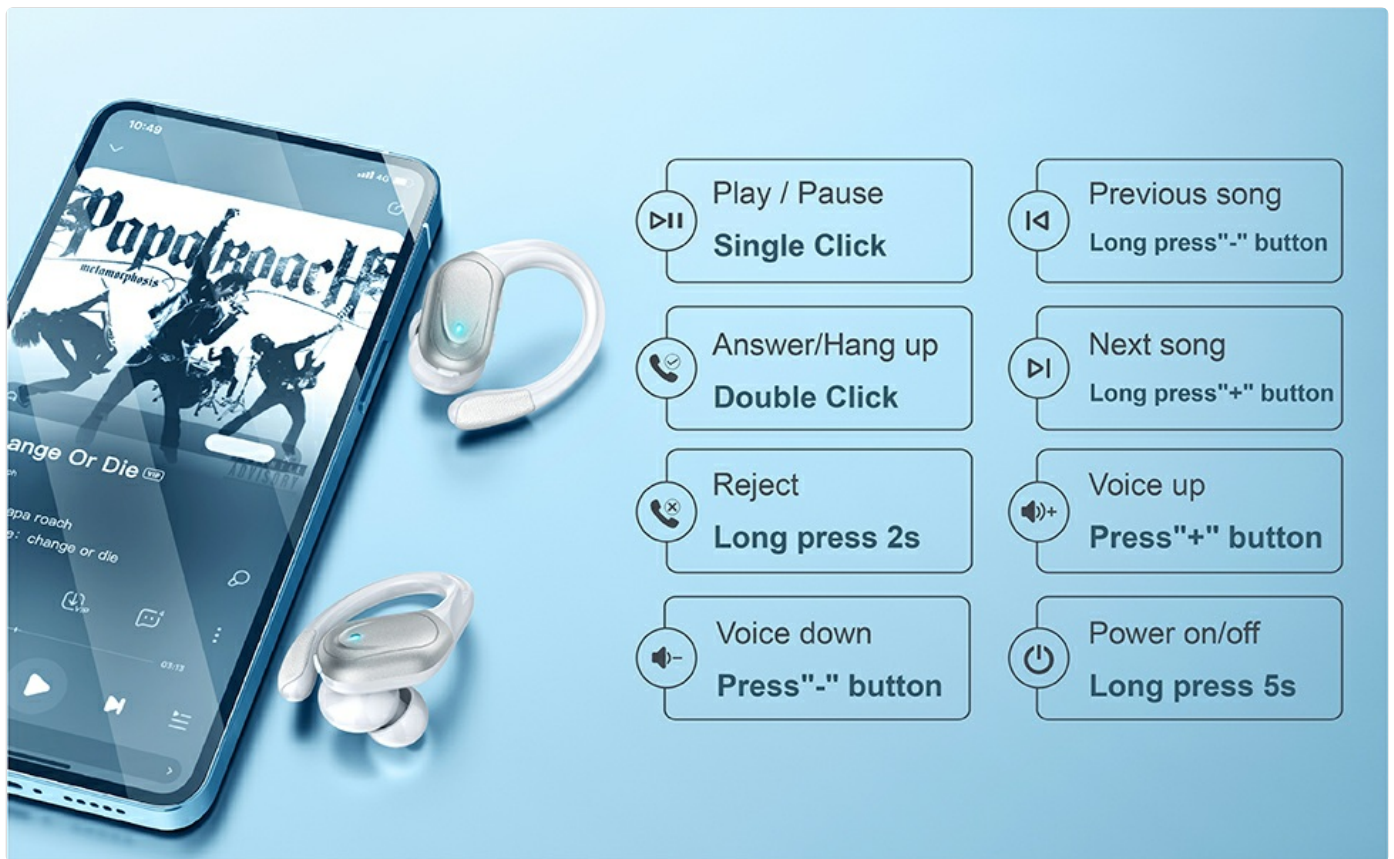 


Image: Comprehensive diagram showing all button control functions for music and calls.

## Wearing the Earbuds

For optimal comfort and sound quality, ensure the earbuds are worn correctly:

1. Choose the correct size ear tips (S/M/L) that provide a comfortable and secure seal in your ear canal.
2. Place the earbud into your ear, ensuring the earhook goes over the top of your ear.
3. Adjust the earhook to a suitable position for a snug and stable fit, especially during vigorous activities.



# Comfortble Fit Let You Enjoy Your Sports

Sport headphones to keep you motivated, a secure fit that won't shift or fall out during long hours of training

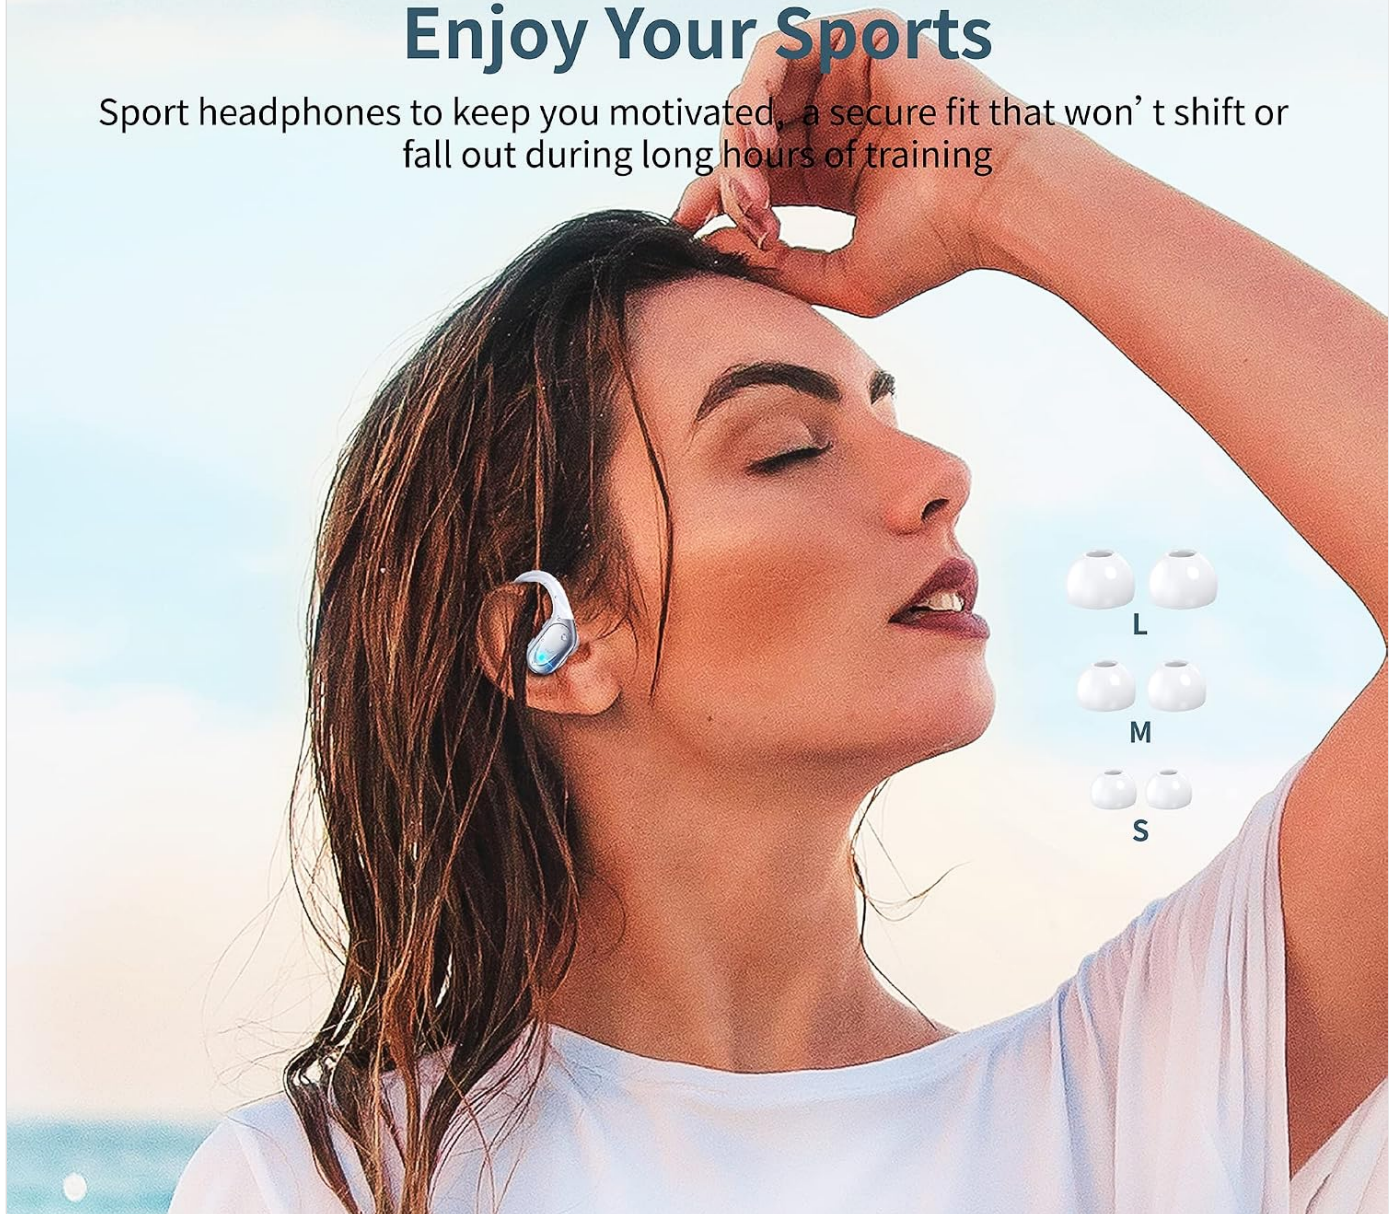 


Image: A person wearing the Lankey Pro headphones, demonstrating the secure earhook design.

## KEY FEATURES

### Advanced Bluetooth 5.3 Technology

Equipped with the latest Bluetooth 5.3 chip, these headphones offer a stable, low-latency connection up to 15 meters, ensuring seamless audio streaming and calls.

### 75 Hours Playtime & LED Display

Enjoy up to 15 hours of continuous playback on a single charge, extended to a total of 75 hours with the 650mAh charging case. The intelligent LED digital display on the case provides real-time battery status for both earbuds and the case.

# Obvious LED Digital Display

Can display the charging case and earphone battery power separately



Earbuds Battery Display



Charging Case Power Display



Image: Close-up of the charging case showing the clear LED digital display for battery levels.

## Hi-Fi Stereo & CVC 8.0 Noise Reduction

Experience authentic musical enjoyment with 13.4mm dynamic speaker drivers and a unique stereo design. The integrated CVC 8.0 call noise reduction technology ensures crystal-clear calls by minimizing background noise, allowing you to focus on your conversations and music.



# CVC Noise Cancelling Microphone

Allowing you to hear crystal clear calls like you are communicating face to face with others.

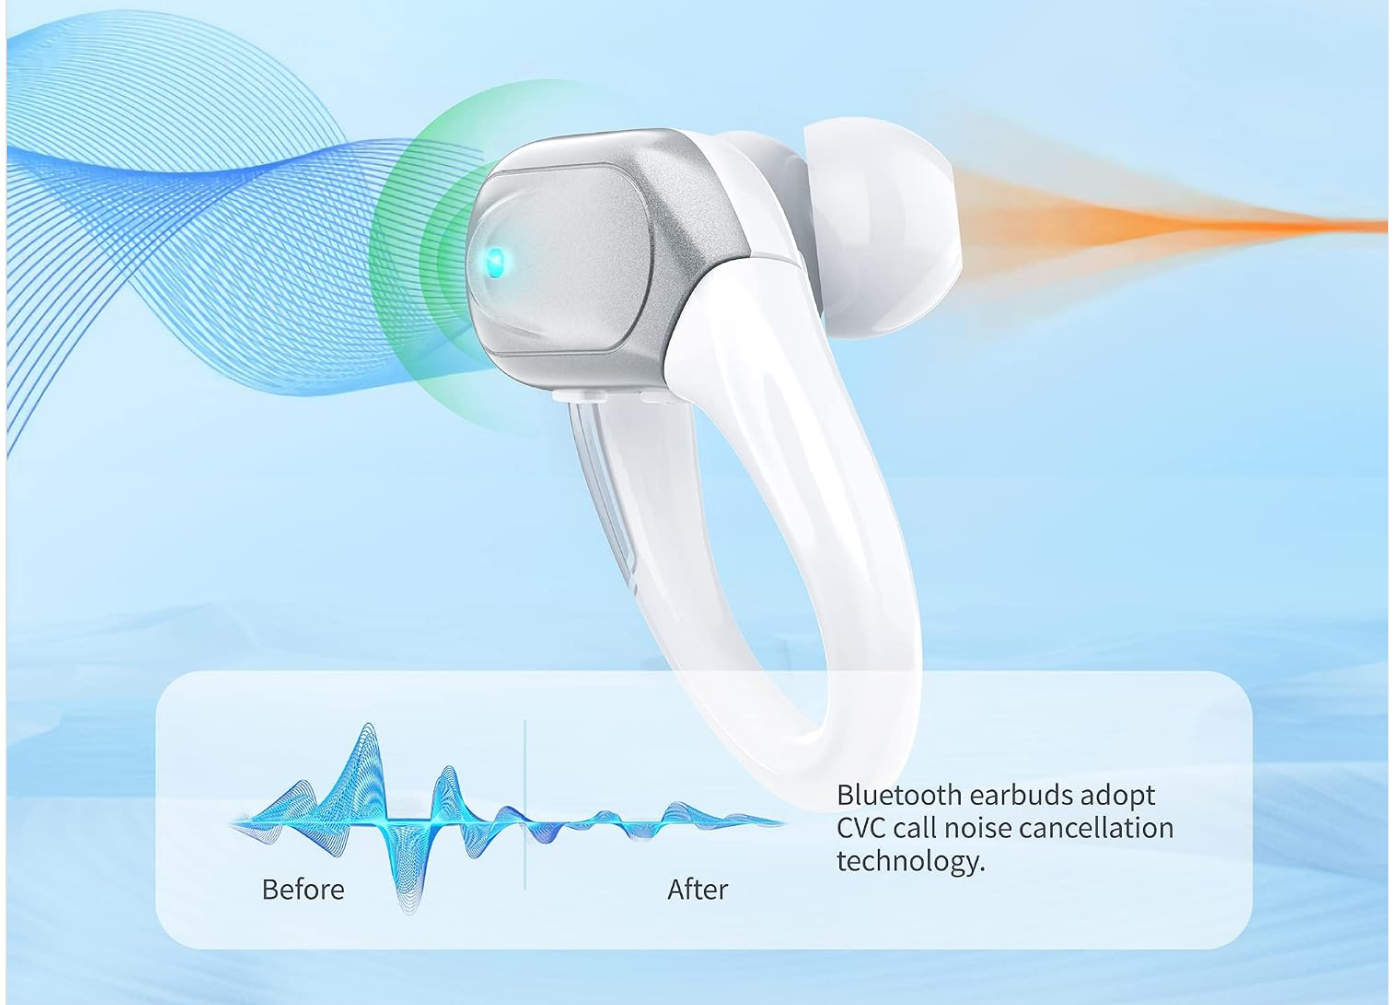 


Image: Illustration demonstrating the CVC noise cancelling microphone's ability to reduce ambient sound during calls.

## IP7 Waterproof & Sweatproof

Designed with IP7 waterproof technology and an inner nano-coating, these earbuds are protected against sweat and rain, making them ideal for intense workouts and outdoor activities without fear of damage.



# IP7 Waterproof & Sweatproof

No fear rain and sweat during sport



Image: Visual representation of the headphones submerged in water, highlighting their IP7 waterproof rating.

## Lightweight Earhook Design

The secure-fit silicone ear hooks and ergonomic design ensure the earbuds stay comfortably and securely in place, even during strenuous exercise, preventing them from falling off.

---

## MAINTENANCE

To ensure the longevity and optimal performance of your Lankey Pro headphones, follow these maintenance tips:

- **Clean Charging Contacts:** If the earbuds are not charging, use a cotton swab with a small amount of alcohol to gently clean the metal charging contacts on both the earbuds and inside the charging case. Ensure they are dry before placing earbuds back.
- **Clean Ear Tips and Mesh:** Regularly remove the silicone ear tips and clean them with water and mild soap. Use a soft, dry brush or cotton swab to gently clean any earwax or debris from the earbud's mesh speaker covers.

- **Store Properly:** Always store the earbuds in their charging case when not in use to protect them from dust, dirt, and physical damage.
- **Avoid Extreme Temperatures:** Do not expose the headphones to extreme hot or cold temperatures, as this can affect battery life and internal components.

## TROUBLESHOOTING

If you encounter any issues with your headphones, refer to the common problems and solutions below:

| Problem                   | Possible Cause / Solution                                                                                                                                                                |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Earbuds cannot be charged | Ensure the charging cable is securely connected. Clean the charging contacts on both the earbuds and the charging case with alcohol to remove any dirt or perspiration.                  |
| Poor sound quality        | Ensure you have chosen the correct size ear tips for a proper seal, which provides better bass and noise isolation. Clean the ear tips and the earbud's mesh to remove any obstructions. |
| Earbuds not pairing       | Ensure Bluetooth is enabled on your device. Place earbuds back in the case, then take them out again to re-enter pairing mode. Forget the device on your phone and try pairing again.    |
| One earbud not working    | Ensure both earbuds are charged. Try resetting the earbuds by placing them back in the case and then taking them out. Re-pair with your device.                                          |



### CAN'T BE CHARGED



When the earbuds cannot be charged, please use alcohol to clean the charging contacts.

### POOR SOUND QUALITY



- ① Choosing the right eartips, can provide better bass and noise isolation.
- ② Clean eartips and mesh.

Image: Visual troubleshooting tips for charging and sound quality problems.

## SPECIFICATIONS

| Feature                    | Detail                    |
|----------------------------|---------------------------|
| Model Name                 | Lankey Pro-BX17           |
| Connectivity Technology    | Wireless (Bluetooth 5.3)  |
| Ear Placement              | In Ear (with earhooks)    |
| Form Factor                | In Ear                    |
| Waterproof Rating          | IP7                       |
| Battery Life (Earbuds)     | Up to 15 hours per charge |
| Total Playtime (with case) | Up to 75 hours            |
| Charging Port              | USB-C                     |
| Product Dimensions         | 8 x 6 x 3 cm              |
| Weight                     | 140 g                     |

---

## WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or customer service, please refer to the official Lankey Pro website or contact their customer support directly. Contact details are typically provided on the product packaging or the manufacturer's official online channels.