



[Manuals.plus](#) /

› [Wellshave](#) /

› Wellshave Bodygroomer Pro User Manual

Wellshave WS-BG1

Wellshave Bodygroomer Pro

USER MANUAL

Model: WS-BG1 | Brand: Wellshave

Introduction

Thank you for choosing the Wellshave Bodygroomer Pro. This versatile grooming device is designed for precise and comfortable hair removal across various body areas, including sensitive regions. Featuring advanced ceramic blade technology and a waterproof design, it ensures a safe and efficient grooming experience. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



Image: The Wellshave Bodygroomer Pro, its packaging, charging stand, and various attachments.

Safety Instructions

- Do not immerse the charging base in water.
- Keep the device away from children.
- Ensure the device is fully charged before use to maintain optimal performance.
- Always clean the blades after each use to prevent irritation and maintain hygiene.

- If irritation occurs, discontinue use.
- Use only the provided charging cable and adapter.
- The device is waterproof (IPX5 rated) for wet and dry use, but avoid prolonged submersion.

Package Contents

Upon unboxing your Wellshave Bodygroomer Pro, please verify that all the following components are included:



Image: A visual guide to the contents of your Wellshave Bodygroomer Pro package.

1. Wellshave Bodygroomer Pro Device
2. Charging Stand
3. USB Charging Cable
4. Length Combs (various sizes: 1.5mm, 2.5mm, 3.5mm, 4.5mm)
5. Cleaning Brush

6. Lubricating Oil
7. User Manual
8. Product Packaging

Setup

Charging the Device

Before first use, fully charge your Wellshave Bodygroomer Pro. A full charge takes approximately 2 hours and provides up to 120 minutes of operating time.

1. Place the bodygroomer onto the charging stand.
2. Connect the USB charging cable to the charging stand and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port).
3. The LED display on the device will indicate the charging status.
4. Once fully charged, disconnect the device from the charger.

2 UUR LAADTIJD

FAST CHARGE



GEBRUIKSTIJD



Image: The bodygroomer charging on its stand, illustrating the 2-hour fast charge capability.

Attaching/Detaching Length Combs

The bodygroomer comes with multiple length combs to achieve your desired hair length.

- To attach: Align the comb with the trimmer head and push it firmly until it clicks into place.
- To detach: Gently pull the comb away from the trimmer head.



Image: Various length comb attachments (1.5mm, 2.5mm, 3.5mm, 4.5mm) for customizable trimming.

Operating Instructions

Powering On/Off

Press the power button located on the front of the device to turn it on or off. The LED display will illuminate when the device is active, showing battery percentage and other indicators.

WELLSHAVE GESCHIKT VOOR JOUW COMFORT



Image: Key features of the bodygroomer, including the soft-touch power button, LED display for battery, and integrated flashlight for improved visibility.

Grooming Techniques

The Wellshave Bodygroomer Pro is designed for safe and effective grooming of various body areas. Its SkinSafe Technology helps prevent nicks and cuts, even on sensitive skin.

- **For Body Hair (Chest, Legs, Armpits):** Use with or without a length comb depending on desired closeness. Move the trimmer against the direction of hair growth for best results.
- **For Intimate Areas:** For sensitive regions, it is recommended to use a length comb or to gently stretch the skin taut to ensure a smooth surface. The ceramic blade is designed to be gentle.
- **For Beard Trimming:** The versatile design also allows for precise beard shaping and trimming. Use the appropriate length comb for your desired beard style.



GESCHIKT VOOR HET HELE LICHAAM

SPECIAAL ONTWERPEN VOOR
LICHAAMSHAAR




SCHAAMSTREEK



BENEN



BORST

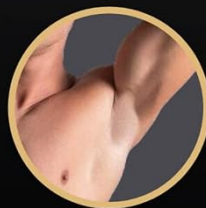

OKSELS



Image: The bodygroomer is suitable for grooming hair on the pubic area, legs, chest, and armpits.




**Skinsafe™
Technology**

Zacht en veilig scheren

Geniet van comfortabel scheren, zelfs op gevoelige plekken. Met afgeronde scheerhoofden en huidbeschermende technologie voorkomt deze body groomer irritatie en sneetjes.

Image: Demonstrating soft and safe shaving, even on sensitive areas, thanks to rounded shaving heads and skin-protective technology.

Multi-gebruik voor baardtrimmen

Moeiteloos veelzijdig, deze groomer is ontworpen voor lichaamsverzorging en ook perfect geschikt voor het vormgeven en trimmen van baarden. Geniet van nauwkeurige controle voor strakke lijnen en de gewenste lengte, allemaal met huidvriendelijke technologie.



Image: The groomer's versatility extends to shaping and trimming beards with precise control and skin-friendly technology.

Wet and Dry Use

The Wellshave Bodygroomer Pro is fully waterproof (IPX5 rated), allowing for comfortable use in the shower or on dry skin, offering ultimate flexibility.

Waterdicht voor nat en droog gebruik

Geschikt voor gebruik onder de douche of droog. Het volledig waterdichte ontwerp biedt ultieme flexibiliteit en comfort, ongeacht je voorkeur.



Image: The fully waterproof design allows for use under the shower or on dry skin, providing flexibility.

Maintenance

Cleaning the Blades

Regular cleaning is essential for maintaining the performance and hygiene of your bodygroomer.

1. After each use, turn off the device.
2. Remove any attached length comb.
3. Use the provided cleaning brush to remove loose hairs from the blade and trimmer head.
4. Rinse the trimmer head under running water. Ensure the device is off during rinsing.
5. Allow the trimmer head to air dry completely before reattaching any combs or storing.

Lubrication

To ensure smooth operation and prolong blade life, apply a small amount of lubricating oil to the blades periodically (e.g., after every few uses or when performance feels reduced).

- Apply 1-2 drops of the provided lubricating oil onto the blades.
- Turn on the device for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth.



Lange levensduur van de bladen

Hoogwaardige bladen blijven scherp voor langdurige, consistente prestaties zonder veelvuldig vervangen.

Inclusief 1 reservemesje

Image: High-quality blades ensure long-lasting, consistent performance without frequent replacement. Includes one spare blade.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Low battery; Device not charged.	Charge the device fully (approx. 2 hours).
Poor trimming performance; Hair pulling.	Blades are dull or clogged with hair; Insufficient lubrication.	Clean the blades thoroughly. Apply lubricating oil. Ensure blades are not damaged.
Skin irritation or nicks.	Improper technique; Blades are dirty or damaged; Sensitive skin.	Ensure skin is taut during use. Clean blades. Consider using a length comb. If irritation persists, consult a dermatologist.
Device not charging.	Charging cable or stand not properly connected; Faulty power source.	Check all connections. Try a different USB port or power adapter.

Specifications

Feature	Detail
---------	--------

Feature	Detail
Model Number	WS-BG1
Brand	Wellshave
Power Source	Electric (Rechargeable Lithium-ion Battery)
Battery Type	1 Lithium ion battery (included)
Charging Time	Approx. 2 hours
Operating Time	Up to 120 minutes
Blade Material	Ceramic
Water Resistance	IPX5 (Waterproof for wet and dry use)
Product Dimensions	20.6 x 9 x 7.3 cm
Weight	330 g
Special Features	Ergonomic design, LED display, SkinSafe Technology, Integrated flashlight
Recommended Use	Body and intimate grooming

Warranty and Support

Wellshave products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Wellshave website.

If you encounter any issues or have questions not covered in this manual, please contact Wellshave customer support. Contact details can typically be found on the product packaging or the brand's official website.

For online support and frequently asked questions, please visit: [Wellshave Store on Amazon](#)