

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lasko](#) /

› [Lasko Misto Outdoor Misting Tower Fan YF300 Instruction Manual](#)

Lasko YF300

Lasko Misto Outdoor Misting Tower Fan - Model YF300

Instruction Manual

[Safety Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read and save these important safety instructions before using this product.

- This fan is equipped with a 10-foot cord featuring an in-line GFCI (Ground Fault Circuit Interrupter) and a 3-prong, grounded plug. Ensure proper grounding for safe operation.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area where it will not be tripped over.
- Always unplug the fan before moving, servicing, or cleaning.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire, or damage the fan.
- Do not use this fan with any solid-state speed control device.
- This fan is designed for outdoor use. Its UV and weather-resistant build ensures it can withstand outdoor conditions.
- Ensure the water hose connection is secure to prevent leaks.

2. SETUP INSTRUCTIONS

Follow these steps to set up your Lasko Misto Outdoor Misting Tower Fan.

1. **Unpacking:** Carefully remove the fan and all components from the packaging. Verify all parts are present: Tower Fan, Misting Kit, User Manual.
2. **Placement:** Place the fan on a stable, level surface in your desired outdoor area (deck, patio, porch). Ensure it is near a grounded electrical outlet and a standard garden hose connection.
3. **Misting Kit Assembly:** The misting kit includes a 7.5-foot water hose and three misting nozzles. Connect the water hose to any standard garden hose. Ensure the connection is tight to prevent leaks.
4. **Power Connection:** Plug the 3-prong, grounded plug into a suitable outdoor electrical outlet. The cord features an in-line GFCI for safety.

Convenient Features



3 MISTING NOZZLES

Included in a misting kit with a **9** foot hose that connects with any standard garden hose



Image: Close-up of the Lasko Misto fan's side, showing the three misting nozzles and the hose connection point. This illustrates where the water hose attaches to the fan for misting functionality.

Built-In Safety



Image: The power cord of the Lasko Misto fan, highlighting the in-line GFCI (Ground Fault Circuit Interrupter) and the 3-prong grounded plug. This demonstrates the safety feature for electrical connection.

3. OPERATING INSTRUCTIONS

The Lasko Misto fan features easy-to-use electronic controls.

- 1. Power On/Off:** Press the power button (**U**) to turn the fan on or off.
- 2. Fan Speed Adjustment:** Press the fan speed button (fan icon) to cycle through the 4 available fan speeds. The current speed setting will be indicated by LED lights.
- 3. Oscillation Control:** Press the oscillation button (louver icon) to activate or deactivate the internal oscillation feature. This directs the breeze across a wider area.
- 4. Misting Function:** To use the misting function, ensure the water hose is connected and the water supply is turned on. The misting nozzles will provide a fine mist for cooling. Adjust the water flow from your garden hose for desired mist intensity.

Simple Smart Controls



Image: Close-up of the Lasko Misto fan's control panel, showing the power, fan speed, and oscillation buttons with their respective icons. This illustrates the user interface for operating the fan.

Your browser does not support the video tag.

Video: This video provides a product overview of the Lasko Misto Outdoor Misting Tower Fan, demonstrating its features and how it operates in an outdoor setting.

4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or immerse the fan in water.
- **Misting Nozzles:** Periodically check the misting nozzles for clogs. If clogged, carefully remove and clean them according to the instructions in the full user manual.
- **Storage:** When not in use for extended periods, disconnect the water hose and power cord. Store the fan in a cool, dry place, protected from extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on.	No power, GFCI tripped, damaged cord/plug.	Check power outlet, reset GFCI, inspect cord/plug for damage.
No mist or weak mist.	Water supply off, hose kinked, clogged nozzles.	Ensure water supply is on, straighten hose, clean misting nozzles.
Fan is noisy.	Obstruction in fan, unstable surface.	Check for obstructions, place fan on a firm, level surface.

6. PRODUCT SPECIFICATIONS

- **Model Name:** Misto Tower Misting Fan
- **Model Number:** YF300
- **Brand:** Lasko
- **Color:** Black
- **Product Dimensions:** 12.64"D x 12.78"W x 41.58"H
- **Item Weight:** 18.5 pounds
- **Power Source:** Electric (120 Volts, 86 watts)
- **Fan Speeds:** 4
- **Special Features:** 10-Foot Cord with In-Line GFCI and 3-Prong Grounded Plug, Internal Oscillation, UV and Weather-Resistant Design
- **Included Components:** Tower Fan, Misting Kit, User Manual
- **Certification:** ETL Certified

7. WARRANTY AND SUPPORT

This Lasko Misto Outdoor Misting Tower Fan comes with a **2-year limited warranty**.

For warranty claims, technical support, or replacement parts, please contact Lasko customer service. Refer to the contact information provided in the original packaging or visit the official Lasko website.

Care Instructions: Please see the user manual for detailed care instructions.