

[manuals.plus](#) /

› [Joso](#) /

› [Joso D3 Wireless Mobile Gaming Controller Instruction Manual](#)

Joso D3

Joso D3 Wireless Mobile Gaming Controller Instruction Manual

Model: D3

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Joso D3 Wireless Mobile Gaming Controller. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your gaming experience.

2. PACKAGE CONTENTS

- 2 x Joso D3 Mobile Game Controllers (1 Black, 1 Gray)
- 2 x USB-C Charging Cables
- 2 x User Manuals

3. SETUP

3.1 Charging the Controller

Before initial use, fully charge the controller using the provided USB-C charging cable. Connect the USB-C end to the controller's charging port and the USB-A end to a compatible power source (e.g., computer USB port, wall adapter). The charging time is approximately 2-3 hours.



Image: This image illustrates the working time, charging time, and battery capacity of the Joso D3 controller. It shows a working time of 15-18 hours, a charging time of 2-3 hours, and a 400mAh battery capacity.

3.2 Attaching Your Mobile Device

The Joso D3 controller features a telescopic holder designed to securely fit mobile phones between 5.0 and 6.9 inches in length. Gently extend the controller's sides and place your smartphone into the holder. Ensure the device is centered and stable. **Note:** This controller is not compatible with iPads or other tablets.

TELESCOPIC HOLDER

Support length 5.0-6.9 inch of mobile phones. Stable and not loose



Image: This image demonstrates the telescopic holder of the Joso D3 controller, supporting mobile phones from 5.0 to 6.9 inches. It also shows the controller's dimensions, with a minimum width of 128mm and an extended width of 175mm.

3.3 Bluetooth Pairing

Follow these steps to pair your Joso D3 controller with your device:

1. Ensure the controller is powered off before initiating the Bluetooth pairing connection.
2. To boot the controller into the desired mode, hold down one of the following buttons, then press the 'Home' button:
 - **B + Home:** For DUALSHOCK 4 Wireless Controller mode (typically for iOS).
 - **X + Home:** For D3 mode (general Android compatibility).
 - **RB + Home:** For Xbox Wireless Controller mode (for Android or PC).
3. On your iPhone, Android device, or PC, navigate to the Bluetooth settings and select the Joso D3 controller from the list of available devices to connect.

UNIVERSAL COMPATIBILITY

The Gamepad Compatible with iPhone, Android Phone, iPad, Tablet, PC



			Call of Duty Mobile Warzone Mobile Diablo Immortal	
B+Home  DUALSHOCK 4 Wireless Controller	X+Home  D3	RB+Home  Xbox Wireless Controller	RB+Home  Xbox Wireless Controller	

- 1) Make sure the controller is off before Bluetooth pairing connection;
- 2) Hold down the 'B, X or RB' button, then press the 'Home' button to boot the controller;
- 3) Connect the Bluetooth on your iPhone, Android or PC

Image: This image displays the universal compatibility of the Joso D3 controller with iPhone, Android, and PC. It also provides visual instructions for Bluetooth pairing using specific button combinations (B+Home, X+Home, RB+Home) for different device types.

4. OPERATING INSTRUCTIONS

4.1 Controller Layout

Familiarize yourself with the buttons and joysticks on your Joso D3 controller:

PRODUCT DETAIL



Bluetooth 5.0
10m wireless connection, connect and play



No Latency
Directed play & No latency



Wake Up
Automatically Connection



Large capacity battery
Working time about 20 hours

Image: This image provides a detailed view of the Joso D3 controller, labeling key components such as the Right joystick (R3), A/B/X/Y keys, START button, Left joystick (L3), HOME button, SELECT button, Indicator light, Arrow keys, and the M1/M2 back buttons.

- **Left Joystick (L3):** For movement and camera control.
- **Right Joystick (R3):** For camera control and aiming.
- **A/B/X/Y Buttons:** Action buttons, functions vary by game.
- **Directional Pad (Arrow Keys):** For precise directional input.
- **L1/L2 (LB/LT) & R1/R2 (RB/RT) Triggers/Bumpers:** Shoulder buttons for various in-game actions.
- **START/SELECT (Menu/View) Buttons:** For pausing, accessing menus, or specific game functions.
- **HOME Button:** To power on/off and for pairing.
- **M1/M2 Buttons:** Customizable back buttons.

4.2 Advanced Gaming Features

The Joso D3 controller is designed to enhance your mobile gaming with several advanced features:

- **Six Fingers Operation:** The ergonomic design and button placement allow for simultaneous aiming, shooting, moving, and switching angles, providing a competitive edge.
- **360° High Precision 3D Rocker:** Experience highly accurate positioning and smooth movement control

in your games.



Six Fingers Operation

Aiming, shooting, moving and switching angles at the same time



360° High Precision 3D Rocker

You can achieve highly accurate position & smoothly movement

Image: This image highlights the