Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > PELONIS /
- > PELONIS PSH10C2ABB 1500W Ceramic Electric Fan Heater User Manual

PELONIS PSH10C2ABB

PELONIS PSH10C2ABB 1500W Ceramic Electric Fan Heater User Manual

Model: PSH10C2ABB (DUDULAILE-311-2643)



Image: Front view of the PELONIS PSH10C2ABB ceramic heater, showcasing its compact black design with a mesh grille.

Safety Instructions

Product Overview

Setup

Operation

Maintenance

Troubleshooting

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this heater. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use this heater outdoors. It is designed for indoor use only.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- · Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been
 dropped or damaged in any manner. Return heater to authorized service facility for examination,
 electrical or mechanical adjustment, or repair.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has an automatic overheat protection system. If the heater overheats, it will automatically shut off. Unplug the heater, wait 10 minutes for it to cool down, then plug it back in.
- This heater is equipped with a tip-over safety switch. If the heater is accidentally tipped over, it will automatically shut off. Place the heater on a firm, level surface to resume operation.

2. PRODUCT OVERVIEW

The PELONIS PSH10C2ABB is a compact and portable 1500W ceramic electric fan heater designed for efficient indoor heating. It features multiple heat settings and a fan-only mode for year-round use.

Key Features:

- 3 Heat Settings: 700W, 900W, and 1500W for customizable warmth.
- Fan-Only Mode: Allows for air circulation without heat, suitable for all seasons.
- Adjustable Thermostat: Maintain your desired room temperature.
- Compact and Portable Design: Easy to move between rooms with a cool-touch handle.
- Ceramic Heating Element: Provides rapid and energy-efficient heating.
- Safety Features: Overheat protection and tip-over switch for enhanced safety.



Image: Top view of the heater's control panel, showing the thermostat dial (Min to Max) and the mode selector dial (Off, Fan, Heat 1, Heat 2, Heat 3) with a power indicator light.

3. SETUP

Package Contents:

- PELONIS PSH10C2ABB Ceramic Electric Fan Heater
- User Manual

Placement:

- 1. Unpack the heater from its packaging and remove all packing materials.
- 2. Place the heater on a firm, level, and stable surface. Ensure it is at least 3 feet (0.9 meters) away from walls, furniture, and other combustible materials.
- 3. Ensure the power cord is not pinched or placed under the heater.
- 4. Plug the heater directly into a 127V AC, 60Hz wall outlet. Do not use extension cords or power strips.



Image: The PELONIS ceramic heater positioned on a shelf, demonstrating proper placement in a living space.

4. OPERATING INSTRUCTIONS

The heater features two control dials on the top panel: one for thermostat control and one for mode selection.

Mode Selection Dial:

This dial controls the power and operating mode of the heater. Rotate the dial to select your desired setting:

- OFF: Turns the heater off.
- FAN (indicated by fan icon): Activates the fan without heat, providing air circulation.
- **HEAT 1 (700W):** Low heat setting.
- HEAT 2 (900W): Medium heat setting.
- HEAT 3 (1500W): High heat setting for maximum warmth.

Thermostat Control Dial:

This dial allows you to set your desired room temperature. It works in conjunction with the heat settings.

- 1. Turn the Mode Selection Dial to one of the HEAT settings (1, 2, or 3).
- 2. Rotate the Thermostat Control Dial clockwise towards "MAX" for higher temperatures, or counter-clockwise towards "MIN" for lower temperatures.
- 3. Once the room reaches your desired temperature, slowly turn the Thermostat Control Dial counterclockwise until the heater turns off. The heater will now cycle on and off to maintain this temperature.

Power Indicator Light: A red light on the control panel illuminates when the heater is powered on and

5. MAINTENANCE

Regular cleaning and proper storage will help ensure the longevity and efficient operation of your heater.

Cleaning:

- 1. Always unplug the heater and allow it to cool completely before cleaning.
- 2. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- 3. Use a vacuum cleaner with a brush attachment to gently remove dust and lint from the air intake and exhaust grilles.
- 4. Never immerse the heater in water or allow water to drip into the interior of the heater.

Storage:

When not in use, store the heater in its original packaging or a clean, dry place. Wrap the power cord loosely to prevent damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	 Not plugged in. Power outlet not working. Overheat protection activated. Tip-over switch activated. Mode dial set to OFF. 	 Ensure the power cord is securely plugged into a 127V AC outlet. Check the circuit breaker or try another outlet. Unplug the heater, wait 10 minutes for it to cool, then plug it back in. Place the heater on a firm, level surface. Rotate the mode dial to a heat setting or FAN.
Heater produces no heat in a heat setting.	Thermostat set too low.Room temperature is higher than the thermostat setting.	Increase the thermostat setting by rotating the dial towards "MAX".Adjust the thermostat to a higher setting.
Heater cycles on and off frequently.	 Thermostat setting is close to room temperature. Air intake/exhaust blocked. 	 This is normal operation as the heater maintains the set temperature. Ensure grilles are clear of obstructions. Clean if necessary.

7. SPECIFICATIONS

• Model: PSH10C2ABB (DUDULAILE-311-2643)

• Brand: PELONIS

• Power Output: 700W / 900W / 1500W

• Voltage: 127 Volts

- Number of Speeds: 3 (Heat settings) + Fan-only
- Dimensions: Approximately 26 x 22 x 13 cm (Package dimensions, actual unit is similar)
- Weight: Approximately 500 g
- **Special Features:** Compact, space-saving, energy-saving, lightweight, portable, overheat protection, tipover switch.
- Color: Black



Image: Diagram showing the approximate dimensions of the PELONIS heater: 23cm height, 10cm depth, 20cm width.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official PELONIS website. Keep your purchase receipt as proof of purchase for any warranty claims. If you experience any issues not covered in the troubleshooting section, please contact PELONIS customer service for assistance.

Online Resources:

• Official PELONIS Website: www.pelonis.com (Note: This is a placeholder URL, please refer to your product documentation for the correct website.)

© 2023 PELONIS. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

Related Documents - PSH10C2ABB

PELONIS

CERAMIC HEATER Model: PHTA1ABB



Pelonis PHTA1ABB Ceramic Heater User Manual and Safety Guide

Comprehensive user manual for the Pelonis PHTA1ABB Ceramic Heater, including safety instructions, operating procedures, specifications, maintenance, and warranty information.



Pelonis 1500W-II Disc Furnace: Operating Manual, Warranty, and Specifications

Comprehensive guide to the Pelonis 1500W-II Disc Furnace, including operating instructions, cleaning, safety, warranty details, and efficiency evaluation from Del-Rain Corporation.



Pelonis PSHF2022EOC Desktop Oscillation Ceramic Heater Owner's Manual

This owner's manual provides essential safety instructions, specifications, operating procedures, cleaning and maintenance guidelines, troubleshooting tips, and warranty information for the Pelonis PSHF2022EOC Desktop Oscillation Ceramic Heater.



Pelonis PHTA1ABB Ceramic Heater Owner's Manual and Safety Instructions

Comprehensive owner's manual for the Pelonis PHTA1ABB ceramic heater. Includes detailed safety warnings, operating instructions, features, maintenance tips, troubleshooting, and specifications.



Pelonis HC-2017 Ceramic Tower Heater Owner's Manual and Safety Guide

Comprehensive owner's manual for the Pelonis HC-2017 Ceramic Tower Heater, including safety instructions, operation guide, troubleshooting tips, cleaning advice, specifications, and warranty information.



Pelonis HC-1010 Ceramic Tower Heater Owner's Manual and Safety Instructions

Official owner's manual for the Pelonis HC-1010 Ceramic Tower Heater, providing detailed safety instructions, features, operation guides, troubleshooting tips, and warranty information.