

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [INSE](#) /

› [INSE N5S Cordless Vacuum Cleaner User Manual](#)

INSE N5S

INSE N5S Cordless Vacuum Cleaner User Manual

Model: N5S

INTRODUCTION

Thank you for choosing the INSE N5S Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your INSE N5S vacuum cleaner.



Image: All components included with the INSE N5S Cordless Vacuum Cleaner, including the main motor, extension wand, floor brush, crevice tool, dusting brush, battery, charger, wall mount, and user manual.

- Main Motor Unit (with dust cup)
- Detachable Battery
- Extension Wand
- Motorized Floor Brush with LED lights

- Crevice Tool
- 2-in-1 Dusting Brush
- Power Adapter/Charger
- Wall Mount Bracket and Screws
- Cleaning Tool
- Extra HEPA Filter

SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand until it clicks. For handheld use, attach accessories directly to the main motor unit.
3. **Install the Battery:** Slide the detachable battery into the main motor unit until it locks into place. Ensure it is fully seated.



Image: The INSE N5S Cordless Vacuum Cleaner fully assembled, ready for use.

CHARGING THE BATTERY

The INSE N5S features a detachable battery for convenient charging. Fully charge the battery before first use.

- **Charging the Battery Separately:** Remove the battery from the main unit by pressing the release button. Connect the power adapter to the battery and plug it into a wall outlet.
- **Charging the Battery While Inserted:** You can also charge the battery while it is installed in the vacuum cleaner. Connect the power adapter directly to the charging port on the main unit and plug it into a wall outlet.

The battery indicator lights will show the charging status. A full charge typically takes approximately 4-5 hours. The vacuum provides up to 45 minutes of runtime on a full charge.

① Un Pulsante Vuoto



② 1.2 L Capacità



③ Pulire il Filtro HEPA



④ Filtro Lavabile



Image: Close-up view of the detachable 2200mAh battery, highlighting its easy removal and up to 45 minutes of runtime.



Image: Two charging methods for the INSE N5S: charging the battery separately or charging the entire unit while mounted on the wall hanger.

OPERATION

To start the vacuum cleaner, press the power button on the main motor unit. Press it again to switch between suction modes (if applicable) or to turn off the appliance.

Using Attachments

- **Motorized Floor Brush:** Ideal for carpets and hard floors. The LED lights illuminate dust and debris for thorough cleaning.
- **Crevice Tool:** Use for narrow gaps, corners, and hard-to-reach areas like car interiors or between sofa cushions.
- **2-in-1 Dusting Brush:** Suitable for cleaning delicate surfaces, upholstery, curtains, and keyboards.

Purifica la Tua Casa e Vivi Comodamente



Image: The INSE N5S vacuum cleaner demonstrating its versatility, including reaching high areas with the extension wand, cleaning car interiors, vacuuming under furniture, and using it as a handheld device for spills.

Caricare la Batteria Separata Autonoma



Caricare la batteria inserita Attaccapanni



Image: A woman using the INSE N5S vacuum cleaner on a carpet, illustrating its effectiveness in removing dust, debris, and pet hair from various surfaces.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup

Empty the dust cup when debris reaches the MAX fill line or after each use.

1. Hold the main unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the flap securely until it clicks.

Cleaning the Filters

The INSE N5S features a 5-stage fully sealed filtration system, including a HEPA filter, mesh filter, and stainless steel

filter. Clean filters regularly to maintain suction power.

5 Fasi Sistema di Filtrazione Completamente Sigillato



Image: A four-panel image illustrating how to empty the 1.2L dust cup with a single button, how to clean the HEPA filter using the provided tool (without water), and how to wash the mesh filter and stainless steel filter under running water.



Image: Diagram showing the 5-stage fully sealed filtration system of the INSE N5S, including High-Density Sponge, Strong Cyclone, HEPA Filter, Mesh Filter, and Stainless Steel Filter.

1. **Remove Filters:** Twist and pull to remove the dust cup from the main unit. Then, remove the internal filters (HEPA, mesh, stainless steel).
2. **Clean HEPA Filter:** Tap the HEPA filter gently to remove dust. Use the provided cleaning tool to brush off stubborn debris. *Do not wash the HEPA filter with water.*
3. **Wash Mesh and Stainless Steel Filters:** Rinse the mesh filter and stainless steel filter under running water until clean.
4. **Dry Filters:** Allow all washed filters to air dry completely for at least 24 hours before reassembling. Ensure they are completely dry to prevent mold or damage.
5. **Reassemble:** Once dry, reassemble the filters in reverse order and attach the dust cup back to the main unit.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. Use the cleaning tool to cut and remove any obstructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Charge the battery. Ensure the battery is securely clicked into place.
Low suction power.	Dust cup is full. Filters are clogged. Brush roll is obstructed.	Empty the dust cup. Clean or replace filters. Remove any hair or debris from the brush roll.
Brush roll stops spinning.	Obstruction in the brush roll.	Turn off the vacuum and remove any tangled hair or debris from the brush roll.
Battery runtime is short.	Battery not fully charged. Using high power mode continuously. Battery life degradation.	Ensure battery is fully charged. Use standard mode for longer runtime. Consider battery replacement if significantly degraded.

SPECIFICATIONS

Feature	Detail
Brand	INSE
Model	N5S
Suction Power	Up to 20kPa
Battery Capacity	2200mAh
Runtime	Up to 45 minutes
Dust Cup Capacity	1.2 Liters
Filtration System	5-stage fully sealed, including HEPA filter
Item Weight	3.31 Kilograms
Package Dimensions	44.29 x 30.3 x 19.4 cm

WARRANTY AND SUPPORT

INSE products are designed and manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please refer to the warranty card included in your product packaging or visit the official INSE website. Please have your model number (N5S) and purchase date ready when contacting support. INSE is committed to providing 100% hassle-free service and support for a better user experience.



