

ISHARE TDC-80X2

ISHARE TDC-80X2 30MP Digital Camera User Manual

Model: TDC-80X2 PLUS

1. INTRODUCTION

Thank you for choosing the ISHARE TDC-80X2 Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly to ensure proper use and to maximize your photography experience.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your camera package:

- ISHARE TDC-80X2 Digital Camera Body
- 2 x Rechargeable Lithium-Ion Batteries
- 32GB SD Card
- USB Cable
- Hand Strap
- User Manual



Box



2*Batteries



32G SD Card



USB Cable



Hand Strip



User Manual

Image: Contents of the ISHARE TDC-80X2 Digital Camera package.

3. CAMERA COMPONENTS

Familiarize yourself with the camera's buttons and ports:

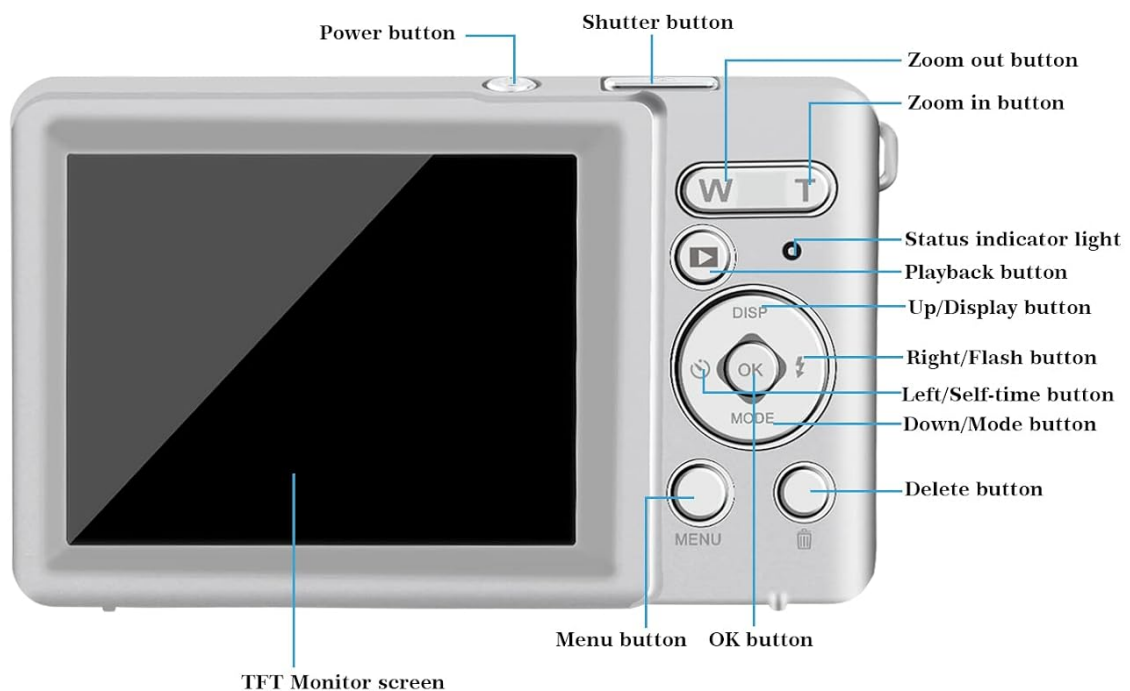


Image: Front and rear view of the camera with labeled components.

- **Power Button:** Turns the camera on or off.
- **Shutter Button:** Press halfway to focus, fully to take a picture.
- **Lens:** Captures images and video.
- **TFT Monitor Screen:** Displays live view, menus, and playback.
- **Zoom Out/In Buttons (W/T):** Adjusts digital zoom.
- **Playback Button:** Enters playback mode to view photos and videos.
- **Up/Display Button:** Navigates menus, changes display information.
- **Right/Flash Button:** Navigates menus, controls flash modes.
- **Left/Self-time Button:** Navigates menus, sets self-timer.
- **Down/Mode Button:** Navigates menus, changes shooting modes.
- **Menu Button:** Accesses camera settings.
- **OK Button:** Confirms selections in menus.
- **Delete Button:** Deletes selected files in playback mode.
- **Large Capacity Battery Compartment:** Houses the rechargeable battery.
- **SD Card Direction Slot:** For inserting the memory card.

- **Hand Strap Attachment Point:** For securing the hand strap.

4. SETUP

4.1. Inserting the SD Card

1. Open the battery/SD card compartment cover on the side of the camera.
2. Insert the 32GB SD card into the slot with the metal contacts facing the front of the camera, as indicated by the diagram. Push until it clicks into place.
3. Close the compartment cover securely.

4.2. Installing the Battery

1. Open the battery/SD card compartment cover.
2. Insert a fully charged battery into the battery slot, ensuring the correct orientation as indicated by the markings inside the compartment. Push until it clicks into place.
3. Close the compartment cover securely.

Your browser does not support the video tag.

Video: Demonstrates unboxing, SD card insertion, and battery installation for the ISHARE Digital Camera.

4.3. Charging the Battery

Connect the camera to a power source using the provided USB cable. The camera can be charged via a computer USB port or a USB wall adapter (not included). The charging indicator light will show the charging status.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the **Power Button** located on the top of the camera to turn it on or off.

5.2. Taking Photos

1. Turn on the camera. The live view will appear on the TFT monitor screen.
2. Frame your shot using the screen.
3. Press the **Shutter Button** halfway down to focus. The focus indicator will confirm when focus is achieved.
4. Press the **Shutter Button** fully down to capture the image.

5.3. Recording Videos

1. Turn on the camera.
2. Press the **Down/Mode Button** to switch to video recording mode. A video icon will appear on the screen.
3. Press the **Shutter Button** to start recording. A red recording indicator will appear.
4. Press the **Shutter Button** again to stop recording.

5.4. Digital Zoom

Use the **W (Wide)** and **T (Telephoto)** buttons to adjust the 18X digital zoom. Press 'T' to zoom in and 'W' to zoom out.

5.5. Shooting Modes

Press the **Down/Mode Button** to cycle through available shooting modes, including Automatic, Landscape, and Portrait. Select the mode best suited for your scene.

5.6. Self-Timer

To activate the self-timer, press the **Left/Self-time Button**. Options typically include 2-second, 5-second, and 10-second delays. Select your desired delay before pressing the shutter button.



Image: Using the self-timer function for group photos.

5.7. Flash Modes

Press the **Right/Flash Button** to cycle through flash modes: Auto, On, and Off. Choose 'Auto' for the camera to decide, 'On' for forced flash, or 'Off' to disable the flash.

5.8. Playback

Press the **Playback Button** to review your captured photos and videos. Use the directional buttons to navigate through files. Press the **Delete Button** to remove unwanted files.

5.9. Webcam Function

The camera can be used as a webcam. Connect the camera to your computer using the USB cable. Select the webcam option on the camera's screen or through your computer's settings when prompted.

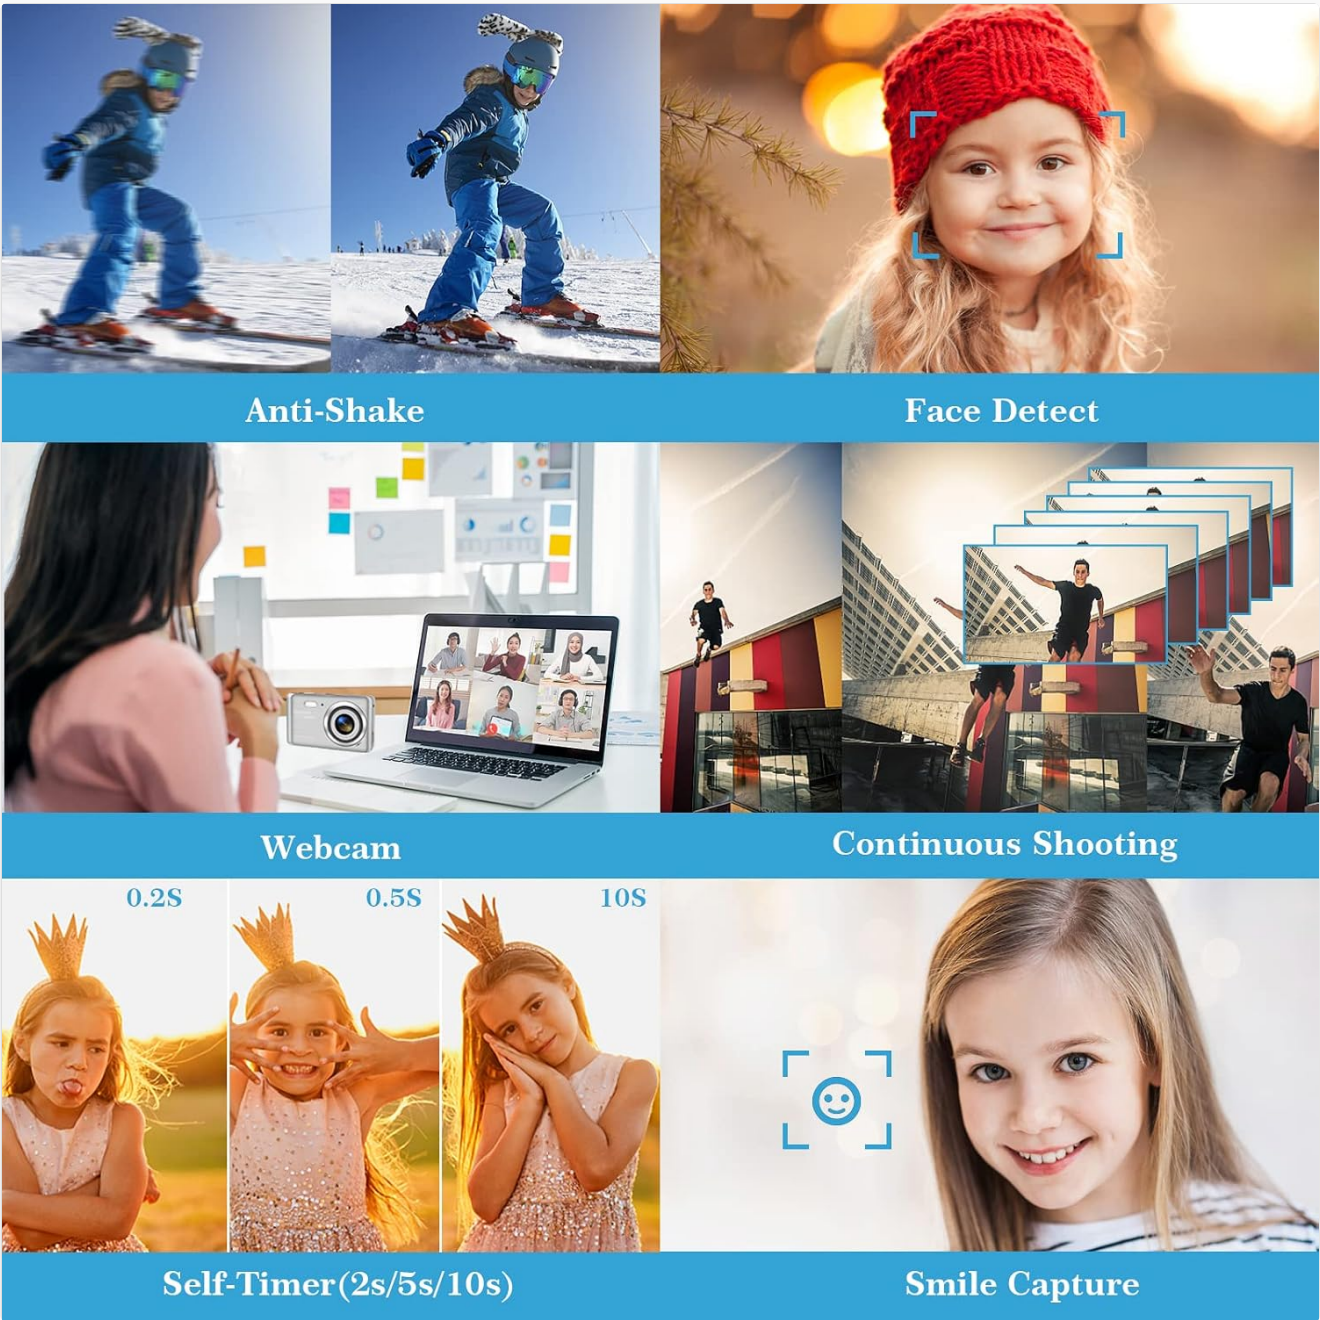


Image: Overview of camera features including Webcam functionality.

5.10. Connecting to a Computer

To transfer photos and videos, connect the camera to your computer using the USB cable. The camera will appear as a removable disk drive, allowing you to copy files directly.



Record every happy moment of yours

Image: Connecting the camera to a computer for file transfer.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.
- **Battery Care:** Fully charge batteries before first use. Do not expose batteries to high temperatures or attempt to disassemble them.

7. TROUBLESHOOTING

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted. Try using the second provided battery.
- **Cannot take photos/record videos:** Check if the SD card is inserted correctly and has sufficient free space. The camera may also not function if the battery is critically low.

- **Poor image quality (grainy/pixelated):** Ensure adequate lighting. Check the camera's settings for ISO and exposure. In low light, image quality may be reduced.
- **Camera freezes:** Remove and reinsert the battery to reset the camera. If the issue persists, contact customer support.
- **Computer does not recognize camera:** Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable.

8. SPECIFICATIONS

Feature	Specification
Model Name	TDC-80X2 PLUS
Photo Sensor Resolution	30 MP
Sensor Type	CMOS
Digital Zoom	18x
Video Resolution	1080p
Screen Size	2.8 Inches (LCD)
Image Stabilization	Digital
Supported File Format	JPEG (Image), AVI (Video)
Memory Storage Capacity	32 GB (SD/SDHC Support)
Connectivity Technology	USB
Power Source	Rechargeable Lithium-Ion Battery
Special Features	Lightweight, Anti-Shake, Face Detect, Webcam Function, Continuous Shooting, Self-Timer, Smile Capture

9. WARRANTY AND SUPPORT

This product comes with a 1-year warranty from the date of purchase. For warranty claims, technical support, or service inquiries, please contact ISHARE customer service through the retailer where the product was purchased or refer to the contact information provided on the product packaging.



