

Ufesa Persei

Ufesa Persei 2000W Compact Electric Heater User Manual

Model: Persei (83105502)

1. INTRODUCTION

Thank you for choosing the Ufesa Persei 2000W Compact Electric Heater. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance.

Please read these instructions carefully before use and retain them for future reference.

The Ufesa Persei heater is designed to provide rapid and consistent warmth with energy efficiency. It features three operating modes, an adjustable thermostat, and IPX1 water protection, making it suitable for various indoor environments, including bathrooms.



Image 1.1: Front view of the Ufesa Persei 2000W Compact Electric Heater.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is for indoor use only.

- Read all instructions before using the heater.
- Ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not cover the heater. Overheating can occur.

- Keep flammable materials (curtains, furniture, etc.) at least 1 meter away from the heater.
- Do not use the heater in areas where gasoline, paint, or other flammable liquids are stored.
- **IPX1 Protection:** This heater is designed with IPX1 protection, making it suitable for use in bathrooms. However, ensure it is not directly exposed to splashing water and is placed at a safe distance from water sources.
- Do not operate the heater with a damaged cord or plug.
- Unplug the heater when not in use or before cleaning.
- Do not insert objects into the air vents.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Overheat Protection:** The heater is equipped with an automatic overheat protection system that will shut off the unit if it becomes too hot. If this occurs, unplug the heater, allow it to cool down for 10-15 minutes, and then plug it back in. If the problem persists, contact customer support.



Image 2.1: Detail of the Ufesa Persei heater, highlighting the IPX1 Water Protection Design.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Ufesa Persei heater:

1. **Power/Mode Selector Knob:** Used to turn the unit on/off and select operating modes (Fan, Low Heat, High Heat).
2. **Thermostat Control Knob:** Used to adjust the desired temperature.
3. **Air Outlet Grille:** Where heated or cool air is expelled.
4. **Air Inlet Grille:** Where air is drawn into the unit.
5. **Power Indicator Light:** Illuminates when the heater is operating.
6. **Carry Handle:** For easy portability.



Image 3.1: Close-up view of the control knobs on the Ufesa Persei heater.

4. SETUP

Follow these steps to set up your heater:

- **Unpacking:** Carefully remove the heater from its packaging. Retain the packaging for storage or future transport.
- **Placement:** Place the heater on a firm, level surface. Ensure there is adequate space around the

heater (at least 1 meter from walls, furniture, and curtains) to allow for proper airflow and prevent fire hazards.

- **Bathroom Use:** When used in a bathroom, ensure the heater is positioned where it cannot fall into water and is not directly exposed to splashes. The IPX1 rating provides protection against vertically falling water drops.
- **Power Connection:** Plug the power cord into a suitable electrical outlet (230V AC). Ensure the outlet is grounded and rated for the heater's power consumption (2000W).



Image 4.1: Ufesa Persei heater positioned on a counter in a bathroom setting.

5. OPERATING INSTRUCTIONS

Your Ufesa Persei heater offers three operating modes and an adjustable thermostat.

1. **Power On:** Ensure the heater is plugged in. Turn the **Power/Mode Selector Knob** clockwise from the "O" (Off) position.
2. **Select Mode:**
 - **Fan Only (Ventilation):** Turn the Power/Mode Selector Knob to the fan symbol (🌀). This mode circulates cool air without heating.

- **Low Heat (I):** Turn the Power/Mode Selector Knob to "I". The heater will operate at 1000W.
 - **High Heat (II):** Turn the Power/Mode Selector Knob to "II". The heater will operate at 2000W.
3. **Adjust Thermostat:** Turn the **Thermostat Control Knob** clockwise to increase the desired temperature or counter-clockwise to decrease it. The heater will cycle on and off to maintain the set temperature. For continuous heating, turn the thermostat knob to its maximum setting.
 4. **Power Off:** To turn off the heater, turn the **Power/Mode Selector Knob** counter-clockwise back to the "O" (Off) position. Unplug the unit from the wall socket when not in use.



Image 5.1: The Ufesa Persei heater providing warmth in a bathroom environment.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the heater's efficiency and extends its lifespan.

- **Before Cleaning:** Always unplug the heater from the power outlet and allow it to cool down completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic parts.
- **Air Inlets/Outlets:** Use a vacuum cleaner with a brush attachment to gently remove dust and debris

from the air inlet and outlet grilles. Ensure these areas are clear to prevent overheating.

- **Do Not Immerse:** Never immerse the heater in water or any other liquid.
- **Storage:** If storing the heater for an extended period, clean it thoroughly and store it in its original packaging in a dry, cool place.

7. TROUBLESHOOTING

If you encounter issues with your Ufesa Persei heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in, power outlet fault, power switch off, overheat protection activated.	Check power cord connection. Try a different outlet. Ensure Power/Mode Selector Knob is set to a mode (Fan, I, or II). If overheat protection activated, unplug and let cool for 10-15 minutes.
Heater produces cold air only.	Set to Fan Only mode, thermostat set too low.	Ensure Power/Mode Selector Knob is set to "I" or "II" for heat. Increase the Thermostat Control Knob setting.
Heater turns off unexpectedly.	Overheat protection activated, tip-over switch activated (if applicable).	Unplug and let cool for 10-15 minutes. Ensure heater is on a stable, level surface. Check for obstructions around air inlets/outlets.
Insufficient heating.	Low heat setting, thermostat set too low, room too large, air vents obstructed.	Select High Heat (II) mode. Increase thermostat setting. Ensure heater is appropriate for room size. Clear any obstructions from air vents.

If the problem persists after trying these solutions, please contact Ufesa customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Ufesa
Model	Persei (83105502)
Power	2000W
Voltage	230V AC
Operating Modes	3 (Fan, Low Heat 1000W, High Heat 2000W)
Special Features	Adjustable Thermostat, IPX1 Water Protection, Overheat Protection, Automatic Shut-off
Weight	1.2 kg
Dimensions (W x D x H)	20.7 cm x 14.6 cm x 25.5 cm

Feature	Detail
Color	Blue
Indoor/Outdoor Use	Indoor



Image 8.1: Dimensions of the Ufesa Persei heater.

9. WARRANTY AND SUPPORT

Ufesa products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Ufesa website. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service, please contact your retailer or the authorized Ufesa service center in your region. You can find contact information on the Ufesa website or in the documentation provided with your product.

Online Resources: For additional information and support, visit the official [Ufesa Store on Amazon](#).

