

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [IRIS OHYAMA](#) /

› [IRIS OHYAMA 2-Way Cordless Stick Cleaner SCD-160P-C Instruction Manual](#)

IRIS OHYAMA SCD-160P-C

IRIS OHYAMA 2-Way Cordless Stick Cleaner SCD-160P-C Instruction Manual

[Contents](#) [Introduction](#) [Safety Information](#) [Package](#)
[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the IRIS OHYAMA 2-Way Cordless Stick Cleaner SCD-160P-C. This manual provides important information for the safe and efficient use of your new appliance. Please read it thoroughly before use and keep it for future reference.

This versatile cleaner is designed for comprehensive home cleaning, functioning as both a stick vacuum for floors and a handheld vacuum for detailed cleaning. Its stylish, lightweight, and slim design ensures ease of use and blends seamlessly into any living space. The cordless operation provides maximum flexibility, allowing you to clean anywhere without being restricted by power outlets.



Image: The IRIS OHYAMA 2-Way Cordless Stick Cleaner, highlighting its dual functionality and available colors.

2. SAFETY INFORMATION

To ensure safe operation, always follow these basic precautions:

- Read all instructions before using the appliance.
- Keep the appliance away from water or other liquids.
- Do not use the appliance to pick up flammable or combustible liquids, or hot ashes.
- Do not operate the appliance with a damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Unplug from outlet when not in use and before cleaning or servicing.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- Main Cleaner Unit (Stick/Handheld)
- Charging Adapter
- Charging Stand
- Handle Fixing Screw (1 pc)
- Crevice Nozzle
- Brush Nozzle

4. SETUP

4.1 Assembly


1. Attach the main cleaner unit to the extension pipe.
2. Connect the floor head to the bottom of the extension pipe.
3. Secure the handle to the top of the main unit using the provided handle fixing screw.
4. Place the assembled cleaner onto the charging stand.

4.2 Initial Charging

Before first use, fully charge the battery. Connect the charging adapter to the charging stand and plug it into a power outlet. The charging indicator lights will show the charging status. A full charge takes approximately 4 hours.

置くだけ充電スタンド

飾るように置くだけ、スマート充電

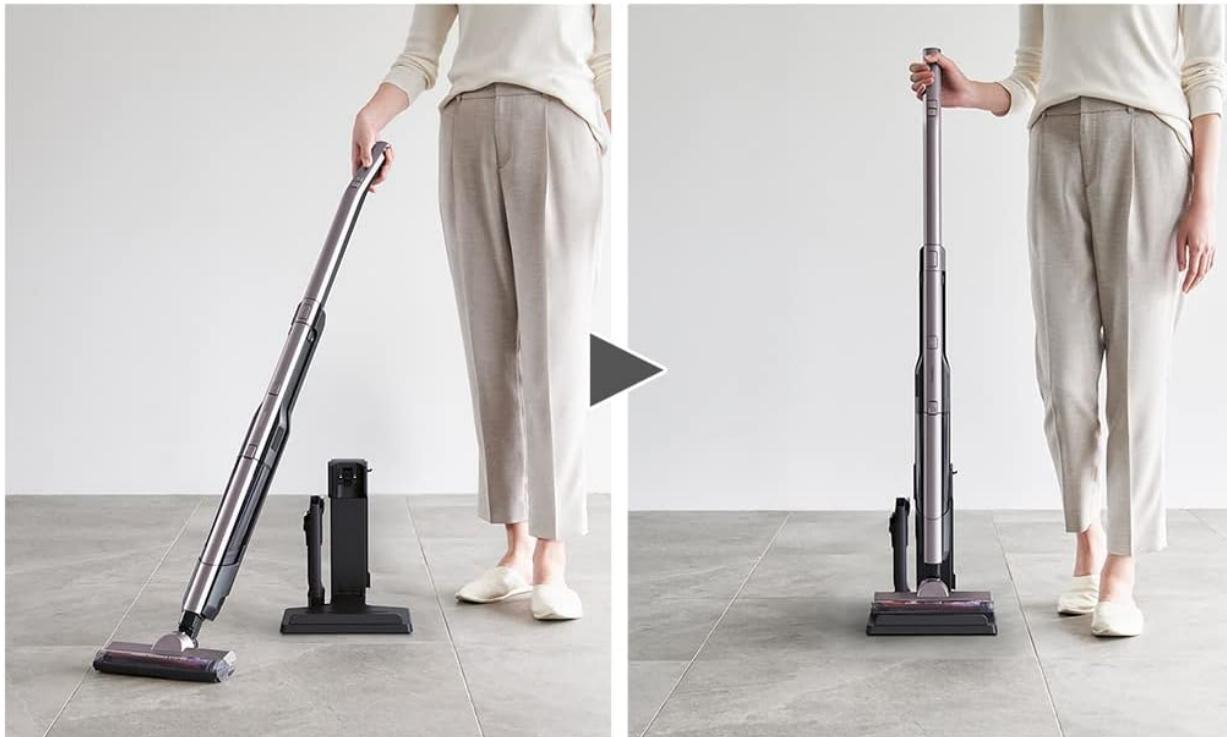

未使用時もスマートに飾る充電スタンド。

使い終わったら、置くだけ。

Image: Cleaner on charging stand.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button located on the handle to turn the cleaner on or off.

5.2 Switching Between Stick and Handheld Modes

This cleaner offers 2-way functionality. To switch from stick to handheld mode, press the release button on the main unit and detach the handheld portion. To reattach, align the handheld unit with the extension pipe and click it into place.

切り替えスムーズ



ワンタッチで、ハンディを簡単取り出し。



Image: Smooth one-touch switching between modes.

5.3 Using the Self-Propelled Power Head

The self-propelled lightweight power head assists in moving the cleaner forward with minimal effort. It is effective on various floor types including flooring, carpets, and tatami mats. The head is designed to capture fine particles efficiently.

細かい粒子まで吸引

自走式軽量パワーへッドで、
潜んだゴミも”逃がさず”吸い込む



真空度を極限まで高めたヘッドが、
微細な粒子まで吸引し、逃がさない。

Image: Self-propelled power head for efficient suction of fine particles.

5.4 Using Attachments

Attach the crevice nozzle for narrow spaces like between sofa cushions or car seats. Use the brush nozzle for delicate surfaces or to dislodge stubborn dirt.

抜群の操作性

ソファやベッド下など、狭い部分にも侵入。
掃除がしにくい場所も徹底的にキレイにします。



Image: Excellent maneuverability for cleaning under furniture.

6. MAINTENANCE

6.1 Emptying the Dust Cup

The dust cup has a capacity of 0.2L. To maintain optimal suction, empty the dust cup regularly, especially when it reaches the MAX fill line. Detach the dust cup from the main unit and dispose of the collected debris.

POINT
07

排気にまでこだわる

0.3μm以上の粒子を

99.5%以上捕集*

*当社試験粉じん(JIS試験用粉体1の4種(タルク))による排気性能試験にて排気中の0.3μm以上の粉じん量(平均値)を測定。当社試験ごみによるものであり、環境や使い方によって異なります。

準HEPAフィルター
搭載



Image: Detaching and emptying the large capacity dust cup.

6.2 Cleaning the Dust Cup and Filter

The dust cup and filter are washable. After emptying, rinse them under running water. Ensure they are completely dry before reassembling them into the cleaner. Do not use harsh detergents or abrasive materials.

POINT
08

着脱式バッテリー

高性能バッテリーで最長20分稼働*

*スティック使用時、標準モードの場合



フタをスライドするだけ
かんたん取り外し!*

*バッテリーの取り外しは、ハンディの状態で行います。



別売バッテリーを使用することで
最長40分の連続稼働も可能!

*スティック使用時、標準モードの場合

Image: Washing the dust cup under running water.

6.3 Battery Care

The lithium-ion battery has a life of approximately 1000 charge cycles. To prolong battery life, avoid fully discharging it frequently. Store the cleaner in a cool, dry place when not in use for extended periods.

POINT

06 自走式「軽量」パワー ヘッド

自走式軽量パワー ヘッドで、
潜んだゴミも”逃がさず”吸い込む



Image: Detachable battery for easy removal and extended use with a spare battery.

7. TROUBLESHOOTING

If you encounter any issues with your cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cleaner does not turn on	Battery is not charged or not properly inserted.	Ensure the battery is fully charged and correctly inserted.
Reduced suction power	Dust cup is full, filter is clogged, or nozzle is blocked.	Empty the dust cup, clean the filter, and check for blockages in the nozzle or pipe.
Cleaner stops during operation	Battery is low or overheating.	Charge the battery. If overheating, turn off the cleaner and allow it to cool down before resuming use.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	SCD-160P-C
Dust Collection Capacity	0.2 L
Continuous Operating Time (Stick Mode)	Standard: Approx. 20 min / Turbo: Approx. 12 min
Continuous Operating Time (Handheld Mode)	Standard: Approx. 23 min / Turbo: Approx. 13 min
Battery Type	Lithium-ion Secondary Battery

Feature	Specification
Battery Capacity	1900 mAh
Battery Life	Approx. 1000 charge cycles
Rated Voltage	DC 10.8 V
Charging Power Supply Input	AC100-240V, 50/60Hz
Charging Power Supply Output	DC 13.7V, 0.5A
Charging Time	Approx. 4 hours (may vary based on room temperature and usage)
Product Size (Stick Mode)	Approx. W22.4 × D16.7 × H104.5 cm
Product Size (Handheld Mode)	Approx. W6.3 × D6.8 × H48.1 cm
Product Size (with Charging Stand)	Approx. W23.4 × D21.0 × H107.0 cm
Product Weight (Stick Mode)	Approx. 1.6 kg
Product Weight (Handheld Mode, incl. battery)	Approx. 0.7 kg
Charging Stand Weight	Approx. 0.5 kg
Filter Type	Cartridge
Recommended Use	Hard Floor
Features	Lightweight

Image: Dimensions of the cleaner in stick and handheld modes.



9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your package for details on coverage and duration. For technical support, spare parts, or service inquiries, please contact IRIS OHYAMA customer service. Contact information can typically be found on the product packaging or the official IRIS OHYAMA website.

© 2024 IRIS OHYAMA. All rights reserved.