

[Manuals.plus](#) /

> [YOWHICK](#) /

> YOWHICK Projector Tripod Stand LT01 User Manual

YOWHICK LT01

YOWHICK Projector Tripod Stand LT01 User Manual

Model: LT01

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your YOWHICK Projector Tripod Stand, model LT01. Please read this manual thoroughly before use to ensure proper setup and safe operation.

2. SAFETY INFORMATION

- Ensure the stand is placed on a stable, level surface to prevent tipping.
- Do not exceed the maximum load capacity of 11 lbs (5 kg).
- Always secure your device to the tray using the provided foam gaskets and elastic bands.
- Keep hands clear of moving parts during height adjustment.
- Do not allow children to play with the stand.
- Inspect the stand for any damage before each use. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Tripod Base
- Adjustable Center Pole
- Device Tray (Foldable)
- Anti-Slip Mat
- Fixing Band
- Carrying Bag

Sturdy Construction for Multiple Protection



Anti-Slip Mat



Fixing Band



Foldable
Aluminum Tripod



Storage Bag

Image: Key components of the YOWHICK Projector Tripod Stand.

4. PRODUCT OVERVIEW

The YOWHICK Projector Tripod Stand LT01 is a versatile and portable stand designed for projectors, laptops, and other audio/visual equipment. It features an adjustable height mechanism, a foldable tray, and a sturdy tripod base for stability.

Adjustable Height 2~5.1ft



Image: The stand demonstrating its adjustable height from 2 feet to 5.1 feet.

5. SETUP INSTRUCTIONS

1. **Unfold the Tripod Base:** Gently spread the legs of the tripod base until they are fully extended and stable.
2. **Attach the Center Pole:** Insert the adjustable center pole into the top of the tripod base. Secure it by tightening the knob on the tripod base.
3. **Attach the Device Tray:** Place the foldable device tray onto the top of the center pole. Ensure it is seated correctly and tighten the securing knob.
4. **Unfold the Tray:** If the tray is folded, unfold it to its full width (up to 9.4 inches).
5. **Apply Anti-Slip Mat:** Place the anti-slip mat onto the tray surface to provide additional grip for your device.
6. **Secure Device:** Position your projector or laptop on the tray. Use the elastic fixing band to secure the device firmly to prevent accidental falls.

6. OPERATING INSTRUCTIONS

6.1. Adjusting Height

The stand's height can be adjusted from 23 inches to 61 inches (approximately 2 to 5.1 feet).

1. Loosen the height adjustment knob on the center pole.
2. Carefully raise or lower the pole to the desired height.
3. Tighten the height adjustment knob firmly to secure the pole in place.

6.2. Folding and Storage

For portability and storage, the stand can be easily folded.

1. Remove any device from the tray.
2. Loosen the tray knob and remove the tray. Fold the tray if necessary.
3. Loosen the center pole knob and fully retract the pole, then remove it from the tripod base.
4. Fold the tripod legs inward.
5. Place all components into the provided carrying bag for transport or storage.

Compact and convenient to carry



Image: The stand in its compact, folded state, ready for transport in the carrying bag.

7. MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Inspection:** Regularly check all knobs, screws, and joints for tightness. Tighten if necessary.
- **Storage:** Store the stand in its carrying bag in a dry, cool place when not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is unstable.	Legs not fully extended or placed on uneven surface.	Ensure legs are fully spread and stand is on a level surface.
Device slides on tray.	Anti-slip mat not used or device not secured.	Place anti-slip mat on tray and use the elastic fixing band to secure the device.
Height adjustment knob slips.	Knob not tightened sufficiently.	Tighten the knob firmly after adjusting height.

9. SPECIFICATIONS

Model Number:	LT01
Material:	Metal
Finish Type:	Powder Coated
Adjustable Height:	23 inches to 61 inches (approx. 2 to 5.1 feet)
Load Capacity:	11 lbs (5 kg)
Folded Dimensions:	Approx. 22.5 x 5.5 x 5.3 inches (stand), Tray: 13.4 inches (length), 4.7 inches (folded width)
Item Weight:	3.94 pounds (1.79 kg)
UPC:	762765013588

10. WARRANTY AND SUPPORT

This YOWHICK product comes with a **1-year warranty** from the date of purchase. For technical support or warranty claims, please contact YOWHICK customer service. Please retain your proof of purchase for warranty validation. For further assistance, please visit the official YOWHICK website or contact their customer support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BLZ4V87K>

More documents and user manuals: **<https://manuals.plus/>**