



[Manuals.plus](#) /

› [KODAK](#) /

› KODAK PIXPRO AZ255-BK Digital Camera User Manual

KODAK AZ255-BK

KODAK PIXPRO AZ255-BK Digital Camera User Manual

Model: AZ255-BK | Brand: KODAK

INTRODUCTION

This user manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your KODAK PIXPRO AZ255-BK Digital Camera. Designed for both novice and experienced photographers, this camera offers a blend of powerful features and user-friendly design to capture high-quality photos and videos.

The KODAK PIXPRO AZ255-BK is a versatile bridge camera featuring a 16MP sensor, 25X optical zoom, 24mm wide-angle lens, optical image stabilization, and 1080P Full HD video recording capabilities. Its 3-inch LCD screen makes framing and reviewing shots convenient.

WHAT'S IN THE BOX

Upon opening your KODAK PIXPRO AZ255-BK package, please verify that all the following items are included:

- KODAK PIXPRO AZ255 Digital Camera
- AA Alkaline Batteries (x4)
- USB Cable
- Neck Strap
- Lens Cap with Cord
- Quick Start Guide
- Warranty Card
- Service Card



Image: All components included in the KODAK PIXPRO AZ255-BK retail package.

Video: Official unboxing of the KODAK PIXPRO AZ255, showing all included accessories and the camera itself.

SETUP

1. Inserting Batteries and SD Card

The KODAK PIXPRO AZ255-BK uses four AA alkaline batteries. An SD card (not included) is required for storing photos and videos.

1. Locate the battery and SD card compartment door on the bottom of the camera.
2. Slide the latch to open the compartment door.
3. Insert four AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Insert a compatible SD card into the SD card slot until it clicks into place. Ensure the card is inserted in the correct orientation.
5. Close the compartment door firmly until it latches securely.



Image: Front view of the KODAK PIXPRO AZ255-BK camera, showing the lens and brand logo.

2. Attaching the Neck Strap and Lens Cap

- Thread the neck strap through the strap eyelets on the camera body and secure it.
- Attach the lens cap cord to the camera to prevent loss. Place the lens cap over the lens when the camera is not in use to protect it from dust and scratches.

OPERATING YOUR CAMERA

Powering On/Off

Press the Power button located on the top of the camera to turn it on or off. The lens will extend when powered on.


Basic Photography Modes

The mode dial on the top of the camera allows you to select various shooting modes:

- **Auto Mode (A):** The camera automatically adjusts settings for optimal results in most situations.
- **Program Mode (P):** Provides more control over settings while the camera maintains optimal exposure.
- **Shutter Priority (S):** You set the shutter speed, and the camera selects the appropriate aperture.
- **Aperture Priority (A):** You set the aperture, and the camera selects the appropriate shutter speed.
- **Manual Mode (M):** Full control over both shutter speed and aperture for advanced users.
- **Scene Modes (SCN):** Pre-set modes for specific shooting conditions (e.g., Portrait, Landscape, Sports).
- **Panorama Mode:** Capture wide panoramic shots by stitching multiple images together.
- **Movie Mode:** For recording Full HD videos.

Zoom Functionality

Utilize the zoom lever around the shutter button to control the 25X optical zoom. This allows you to get closer to distant subjects without compromising image quality.

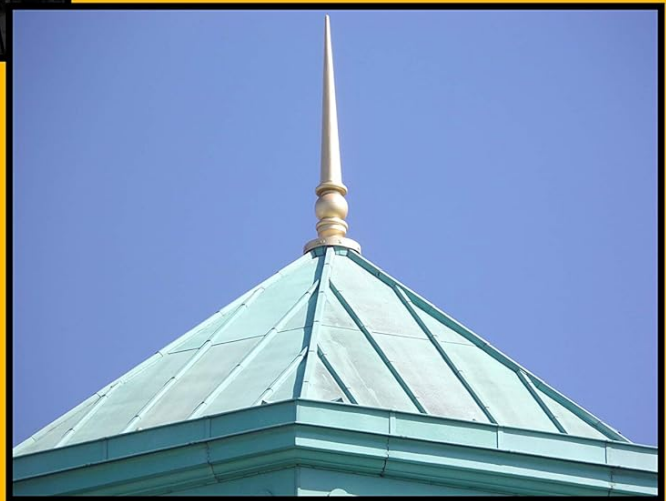

25X OPTICAL ZOOM

Image: The camera's 25X optical zoom brings distant subjects into clear view.

Optical Image Stabilization (OIS)

The built-in Optical Image Stabilization (OIS) helps reduce blur caused by camera shake, especially when shooting at longer zoom settings or in low light conditions. This ensures sharper and clearer images.



Image: Optical Image Stabilization helps keep your shots steady and clear.

Video Recording

Switch to Movie Mode to record 1080P Full HD videos. Press the dedicated video record button to start and stop recording. The camera's 24mm wide-angle lens is ideal for capturing broader scenes in your videos.



A black and white advertisement for the Kodak Pixpro AZ255 camera. The main image shows the camera from a front-three-quarter view, highlighting the lens and the 'KODAK' logo on the top. The lens is labeled 'PIXPRO Aspheric HD Zoom Lens' and '25X WIDE 24-600mm (Equivalent) 1:3.7-6.2'. To the right of the camera are two circular icons: the top one shows a camera icon with '16 MP' below it, and the bottom one shows a video camera icon with 'FULL HD' below it. At the bottom of the advertisement, the text 'KODAK PIXPRO AZ255' is displayed in a large, bold font, with 'KODAK' in red and 'PIXPRO AZ255' in white.

KODAK PIXPRO AZ255

Image: The KODAK PIXPRO AZ255 offers 16 Megapixel photos and Full HD video recording.



Image: The 24mm wide-angle lens captures more of the scene.

LCD Screen

The 3-inch LCD screen on the back of the camera serves as your viewfinder and playback display. Use it to compose your shots, navigate menus, and review your captured content.



LCD SCREEN 3"

Image: The 3-inch LCD screen for framing and reviewing your photos and videos.

MAINTENANCE

- **Lens Care:** Use a soft, lint-free cloth specifically designed for camera lenses to clean the lens. Avoid touching the lens surface with your fingers.
- **Body Cleaning:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use strong cleaning agents or solvents.
- **Storage:** When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods to prevent leakage.
- **Battery Life:** Battery performance can vary based on usage and environmental conditions. Always carry spare AA batteries for extended shooting sessions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace with fresh AA batteries, ensuring correct polarity.
Images are blurry.	Camera shake, low light, or subject movement.	Ensure Optical Image Stabilization (OIS) is active. Use a tripod if necessary. Increase shutter speed or use flash in low light.
Cannot take pictures.	SD card full or not inserted.	Insert a compatible SD card or delete unnecessary files to free up space.
Flash does not fire.	Flash mode set to "Off" or "Red-Eye Reduction" in bright conditions.	Adjust flash settings to "Auto" or "Fill-in Flash" as needed.

SPECIFICATIONS

Feature	Detail
Brand	KODAK
Model Name	AZ255
Model Number	AZ255-BK
Photo Sensor Resolution	16 MP
Optical Zoom	25 x
Minimum Focal Length	4.3 Millimeters
Maximum Focal Length	107.5 Millimeters
Image Stabilization	Optical
Video Resolution	1080p
Screen Size	3 Inches
Display Type	LCD
Battery Type	Alkaline (AA)
Supported File Format	JPEG, MOV
Connectivity Technology	USB
Special Feature	360° Panorama Mode
Item Weight	1 Pounds

WARRANTY AND SUPPORT

Your KODAK PIXPRO AZ255-BK Digital Camera comes with a 1-year manufacturer's warranty covering defects in materials and workmanship. Please refer to the included Warranty Card for full terms and conditions.

For additional support, user guides, and troubleshooting resources, please refer to the official documentation:

- [User Guide \(PDF\)](#)

- [User Manual \(PDF\)](#)

Protection plans are also available for extended coverage:

- 3-Year Protection Plan
- 2-Year Protection Plan
- Complete Protect (monthly billing)