



Manuals.plus /

- › USHA /
- › USHA Cookjoy Radiant Induction Cooktop CJ1600WWP User Manual

## USHA CJ1600WWP

# USHA Cookjoy Radiant Induction Cooktop CJ1600WWP User Manual

Model: CJ1600WWP | Brand: USHA

## INTRODUCTION

---

Thank you for choosing the USHA Cookjoy Radiant Induction Cooktop CJ1600WWP. This appliance is designed to provide efficient and versatile cooking with its 1600 Watts power, smart features, and preset Indian menus. Please read this manual carefully before using the cooktop to ensure safe and optimal operation. Keep this manual for future reference.



Image: The USHA Cookjoy Radiant Induction Cooktop CJ1600WWP, showcasing its sleek design with a pressure cooker and prepared dishes.

## IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure proper ventilation around the cooktop during operation.
- Only use induction-compatible cookware.

**USHA®**

**INDUCTION  
COOKTOP**

C J 1 6 0 0 W W P

## ADVANCED SAFETY FEATURES



Auto switch to  
power saving mode  
to prevent overheating



Flexible Cord with 3 Pin  
Plug for convenience



Safety Varistor for  
protection against  
voltage fluctuation  
upto 2500 V



Anti skid feet

Image: Advanced safety features of the cooktop, highlighting auto power saving, voltage fluctuation protection, flexible cord, and anti-skid feet.

## WHAT'S IN THE BOX

Upon unpacking, please ensure all items are present and in good condition:

- 1 N USHA Cookjoy Radiant Induction Cooktop Main Unit
- 1 N Instruction Manual

## SETUP

---

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooktop on a flat, stable, heat-resistant surface. Ensure there is adequate space around the unit for ventilation (at least 10-15 cm from walls or other appliances). Do not place it on a metal surface.
3. **Power Connection:** Plug the cooktop's power cord into a suitable electrical outlet. Ensure the voltage matches the appliance's requirements (refer to specifications).
4. **Initial Cleaning:** Before first use, wipe the ceramic glass surface with a soft, damp cloth.

Your browser does not support the video tag.

Video: A demonstration of unboxing and initial setup of the USHA Cookjoy Radiant Induction Cooktop, showing how to place it on a counter and connect power.

## OPERATING INSTRUCTIONS

---

### Basic Operation

1. **Power On:** Place an induction-compatible pan centrally on the cooktop. Press the **ON/OFF** button to turn on the appliance.
2. **Select Function:** Choose a cooking function from the preset Indian menus or select the "Manual" option for custom settings.
3. **Adjust Settings:** Use the **+** and **-** buttons to adjust temperature or power levels when in manual mode.
4. **Timer Function:** The cooktop features a 30-minute to 24-hour timer. Press the timer button and use **+** and **-** to set the desired cooking duration.
5. **Power Off:** After cooking, press the **ON/OFF** button to turn off the cooktop. The fan may continue to run for a short period to cool the unit.

### Preset Indian Menus

The Cookjoy CJ1600WWP offers 6 preset Indian menu options for convenient cooking:

- Dosa/Roti/Deep Fry
- Idli
- Curry
- Pressure Cook (Smart Pressure Cook mode)
- Milk/Tea
- Heat Milk

Simply select the desired menu, and the cooktop will automatically adjust the power and temperature for optimal results.

### Keep Warm & Pause Function

- **Keep Warm:** Activate the Keep Warm function to maintain your food at a ready-to-eat temperature for an extended period.

- **Smart Pause:** Use the Smart Pause function to temporarily halt cooking without losing your current settings. This allows you to attend to other tasks and resume cooking seamlessly.

**USHA**<sup>®</sup>

**INDUCTION  
COOKTOP**  
C J 1 6 0 0 W W P



**KEEP WARM\***

KEEP FOOD READY-TO-EAT  
FOR LONG TIME

Image: The 'Keep Warm' feature of the cooktop, ensuring food stays warm.

**USHA**<sup>®</sup>

**INDUCTION  
COOKTOP**

CJ1600WWP



**SMART PAUSE**

COOK AT YOUR  
OWN PACE

Image: The 'Smart Pause' feature of the cooktop, allowing temporary interruption of cooking.

## Pan Sensor Technology

The Cookjoy induction cooktop is equipped with Pan Sensor Technology. This feature detects the presence of suitable cookware on the heating zone. If no pan is detected or an incompatible pan is used, the cooktop will not activate, enhancing safety and energy efficiency.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your induction cooktop.

- **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- **Ceramic Glass Surface:** Wipe the ceramic glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive ceramic cooktop cleaner. Do not use abrasive pads, harsh chemicals, or sharp objects.

- **Control Panel:** Wipe the control panel with a soft, damp cloth. Ensure no liquid enters the control panel area.
- **Exterior:** Clean the exterior body with a soft, damp cloth.
- **Ventilation Openings:** Keep the ventilation openings on the bottom and sides of the cooktop clear of dust and debris to ensure proper airflow.
- **Storage:** When not in use for extended periods, store the cooktop in a dry, safe place, away from direct sunlight and moisture.

## TROUBLESHOOTING

---

If you encounter any issues with your USHA Cookjoy Induction Cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	<ul style="list-style-type: none"> <li>◦ Not plugged in.</li> <li>◦ Power outage.</li> <li>◦ Main switch off.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Ensure the cooktop is properly plugged into a working outlet.</li> <li>◦ Check your household's power supply.</li> <li>◦ Turn on the main power switch.</li> </ul>
Cooktop beeps and displays an error code (e.g., E0, E1).	<ul style="list-style-type: none"> <li>◦ No cookware or incompatible cookware.</li> <li>◦ Cookware is not centered.</li> <li>◦ Overheating.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Place an induction-compatible pan on the cooktop.</li> <li>◦ Center the pan on the heating zone.</li> <li>◦ Turn off the cooktop, unplug it, and let it cool down. Check for blocked vents.</li> </ul>
Cooking performance is poor.	<ul style="list-style-type: none"> <li>◦ Incorrect power setting.</li> <li>◦ Incompatible cookware.</li> <li>◦ Cookware base is uneven.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Adjust the power setting using the <b>+</b> and <b>-</b> buttons.</li> <li>◦ Ensure cookware is induction-compatible with a flat bottom.</li> <li>◦ Use cookware with a flat, even base.</li> </ul>

If the problem persists after trying these solutions, please contact USHA customer service.

## SPECIFICATIONS

---

Feature	Detail
Brand	USHA
Model Number	CJ1600WWP
Wattage	1600 Watts
Colour	Black
Material	Glass
Heating Element	Radiant
Number of Heating Elements	1
Controls Type	Digital Touch Controls
Special Features	Sound Sensor, Pan Sensor Technology, Keep Warm Function, Smart Pause Function, 6 Preset Indian Menus
Power Source Type	AC
Item Dimensions (D x W x H)	40D x 32W x 85H Centimeters
Item Weight	2084 Grams
Country of Origin	India

## WARRANTY AND SUPPORT

---

Your USHA Cookjoy Radiant Induction Cooktop CJ1600WWP comes with a **1 Year warranty with free home service** from the date of purchase.

For warranty claims, technical assistance, or any product-related queries, please contact USHA customer service:

- **Toll Free No.:** 18001033111
- **Manufacturer Contact Information:** Registered Office: Surya Kiran Building, 19 K.G. Marg, New Delhi-110 001, India.
- **Importer Contact Information:** Usha International Ltd, Plot No.15, Institution area, Sector -32, Gurugram, Haryana-122001, India. Telephone No.+91-124-4583100.

Please retain your purchase receipt as proof of purchase for warranty services.