

Fakir KM6151

Fakir KM6151 Grinder Coffee Machine User Manual

Model: KM6151 (Product Number: 41004640)

Brand: Fakir

1. INTRODUCTION

Thank you for choosing the Fakir KM6151 Grinder Coffee Machine. This appliance is designed to provide you with fresh, aromatic coffee by integrating a coffee grinder and a drip coffee maker into one convenient unit. The KM6151 features a grinding function with 8 different grinding size options, allowing you to customize your coffee experience from soft to intense. Please read this manual carefully before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Fakir KM6151 Grinder Coffee Machine.



Figure 1: Front view of the Fakir KM6151 Grinder Coffee Machine, showing the control panel, water level indicator, and glass carafe.

1. **Bean Hopper with Grinder:** Located at the top, for whole coffee beans.
2. **Control Panel:** Digital display and buttons for settings, brewing, and timer.
3. **Water Tank:** With a clear level indicator on the side.

4. **Filter Basket:** Holds the ground coffee.
5. **Glass Carafe:** For collecting brewed coffee.
6. **Warming Plate:** Keeps the coffee warm after brewing.
7. **Grind Size Selector:** Dial to adjust the fineness of the grind.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Keep packaging for future transport if needed.
2. **Initial Cleaning:** Before first use, wash the glass carafe, filter basket, and bean hopper lid with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Placement:** Place the coffee machine on a stable, flat, heat-resistant surface, away from water sources and direct heat. Ensure adequate ventilation.
4. **First Brew Cycle (without coffee):**
 - Fill the water tank with fresh, cold water up to the MAX level.
 - Place the empty filter basket and glass carafe in their positions.
 - Plug the machine into a grounded electrical outlet.
 - Run a full brewing cycle without coffee beans to clean the internal components. Discard the water.

5. OPERATING INSTRUCTIONS

5.1. Preparing Your Coffee

1. **Add Coffee Beans:** Open the lid of the bean hopper and pour whole coffee beans into the hopper. Do not overfill.



Figure 2: Illustrates adding whole coffee beans into the integrated grinder's hopper.

2. **Adjust Grind Size:** Use the grind size selector dial (usually located near the bean hopper) to choose your desired fineness. The Fakir KM6151 offers 8 different grind size options. A finer grind is suitable for stronger coffee, while a coarser grind is for milder coffee.
3. **Add Water:** Open the water tank lid and fill the water tank with fresh, cold water. Use the water level indicator on the side of the machine to measure the desired number of cups. Do not exceed the MAX fill line.
4. **Place Carafe:** Ensure the glass carafe is correctly placed on the warming plate with its lid closed.

5.2. Brewing Coffee

1. **Power On:** Press the power button on the control panel.
2. **Select Coffee Strength:** Use the dedicated buttons on the control panel to select your preferred coffee strength: **Soft**, **Medium**, or **Intense**. This setting influences the grinding duration and water flow.
3. **Start Brewing:** Press the "Start" or "Brew" button. The machine will begin grinding the beans, followed by the brewing process.

4. **Keep Warm Function:** After brewing, the warming plate will automatically activate to keep your coffee warm. Please note that the machine automatically shuts off after approximately 30 minutes to save energy.



Figure 3: Shows freshly brewed coffee being poured from the carafe into a cup, with the coffee machine in the background.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

1. **Always Unplug:** Before cleaning, always unplug the coffee machine from the power outlet and allow it to cool completely.
2. **Carafe and Filter Basket:** Wash the glass carafe and filter basket with warm, soapy water after each use. Rinse thoroughly and dry. These parts may also be dishwasher safe (check product specific instructions if available).



Figure 4: A detailed view of the glass carafe, showing measurement markings.

3. Bean Hopper and Grinder:

- Remove any remaining coffee beans from the hopper.
- Use a small brush (often supplied with coffee machines) to clean out ground coffee residue from the grinder chute and burrs.
- Wipe the inside of the bean hopper with a dry cloth. Do not wash the grinder assembly with water.

4. **Exterior:** Wipe the exterior surfaces of the machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

5. **Descaling:** Depending on water hardness, mineral deposits can build up in your coffee machine. Descale regularly (e.g., every 2-3 months) using a commercial descaling solution or a mixture of white vinegar and water. Follow the descaling product's instructions or run several brewing cycles with the descaling solution, followed by several cycles with fresh water to rinse.

7. TROUBLESHOOTING

If you encounter issues with your Fakir KM6151, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.

Problem	Possible Cause	Solution
Coffee is not brewing.	No water in tank; carafe not correctly placed; machine not started.	Fill water tank. Ensure carafe is properly seated. Press the start button.
Coffee tastes weak.	Insufficient coffee beans; grind size too coarse; strength setting too low.	Add more coffee beans. Select a finer grind size. Choose a higher strength setting (e.g., "Intense").
Grinder is not working.	Bean hopper empty; grinder clogged; lid not properly closed.	Fill bean hopper. Clean the grinder assembly. Ensure the bean hopper lid is securely closed.
Coffee overflows from filter.	Too much coffee grounds; filter clogged; carafe not in place.	Reduce amount of coffee grounds. Clean the filter basket. Ensure carafe is correctly positioned.

8. SPECIFICATIONS

Feature	Detail
Brand	Fakir
Model Number	KM6151 (41004640)
Power	900 W
Color	Black
Product Dimensions	50 x 50 x 50 cm
Item Weight	2.5 Kilograms
Material	Metal
Special Features	Integrated Coffee Grinder, 8 Grinding Size Options, Adjustable Coffee Strength (Soft, Medium, Intense)
Coffee Machine Type	Drip Coffee Machine
Automatic Shut-off	Approximately 30 minutes after brewing (for warming plate)

9. WARRANTY AND SUPPORT

Fakir products are manufactured to the highest quality standards. For warranty information, please refer to the warranty card included with your product or visit the official Fakir website. If you require technical assistance or have questions regarding your Fakir KM6151 Grinder Coffee Machine, please contact Fakir customer support.

Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question