

[manuals.plus](#) /

› [astound](#) /

› [astound Mobile Game Screen Buttons User Manual](#)

astound 1

astound Mobile Game Screen Buttons User Manual

Model: 1

INTRODUCTION

Thank you for purchasing the astound Mobile Game Screen Buttons. This product is designed to provide a more comfortable and responsive gaming experience on your mobile device. By reducing screen obstruction and offering precise control, these portable trigger keys will help you elevate your gameplay.

PRODUCT OVERVIEW

The astound Mobile Game Screen Buttons are compact and lightweight accessories that attach to your smartphone screen. They feature a durable construction of high-quality silicone and copper, ensuring longevity and reliable performance.



Figure 1: Front view of the astound Mobile Game Screen Button, showing its compact design with a gold-colored dome and black base.



Figure 2: Dimensions of the astound Mobile Game Screen Button. The suction cup diameter is 1.2 cm, key height is 0.5 cm, and metal diameter is 0.6 cm.

SETUP

Setting up your astound Mobile Game Screen Buttons is quick and easy. Follow these steps for optimal performance:

1. **Clean your screen:** Ensure your phone screen is clean and free of dust or smudges. This will help the suction cups adhere properly.
2. **Launch your game:** Open the mobile game you intend to play. Navigate to the in-game settings to customize your control layout if necessary.
3. **Position the triggers:** Carefully place the astound Mobile Game Screen Buttons directly over the on-screen ability buttons or controls you wish to activate. The suction cup will secure the button in place.
4. **Test placement:** Before starting a game, gently press the buttons to ensure they register input correctly and do not obstruct critical parts of your screen. Adjust as needed.



Figure 3: A user demonstrating the placement of multiple astound screen buttons on a smartphone for gaming, showing how they align with on-screen controls.



Figure 4: A close-up view of a user's hands holding a smartphone with two astound screen buttons positioned over game controls, illustrating their ergonomic use.

OPERATING INSTRUCTIONS

Once the astound Mobile Game Screen Buttons are properly positioned, operating them is intuitive:

- **Activation:** To activate an in-game ability or control, simply touch the metal or silicone part of the button with your finger. The button is designed to register your touch accurately.
- **Multi-tasking:** These buttons allow you to perform multiple actions simultaneously, such as moving, rotating, aiming, and shooting, enhancing your control and reaction time in fast-paced games.
- **Compatibility:** The buttons are compatible with most mobile games on both Android and iOS operating systems.



Figure 5: A user interacting with the astound screen buttons on a tablet, demonstrating their use for precise control in a game.

MAINTENANCE

To ensure the longevity and optimal performance of your astound Mobile Game Screen Buttons, follow these simple maintenance guidelines:

- **Cleaning:** Periodically wipe the silicone and metal parts of the buttons with a soft, dry cloth to remove any dust or fingerprints. Avoid using abrasive cleaners or solvents.
- **Storage:** When not in use, store the buttons in a clean, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the buttons gently. Avoid dropping them or applying excessive force, which could damage the internal components or the suction cup.

TROUBLESHOOTING

If you encounter any issues while using your astound Mobile Game Screen Buttons, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Button not responding	Screen is dirty; button not properly positioned; game settings issue.	Clean your phone screen thoroughly. Re-position the button directly over the in-game control. Check your game's control settings to ensure touch input is enabled.
Button not sticking to screen	Screen is dirty or oily; suction cup is damaged.	Clean your phone screen with a screen cleaner. Ensure the suction cup is clean. If the suction cup is damaged, the product may need replacement.
Interferes with camera/gameplay	Incorrect placement.	Adjust the position of the button to avoid obstructing the camera or other critical game elements. The design aims to minimize this, but precise placement is key.

SPECIFICATIONS

- **Product Name:** Mobile Game Controller Screen Button
- **Model:** 1
- **Material:** Copper, Silicone
- **Suction Cup Diameter:** 1.2 cm (0.47 inches)
- **Key Height:** 0.5 cm (0.20 inches)
- **Metal Diameter:** 0.6 cm (0.24 inches)
- **Compatibility:** Designed for most iOS and Android mobile games.

WARRANTY AND SUPPORT

For information regarding warranty and returns, please refer to the retailer's policy where the product was purchased. Typically, products can be returned within 30 days of receipt if you change your mind, or if the product is defective or damaged.

For further assistance or technical support, please contact the astound customer service through the retailer's platform or visit the official astound website (if available).