

RL LIVE YOUR LIGHT R30811932

User Manual for RL LIVE YOUR LIGHT Punch Pendant Light

Model: R30811932

PRODUCT OVERVIEW

The RL LIVE YOUR LIGHT Punch Pendant Light (Model R30811932) is a stylish single-flame pendant lamp featuring a matte black and gold-colored metal finish. Designed to provide ambient lighting, its elegant design makes it suitable for various indoor settings, particularly kitchens and dining areas. The lamp shade has a diameter of 35 cm, and the suspension height is continuously adjustable up to a maximum of 150 cm.

Please note that the light bulb is not included with this product. It requires one E27 bulb with a maximum wattage of 40 Watts.





Image: The RL LIVE YOUR LIGHT Punch Pendant Light, showcasing its matte black exterior and gold-colored interior, suspended from the ceiling.

SAFETY INFORMATION

- Always disconnect power before installation, maintenance, or bulb replacement.
- Installation should be performed by a qualified electrician if you are unsure.
- Ensure the mounting surface can support the weight of the fixture.
- Do not exceed the maximum wattage of 40 Watts for the E27 bulb.
- Keep away from water and moisture. This product is for indoor use only.

SETUP AND INSTALLATION

This section provides general guidelines for installing your pendant light. Refer to the included assembly instructions for detailed diagrams and specific steps.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the assembly instructions are present.

2. **Prepare for Installation:** Turn off the main power supply at the circuit breaker before beginning any electrical work.
3. **Mounting Bracket Installation:** Attach the mounting bracket to the ceiling junction box using the provided screws. Ensure it is securely fastened.
4. **Wiring:** Connect the electrical wires from the ceiling to the fixture's wires according to local electrical codes. Typically, this involves connecting live to live, neutral to neutral, and ground to ground. Use appropriate wire connectors.
5. **Fixture Attachment:** Carefully lift the pendant light and attach it to the mounting bracket. Secure the canopy to the ceiling to cover the wiring.
6. **Adjust Height:** The height of the pendant can be adjusted by shortening the cable. Follow the instructions in the assembly manual for safe cable length adjustment. The maximum adjustable height is 150 cm.
7. **Install Light Bulb:** Screw in one E27 light bulb (not included) into the lamp holder. Ensure the bulb does not exceed 40 Watts.
8. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

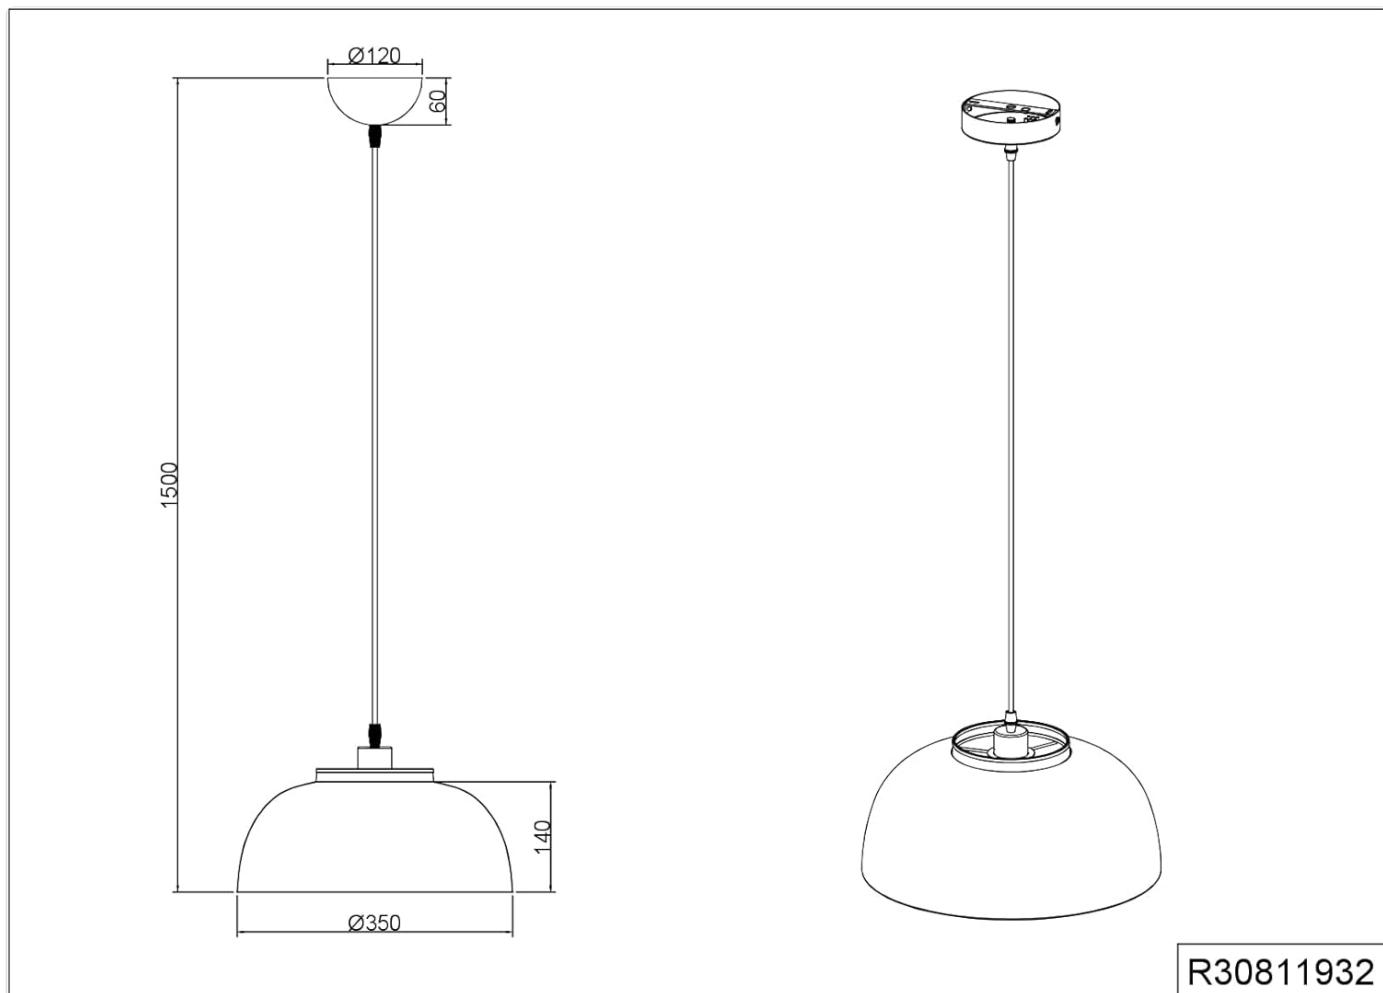


Image: Technical drawing showing the dimensions of the Punch Pendant Light, including its 35cm diameter shade and adjustable height up to 150cm.

OPERATING INSTRUCTIONS

Operating the RL LIVE YOUR LIGHT Punch Pendant Light is straightforward:

- Ensure the light fixture is properly installed and connected to a power source.
- Use a standard wall switch connected to the light circuit to turn the light on or off.

MAINTENANCE

Regular maintenance will help prolong the life and appearance of your pendant light.

Cleaning:

- Always turn off the power and allow the fixture to cool before cleaning.
- Wipe the exterior surfaces with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.

Bulb Replacement:

- Turn off the power to the fixture at the wall switch and circuit breaker.
- Allow the old bulb to cool completely before touching it.
- Carefully unscrew the old E27 bulb.
- Screw in a new E27 bulb, ensuring it does not exceed the maximum 40 Watts.
- Restore power to the fixture.



Image: A close-up view of the E27 bulb socket within the pendant light's shade, illustrating where the bulb is installed.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wiring connection. Faulty light bulb. Faulty wall switch.	Check circuit breaker and wall switch. Turn off power and check wiring connections. Replace the light bulb. Test or replace the wall switch (consult an electrician if needed).
Light flickers.	Loose bulb. Incorrect bulb type/wattage. Loose wiring.	Tighten the bulb. Ensure bulb is E27 and max 40W. Turn off power and check wiring connections.

SPECIFICATIONS

Attribute	Detail
Model Number	R30811932
Brand	RL LIVE YOUR LIGHT
Product Dimensions	35 x 35 x 150 cm (Diameter x Height, max)
Product Weight	1.21 Kilograms
Material	Metal
Color	Matte Black / Gold-colored
Bulb Type (Recommended)	1x E27 (not included)
Max Wattage	40 Watts
Special Application Areas	Kitchen
Assembly Required	No (refers to product being pre-assembled, but installation is required)
Components Included	Assembly instructions

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

Manufacturer: RL LIVE YOUR LIGHT (a brand of TRIO Leuchten GmbH)

You can visit the official brand store for more information: [RL LIVE YOUR LIGHT Store](#)