

- Manuals.plus /
- › GHJGAGE /
- › GHJGAGE 2.3 Cuft Digital Security Safe Box User Manual

GHJGAGE 1

GHJGAGE 2.3 Cubic Feet Digital Security Safe Box User Manual

Model: 1

Thank you for choosing the GHJGAGE Digital Security Safe Box. This manual provides essential information for the safe and efficient operation of your new safe. Please read it thoroughly before use and retain it for future reference.

1. PRODUCT OVERVIEW

The GHJGAGE 2.3 Cubic Feet Digital Security Safe Box is designed to provide secure storage for your valuables, documents, and other sensitive items. It features a robust alloy steel construction, a digital keypad for easy access, and multiple security features to protect against unauthorized entry.



Image: The GHJGAGE 2.3 Cubic Feet Digital Security Safe Box, showcasing its spacious interior and the included fireproof document bag.

Key Features:

- **Fireproof and Waterproof Construction:** Made of newly upgraded solid steel material with built-in integrated hinge and thicker solid bolts.
- **Digital Keypad & Spare Keys:** Offers programmable code access and includes spare keys for emergency override.
- **Spacious Interior with Removable Shelf:** 2.3 cubic feet capacity with a flexible storage option.
- **Anti-Theft Alarm System & Silent Mode:** Activates an alarm after multiple incorrect password attempts and offers a silent operation mode.
- **Intelligent Light Design:** Interior light automatically illuminates upon opening for better visibility.
- **Multiple Mounting Options:** Can be installed to the wall, closet, or floor.

2. SETUP AND INSTALLATION

2.1 Unpacking and Initial Inspection

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Ensure all included components are present: 2 emergency keys, 4 expansion bolts, 1 external battery box, 1 fireproof safe, and 1 user manual.

2.2 Battery Installation

The safe requires batteries for the digital keypad to function. Locate the battery compartment, typically on the inside of the door or behind the keypad. Insert the required batteries (not included) according to the polarity markings. The intelligent light will briefly illuminate upon successful battery installation.

2.3 Mounting the Safe

For enhanced security, it is highly recommended to securely mount the safe to a wall, closet, or floor using the provided expansion bolts. Choose a discreet and secure location. The safe has pre-drilled holes in the back for mounting.

1. Position the safe in the desired location and mark the drilling points through the pre-drilled holes.
2. Drill holes into the wall/floor at the marked points, ensuring appropriate drill bit size for the expansion bolts.
3. Align the safe with the drilled holes and insert the expansion bolts.
4. Tighten the bolts securely to fasten the safe in place.

WALL MOUNTED INSTALLTION

Can be installed anywhere you want



Image: Visual guide for wall mounting the safe, illustrating the process of marking, drilling, and securing the unit.

3. OPERATING INSTRUCTIONS

3.1 Opening the Safe

Your GHJGAGE safe offers three methods for opening:

1. Override Key + Knob (First Time Operation / Forgotten Passcode):

- Insert the override key into the emergency keyhole.
- Turn the key clockwise while simultaneously turning the knob clockwise to open the safe.

2. Digital Pass Code + "#" + Knob (Daily Use):

- Enter your personal digital pass code on the keypad.
- Press the "#" button to confirm.
- Within 5 seconds, turn the knob clockwise to open the safe.

3. External Power Supply + Pass Code + "#" (Lost Key / Dead Batteries):

- Connect the external battery box to the designated socket on the keypad.
- Enter your personal digital pass code on the keypad.
- Press the "#" button to confirm.
- Within 5 seconds, turn the knob clockwise to open the safe.



Image: A visual representation of the three distinct methods for accessing the safe, including the use of the override key, digital keypad, and external power supply.

Your browser does not support the video tag.

Video: Demonstration of the three methods to open the GHJGAGE safe box, including using the override key, digital passcode, and external power supply.

3.2 Setting/Changing Passcode

Refer to the detailed instructions provided in the included user manual (PDF) for specific steps on how to set or change your personal digital pass code. It is crucial to choose a strong, memorable code and keep it confidential.

3.3 Anti-Theft Alarm System & Silent Mode

The safe is equipped with an anti-theft alarm system. If an incorrect password is entered 3 times consecutively, the system will lock for 20 seconds. If the incorrect password is entered 6 times consecutively, it will lock for 5 minutes. This feature enhances security by deterring unauthorized access.

For situations requiring discreet operation, the safe can be set to silent mode. This mutes the keypad beeps and alarm sounds. Consult the detailed user manual (PDF) for instructions on activating and deactivating silent mode.



Image: The safe highlighting its smart alarm and silent mode capabilities, with visual cues for security and quiet operation.

3.4 Intelligent Light Design

Upon successful opening with a passcode, the safe's interior light will automatically turn on, providing illumination for 30 seconds before slowly fading out. This feature allows for easy visibility of contents, even in low-light conditions. A red indicator light will also alert you when the battery level is low.

3.5 Removable Shelf

The safe includes a removable shelf, allowing you to customize the interior space to accommodate items of various sizes. To

remove or re-position the shelf, simply lift it from its supports.



Image: The safe's interior, illustrating the versatility provided by the removable shelf for organizing different sized items.

4. MAINTENANCE

4.1 General Care

To maintain the appearance and functionality of your safe, wipe the exterior with a soft, damp cloth. Avoid using abrasive cleaners or solvents. Ensure the safe is kept in a dry environment to prevent moisture damage.

4.2 Battery Replacement

When the low battery indicator light illuminates, replace the batteries promptly to ensure continuous operation of the digital keypad. Use the same type and number of batteries as originally installed. If the batteries completely drain, use the external battery box or the override key to open the safe.

5. TROUBLESHOOTING

5.1 Safe Does Not Open with Passcode

- Ensure batteries are correctly installed and not depleted. Replace batteries if the low battery indicator is on.
- Verify that the correct passcode is being entered, followed by the "#" button.
- If the safe is locked due to multiple incorrect attempts, wait for the lockout period to expire (20 seconds or 5 minutes).
- If the batteries are dead, use the external battery box to power the keypad or use the override key.

5.2 Keypad Not Responding

- Check battery installation and replace batteries if necessary.
- Ensure the external battery box is properly connected if being used.

5.3 Alarm Sounds Unexpectedly

- This indicates multiple incorrect passcode entries. Ensure only authorized users are attempting to access the safe.
- If the alarm is triggered by accidental input, simply enter the correct passcode to disarm it.

6. SPECIFICATIONS

Brand	GHJGAGE
Product Dimensions	12.99"D x 13.78"W x 16.54"H
Lock Type	Electronic Combination Lock, Key
Color	Black
Capacity	2.3 Cubic Feet
Material	Alloy Steel
Special Feature	Durable, Fireproof, Waterproof, Smart Light, Silent Mode, Anti-Theft Alarm
Mounting Type	Floor Mount or Wall Mount
Control Type	Electronic Digital Keypad
Included Components	Emergency key*2, Expansion bolt*4, External battery box *1, Fireproof safe *1, User manual *1
Item Weight	26 Pounds
Water Resistance Level	Waterproof

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The GHJGAGE Professional Safe Box comes with a one-year hassle-free warranty from the date of purchase. This warranty covers manufacturing defects and ensures the quality of your product.

7.2 Customer Service

For any questions, concerns, or support needs regarding your GHJGAGE safe, please contact our customer service team. We are committed to providing 24/7 customer service and believe that good communication can resolve any issues you may encounter.

Please refer to your purchase documentation or the GHJGAGE official website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BM95H3X7>

More documents and user manuals: **<https://manuals.plus/>**