

[Manuals.plus](#) /

› [GHJGAGE](#) /

› GHJGAGE 1.2 Cu ft Fireproof Safe Box User Manual

GHJGAGE Fireproof Safe

GHJGAGE 1.2 Cu ft Fireproof Safe Box User Manual

Model: Fireproof Safe

INTRODUCTION

The GHJGAGE 1.2 Cu ft Fireproof Safe Box is designed to provide secure storage for your valuables, including documents, jewelry, money, and medicine. This safe offers robust protection against fire and water, featuring a digital security lock for convenient access and multiple layers of security to deter unauthorized entry. Its compact design makes it suitable for various home and office environments.



Figure 1: GHJGAGE 1.2 Cu ft Fireproof Safe Box with its contents and accompanying fireproof bag.

100% STEEL MATERIAL ANTI-THEFT & ANTI-PRYING



Figure 2: The safe provides security, keeping dangerous items away from children and valuables safe from thieves.

SETUP

Initial Setup and Battery Installation

Before first use, install 4 AA batteries (not included) into the battery compartment, typically located inside the safe door or behind the keypad. Ensure correct polarity. The safe comes with an initial password, usually "159", which should be changed immediately after initial setup for security.

REMOVABLE STEEL SHELF



Medicine



Pistol



Folder



Money



camera



Jewelry

1 With shelf



2 Without shelf

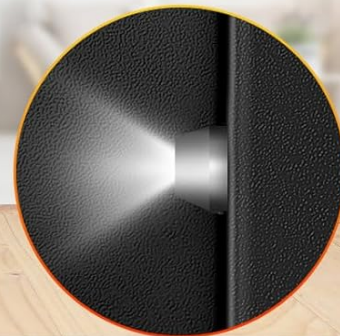


Figure 3: Key components of the safe's locking mechanism, including the digital keypad and emergency battery box socket.

Mounting the Safe

The safe features pre-drilled holes on the bottom and back for permanent installation to a wall or floor. This prevents unauthorized removal of the safe. Use the provided expansion bolts for secure mounting.

WALL MOUNTED INSTALLTION

Can be installed anywhere you want



Figure 4: Wall-mounted installation guide for the safe.

OPERATING INSTRUCTIONS

Opening the Safe

There are three primary methods to open your GHJGAGE safe:

1. **Digital Keypad (Daily Use):** Enter your personal code (initial password "159", remember to change it) followed by the "#" key. Once the green indicator light illuminates, turn the knob clockwise within 5 seconds to open the door.
2. **Emergency Key (First Time Operation / Forgotten Passcode):** Insert the emergency key into the keyhole, turn it counter-clockwise, and simultaneously turn the knob clockwise to open the safe. This method is also used if you forget your digital passcode.
3. **External Battery Box (Lost Key / Dead Batteries):** If the internal batteries are depleted and you cannot use the digital keypad, connect the external battery box to the designated socket on the keypad. This will power the keypad, allowing you to enter your code and open the safe.

Video 1: Demonstration of the GHJGAGE safe box, showcasing its features and operation, including the interior and removable shelf.

Changing the Passcode

With the safe door open, press the red reset button located on the inside of the door. The yellow indicator light will illuminate. Enter your new 3-8 digit code, then press the "#" key to confirm. Test the new code with the door open before closing it.

Smart Anti-Theft System and Silent Mode

The safe is equipped with a smart anti-theft system. If an incorrect password is entered three times consecutively, the system will activate an alarm. The safe also features an optional silent mode, which can be activated for situations where quiet operation is desired, such as during nighttime access.



Figure 5: The safe's smart anti-theft alarm system.



Figure 6: The safe's mute function for silent operation.

Removable Shelf

The safe includes a removable shelf, allowing you to customize the internal storage space to accommodate items of various sizes. This flexibility helps in organizing your valuables efficiently.

ARE YOU STILL WORRYING ABOUT THESE



Figure 7: The safe's interior with and without the removable shelf.

MAINTENANCE

Battery Replacement

When the batteries are low, the indicator light may flash or the keypad may not respond. Replace all four AA batteries promptly to ensure continuous operation. Always use new, high-quality batteries.

Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish. Ensure the keypad and lock mechanism are kept free of dust and debris.

FIREPROOF SAFE WITH FIREPROOF MONEY BAG



High temper-resistant
paint processe



High temper-resistant
Ionic coating



Five-layer alloy steel
plate



Figure 8: The GHJGAGE safe box with its included fireproof money bag, offering enhanced protection for documents and cash.

TROUBLESHOOTING

Safe Does Not Open with Code

- Ensure batteries are not depleted. Use the external battery box if necessary.
- Verify the correct code is being entered. Remember to press "#" after the code.
- If the code was recently changed, ensure you are using the new code.
- If the code is forgotten, use the emergency key to open the safe and reset the code.

Alarm Sounds Unexpectedly

- The alarm activates if an incorrect code is entered three times consecutively. Wait for the alarm to clear or use the emergency key to open the safe.
- Ensure the safe is closed properly and the bolts are fully engaged.

Knob Does Not Turn

- Ensure the correct code has been entered and the green light is on. The knob must be turned within 5 seconds of successful code entry.
- Check for any obstructions preventing the door from opening or the knob from turning.

SPECIFICATIONS

Feature	Detail
Brand	GHJGAGE
Model Number	Fireproof Safe
Capacity	1.2 Cubic Feet
Exterior Dimensions (D x W x H)	9.85"D x 13.78"W x 9.85"H
Lock Type	Electronic Combination Lock, Key
Material	Alloy Steel
Color	Black
Special Features	Alarm System, Sensor Light, Combination Lock, Removable Shelf, Fire Resistant
Mounting Type	Wall Or Floor Mount
Control Type	Programmable Keypad and Spare Key
Item Weight	17.6 Pounds
Water Resistance Level	Waterproof
Batteries Required	4 AA batteries (not included)
Included Components	Emergency key*2, User manual *1, Safe box *1, Expansion bolt*4, External battery box *1

WARRANTY AND SUPPORT

GHJGAGE offers a 5-year return or exchange warranty and lifetime technical support for this product. All parts can be replaced free of charge. For any questions or assistance after receiving your safe, please contact GHJGAGE customer support online. We are committed to resolving any issues within 24 hours.

For further assistance, please refer to the contact information provided with your product packaging or visit the official GHJGAGE website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question