

Elite Gourmet ETO2530M

Elite Gourmet ETO2530M Double French Door Countertop Toaster Oven

Model: ETO2530M | Brand: Elite Gourmet

1. INTRODUCTION

The Elite Gourmet Double French Door 25L Countertop Oven is designed as a versatile cooking appliance, serving as a primary or supplementary oven for various culinary tasks. This dual-door convection oven is capable of toasting, baking, broiling, and roasting, facilitating the preparation of a wide range of meals and desserts. Its spacious interior features three rack positions, allowing for simultaneous cooking of multiple dishes, such as a 12-inch pizza, dinner rolls, or a casserole. The oven includes French-style doors, one wire rack, one enamel bake tray, a crumb tray, and a tray removal handle. All removable parts are dishwasher safe for convenient cleaning. This appliance offers an energy-efficient alternative to conventional ovens, suitable for everyday use and particularly useful during periods of increased cooking demands.

2. PRODUCT OVERVIEW



Front view of the Elite Gourmet ETO2530M Double French Door Countertop Toaster Oven, showcasing its stainless steel and black finish with clear glass doors.

25L LARGE CAPACITY

Fits 12" Pizza & Much More

3 Rack positions for cooking
multiple dishes at once



Image illustrating the 25L large capacity of the oven, capable of fitting a 12-inch pizza and featuring three rack positions for versatile cooking.



**Faster
Pre-heat**
than conventional oven

**Adjustable
Controls**
for all your
cooking needs

Powerful
Reach temperatures
from 200°F to 450°F

Close-up of the toaster oven's control panel, highlighting faster pre-heat capabilities, adjustable controls for various cooking needs, and powerful heating reaching 200°F to 450°F.

Broil, Bake, Roast & Toast

all your favorite foods



Image demonstrating the oven's ability to broil, bake, roast, and toast, with various cooked foods displayed around the oven.

Key Features:

- **25L XL Capacity:** Accommodates up to 6 slices of toast or an 11lb roast. Features three rack positions, allowing it to fit a 12-inch pizza with interior dimensions of 13.25" x 13.50" x 8.95".
- **French Dual Door Design:** Allows opening one or both doors simultaneously, optimizing counter space.
- **Precision Cooking Control:** Equipped with a built-in heat selector switch for various cooking functions including Baking, Broiling, Toasting, Pizza, and Keep Warm.
- **Adjustable Timer:** Includes a 60-minute timer with an indicator bell and toast shade settings.
- **1500 Watts of Power:** Features an adjustable thermostat ranging from 200°F to 450°F, providing 1500 watts of cooking power.

3. SETUP

Before initial use, ensure all packaging materials are removed from the oven. Place the oven on a stable, heat-resistant, and level surface, ensuring adequate clearance from walls and other appliances for proper ventilation. It is

recommended to operate the oven empty on a high heat setting for approximately 15 minutes prior to first use to burn off any manufacturing residues and minimize initial odors. Ensure the crumb tray is properly installed at the bottom of the oven.



French Doors
Elegant tempered glass doors

3 Rack Positions
Bake, broil, roast & toast

Cool-touch Handles
Single pull to open both doors at once

Accessories
Wire Rack, Bake Tray,
Crumb tray and Tray Tool

Image showing the French doors, three rack positions, and included accessories: wire rack, bake tray, crumb tray, and tray tool.

4. OPERATING INSTRUCTIONS

The Elite Gourmet Toaster Oven features intuitive knob controls for temperature, function, and timer settings.

Control Panel


Temperature Control
Adjustable from 200°F to 450°F


Function Knob
Easily switch between Broil, Warm/Bake, and Pizza/Toast.



Indicator Light
Illuminates while oven is in use



Timer Control
60-min timer with auto shut-off

Detailed view of the control panel, illustrating the temperature control knob, function knob, indicator light, and timer control.

Temperature Control:

- Adjust the top knob to select the desired temperature between 200°F and 450°F.

Function Selection:

- Use the middle knob to choose your cooking function:
 - **OFF:** Turns the oven off.
 - **BROIL:** For broiling foods.
 - **WARM/BAKE:** For baking and keeping food warm.
 - **PIZZA/TOAST:** For toasting bread or cooking pizza.

Timer Control:

- The bottom knob controls the 60-minute timer. Turn it clockwise to set the desired cooking time. An indicator bell will sound when the timer completes.
- For toast shade settings, refer to the markings around the timer knob.

Rack Positions:

The oven offers three rack positions to accommodate various food sizes and cooking methods. Position the wire rack and bake tray according to your recipe's requirements.

Countertop size with **CONVENTIONAL POWER**

3 Rack positions for cooking multiple dishes at once.
Powerful enough to bake 12" pizzas, and much more!



Internal Dimension
13.25"x 13.50"x 8.95" inches
0.9 CU feet

Diagram showing the internal dimensions (13.25"x 13.50"x 8.95") and the three rack positions for optimal cooking.

Official Product Video:

Your browser does not support the video tag.

Product Overview Video: This video provides a visual guide to the features and operation of the Elite Gourmet ETO2530M Countertop Oven, including its 25L capacity, French dual doors, and control functions.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Elite Gourmet Toaster Oven.

Cleaning:

- Always unplug the oven and allow it to cool completely before cleaning.
- The wire rack, enamel bake tray, and crumb tray are dishwasher safe. For best results, hand wash with warm, soapy water.
- Wipe the interior and exterior surfaces of the oven with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, as they may damage the finish.
- Ensure all parts are thoroughly dry before reassembling and storing the oven.

Storage:

Store the oven in a cool, dry place when not in use. Ensure it is clean and dry before storage.

6. TROUBLESHOOTING

If you encounter issues with your Elite Gourmet Toaster Oven, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Turn the timer knob past the "OFF" position to activate.
Food is not cooking evenly.	Incorrect rack position; uneven food placement; door not fully closed.	Adjust rack position for optimal heat distribution. Arrange food evenly on the tray. Ensure French doors are fully closed during operation.
Excessive smoke during cooking.	Food residue on heating elements or interior; fatty foods.	Clean the oven interior and heating elements thoroughly. Use a drip pan for fatty foods.
Timer not working consistently.	Mechanical issue.	If the timer is not functioning reliably, contact customer support for assistance.

If the problem persists after attempting these solutions, please contact Elite Gourmet customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Elite Gourmet
Model Name	Elite Gourmet ETO2530M Double French Door Countertop Toaster Oven
Model Number	ETO2530M
Color	Stainless Steel and Black
Capacity	25 Liters (0.9 cu ft)

Feature	Detail
Product Dimensions	25"D x 10"W x 15"H
Internal Dimensions	13.25" x 13.50" x 8.95"
Special Feature	Dual Door Design, Independent Heating Elements, Multi-Rack Positioning
Control Type	Knob Control
Door Style	French Door
Included Components	Baking Pan, Wire Rack
Door Material Type	Stainless Steel, Tempered Glass
Power Source	Corded Electric
Temperature Range	200 - 450 Degrees Fahrenheit
Number of Shelves	3
Item Weight	15.37 pounds
UPC	717056130918

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Elite Gourmet website or the documentation included with your product. You may also contact Elite Gourmet directly for assistance with product registration, troubleshooting, or service inquiries.

Protection plans are available for purchase separately:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases.

For the most current support information, visit the [Elite Gourmet Store](#).

