

Beko DC 101230

Beko DC 101230 Condenser Dryer User Manual

Model: DC 101230 (7187842940)

1. INTRODUCTION

Thank you for choosing a Beko appliance. This user manual provides important information on the installation, operation, and maintenance of your Beko DC 101230 Condenser Dryer. Please read this manual thoroughly before using your appliance to ensure safe and efficient operation. Keep this manual for future reference. This condenser dryer is designed for household use to dry laundry. It features a 10 kg capacity, various drying programs, a multi-function display, and advanced features like sensor drying and crease protection.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or operate the appliance if it is damaged or has a faulty power cord.
- Ensure the appliance is properly grounded.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Ensure no parts are missing or damaged. Keep packaging materials out of reach of children.

3.2 Placement and Leveling

Place the dryer on a stable, level surface. Adjust the adjustable feet to ensure the appliance is perfectly level. Proper leveling prevents excessive vibration and noise during operation.



Figure 3.1: Front view of the Beko DC 101230 Condenser Dryer, showing its compact design suitable for various placements.



Figure 3.2: Side view with dimensions (Height: 84.6cm, Width: 59.7cm, Depth: 63.3cm) for proper installation planning.

3.3 Electrical Connection

Connect the dryer to a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating label of the appliance. Do not use extension cords or multiple socket adapters.

3.4 Condensate Drain

As a condenser dryer, it collects water in a tank. You can either manually empty the water tank after each cycle or connect a drain hose (if provided) to a permanent drain for automatic water disposal.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel allows you to select programs, adjust settings, and monitor the drying process.

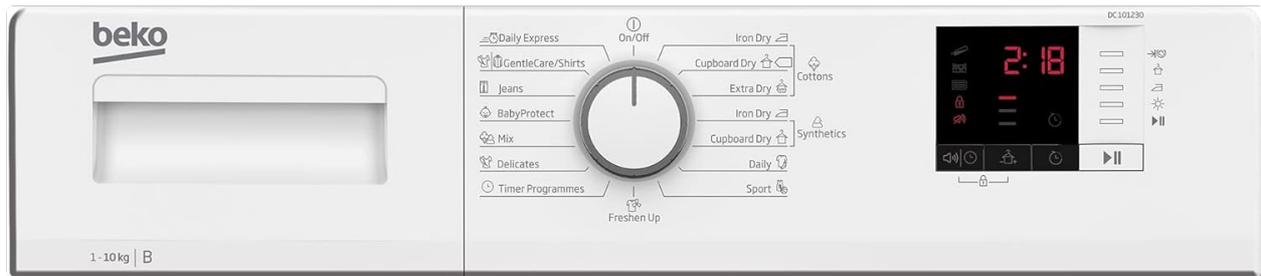


Figure 4.1: The control panel features a program selection knob, a multi-function display, and touch buttons for various settings.

4.2 Loading Laundry

Open the dryer door and load your laundry. Do not overload the dryer; ensure there is enough space for clothes to tumble freely. Close the door firmly.



Figure 4.2: The dryer with its door open, revealing the spacious drum ready for laundry.

4.3 Program Selection

Turn the program selection knob to choose the desired drying program. The multi-function display will show the estimated drying time and other relevant information.

4.4 Starting a Cycle

Press the Start/Pause button to begin the drying cycle. The display will count down the remaining time. You can pause the cycle at any time by pressing the Start/Pause button again.

5. DRYING PROGRAMS

Your Beko DC 101230 dryer offers 15 different programs to suit various fabric types and drying needs. Below are some of the key programs:

- **Daily Express:** For quick drying of everyday items.
- **GentleCare/Shirts:** Gentle drying for delicate fabrics and shirts to minimize creasing.
- **Jeans:** Optimized program for drying denim.
- **BabyProtect:** Hygienic drying for baby clothes.
- **Mix:** For mixed loads of cottons and synthetics.
- **Delicates:** Extra gentle drying for very sensitive items.
- **Timer Programmes:** Allows manual setting of drying time.
- **Freshen Up:** A short program to air and refresh clothes without heat.
- **Iron Dry:** Leaves laundry slightly damp for easier ironing.
- **Cupboard Dry:** Dries laundry to be stored directly in the cupboard.
- **Extra Dry:** For very dry laundry, suitable for items like towels.
- **Cottons:** Standard program for cotton items.
- **Synthetics:** Program for synthetic and blended fabrics.
- **Daily:** General purpose drying program.
- **Sport:** For sportswear and activewear.

Refer to the control panel and display for specific program indicators and options.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

6.1 Cleaning the Lint Filter

The lint filter should be cleaned after every drying cycle. Accumulated lint can reduce drying efficiency and increase energy consumption.

1. Open the dryer door.

2. Pull the lint filter upwards to remove it.
3. Remove any lint by hand or with a soft brush.
4. Insert the filter back into its housing until it clicks into place.



Figure 6.1: The interior of the dryer drum, highlighting the location of the lint filter for easy access and cleaning.

6.2 Emptying the Water Tank

If you are not using a direct drain connection, the water collected during drying will accumulate in the water tank. This tank must be emptied after each cycle.

1. Pull out the water tank from its compartment.
2. Pour the collected water into a sink or drain.
3. Push the water tank back into its compartment until it is fully seated.

6.3 Cleaning the Condenser

The condenser should be cleaned periodically (e.g., every few months or as indicated by the appliance). Refer to your appliance's specific instructions for condenser access and cleaning. This typically involves removing the condenser cover and rinsing the condenser unit under running water.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and their solutions:

Problem	Possible Cause	Solution
Dryer does not start.	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is fully closed; Select a program and press Start.
Laundry is not drying properly.	Lint filter clogged; Water tank full; Overloaded; Incorrect program.	Clean lint filter; Empty water tank; Reduce load size; Select appropriate program.
Excessive noise or vibration.	Appliance not level; Foreign objects in drum.	Adjust leveling feet; Check drum for loose items.
Display shows an error code.	Specific malfunction.	Refer to the full user manual for specific error code meanings or contact customer service.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Number	7187842940
Type	Condenser Dryer
Capacity	10 Kilograms
Energy Efficiency Class	B
Product Dimensions (LxWxH)	63.3 x 59.7 x 84.6 cm
Weight	34.5 Kilograms
Noise Level	66 dB
Wattage	2500.00 Watts
Door Opening	Frontloader
Color	White
Material	Stainless Steel (Drum)
Special Features	Multi-function display, Electronic humidity measurement

9. WARRANTY AND SUPPORT

Your Beko appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or service requests, please contact Beko customer service. You can find contact information on the official Beko website or through your retailer.

Visit the official Beko Store for more information and product registration [Beko Official Store](#)

© 2025 Beko. All rights reserved.

Related Documents - DC 101230

	<p>Beko WML 15106 NE F2 Waschmaschine Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die Beko Waschmaschine Modell WML 15106 NE F2. Enthält wichtige Sicherheitshinweise, Installationsanleitungen, Programmübersichten, Tipps zur Bedienung und Wartung sowie Fehlerbehebung.</p>
	<p>BEKO Dishwasher Quick Guide: Operating Instructions and Water Softening</p> <p>A comprehensive quick guide for BEKO dishwashers, covering product operation, program details, average consumption values, and step-by-step instructions for adjusting the water softening system. Includes model information for BEKO BDIN38522Q.</p>
	<p>Beko Built-in Appliances: InnovaChef & Chef Series for Your Kitchen</p> <p>Explore Beko's innovative built-in kitchen appliances, including the InnovaChef and Chef series. Discover features, recipes, and step-by-step cooking guides designed to enhance your culinary experience.</p>
	<p>Beko CTB 6253 X Hood Cooker User Manual</p> <p>This user manual provides comprehensive instructions for the Beko CTB 6253 X Hood Cooker, covering safety precautions, operation details, installation guides, maintenance procedures, and troubleshooting tips.</p>

 <p>The image shows the cover of the Beko CEP 5302 B Espresso Machine User Manual. It features the Beko logo at the top, followed by the text 'Manual Espresso Machine with Integrated Milk Frother User Manual'. Below this is an illustration of a coffee cup with steam rising from it. The model number 'CEP 5302 B' is printed below the illustration. At the bottom, there are several certification logos, including UKCA, CE, and others.</p>	<p>Beko CEP 5302 B Espresso Machine User Manual - Operation, Safety & Maintenance</p> <p>Comprehensive user manual for the Beko CEP 5302 B Espresso Machine with Integrated Milk Frother. Covers setup, operation, safety guidelines, cleaning, and troubleshooting for optimal coffee preparation.</p>
 <p>The image shows the cover of the Beko CHG 81442 BX Chopper User Manual. It features the Beko logo at the top, followed by the text 'Chopper User Manual'. Below this is an illustration of a food chopper. The model number 'CHG81442BX' is printed below the illustration. At the bottom, there are several certification logos, including UKCA, CE, and others.</p>	<p>BEKO CHG 81442 BX Chopper User Manual: Operation, Safety & Maintenance Guide</p> <p>Comprehensive user manual for the BEKO CHG 81442 BX chopper. Includes safety guidelines, operating instructions, technical specifications, cleaning tips, and maintenance advice for optimal performance of your BEKO kitchen appliance.</p>