

[Manuals.plus](#) /

› [GHJGAGE](#) /

› User Manual for GHJGAGE 1.5 Cubic Fireproof Safe Box

GHJGAGE Safe02

User Manual for GHJGAGE 1.5 Cubic Fireproof Safe Box

Model: Safe02 | Brand: GHJGAGE

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your GHJGAGE 1.5 Cubic Fireproof Safe Box. Designed for home use, this digital fire safe offers robust security features to protect your valuables, including money, firearms, medicine, jewelry, and important documents. Please read this manual thoroughly before operation to ensure proper setup and functionality.



Figure 1: The GHJGAGE 1.5 Cubic Fireproof Safe Box, showcasing its interior capacity and potential contents.

2. SAFETY INFORMATION

- Always keep emergency keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is installed on a stable surface or securely bolted to a wall/floor to prevent tipping.
- Keep the safe out of reach of children, especially if storing firearms or medicine.
- Avoid exposing the safe to extreme temperatures or direct water, despite its fireproof and waterproof features, to prolong its lifespan.
- Do not attempt to force the safe open if the digital lock malfunctions. Use the emergency key or external power supply as instructed.

Anti-theft Home Safe Box

Nice for storing firearms or medicine away from being accessed by children and deterring burglars

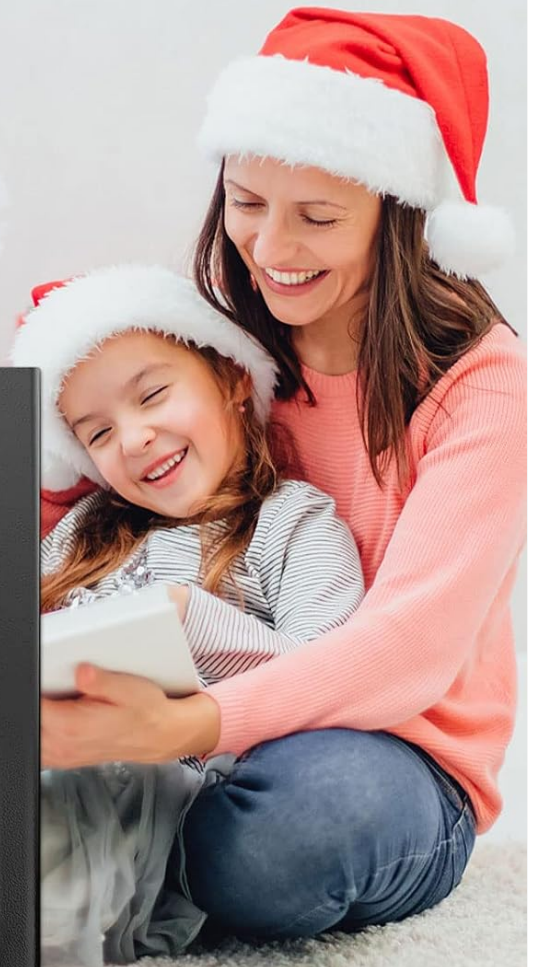


Figure 2: The safe helps prevent unauthorized access to sensitive items by children.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x 1.5 Cubic Fireproof Safe Box
- 2 x Emergency Keys
- 1 x External Battery Box
- 1 x Mat
- 1 x Mounting Accessories (screws)
- 1 x User Manual (this document)
- 1 x Fireproof Money Bag (8.07" x 5.31")

Home Security Safe With Smart Capacity



Figure 3: All components included with your safe, along with its external dimensions.

4. PRODUCT OVERVIEW

The GHJGAGE safe is constructed from solid cold-rolled steel, featuring three 22mm solid bolts and a 5cm thickened front door for enhanced security. It includes a digital keypad for access and a removable shelf for organized storage.

Key Features:

- **Anti-Theft Design:** Solid steel construction with anti-pry, anti-rust, and high-temperature resistance.
- **Digital Keypad:** Programmable 3-8 digit user and master codes.
- **Emergency Access:** Override key and external battery box for power failure.
- **Alarm System:** Activates after three incorrect code entries.
- **Silent Mode:** Option to disable keypad sounds.
- **Removable Shelf:** For flexible storage organization.
- **Internal LED Light:** Illuminates the interior for easy access in the dark.

Security Safe With Solid Steel Construction



Anti-theft



Anti-prying



Anti-drilling



Safe defense



1.96 inch
/ 5 cm



3*22mm Bolts

Figure 4: The safe's robust construction with solid steel and anti-theft features.

With shelf



Cash



Jewelry



Firearm



Safe Box For Home With Removable Shelf

It helps you to organize documents and other items safely and separately.



Without shelf



Medicine



Document



Passport

1.2 Cub Capacity

Figure 5: The removable shelf allows for versatile storage options within the safe.

5. SETUP

5.1 Initial Opening

Upon receiving your safe, use the emergency key to open it for the first time.

1. Locate the emergency keyhole, usually hidden behind the digital keypad cover or a small panel.
2. Insert the emergency key and turn it clockwise.
3. Simultaneously turn the knob on the keypad clockwise to open the safe door.

5.2 Battery Installation

The safe requires 4 AA batteries (not included) for the digital keypad.

1. Open the safe door using the emergency key.
2. Locate the battery compartment on the inside of the door.

3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

5.3 Setting User Code

The initial user code is "159". Follow these steps to set your personal user code (3-8 digits):

1. With the safe door open, press the red reset button located on the inside of the door, near the hinge. You will hear a beep.
2. Enter your desired 3-8 digit user code on the keypad.
3. Press the "#" key to confirm. You will hear a confirmation beep.
4. Test the new code with the door open before closing it.



Figure 6: Instructions for setting user and master codes.

5.4 Setting Master Code (if applicable)

Some models allow for a separate master code. To set the master code:

1. Enter "00" on the keypad.
2. Press the red reset button on the inside of the door.
3. Enter your desired 3-8 digit master code.
4. Press the "#" key to confirm.

5.5 Mounting the Safe

For added security, the safe can be bolted to a wall or floor. It comes with 4 pre-drilled holes on the back and bottom.

1. Choose a suitable location (e.g., closet, office, basement) that is stable and discreet.
2. Mark the drilling points through the pre-drilled holes on the safe's back or bottom onto the wall/floor.
3. Drill pilot holes at the marked points.

4. Align the safe with the drilled holes and secure it using the provided mounting screws.

Install Digital Safe

House safe installation can prevent tipping and keep your valuables from prying eyes and curious people.



Figure 7: Example of safe installation, showing wall mounting.

Home Safe Is Suitable For Many Occasions

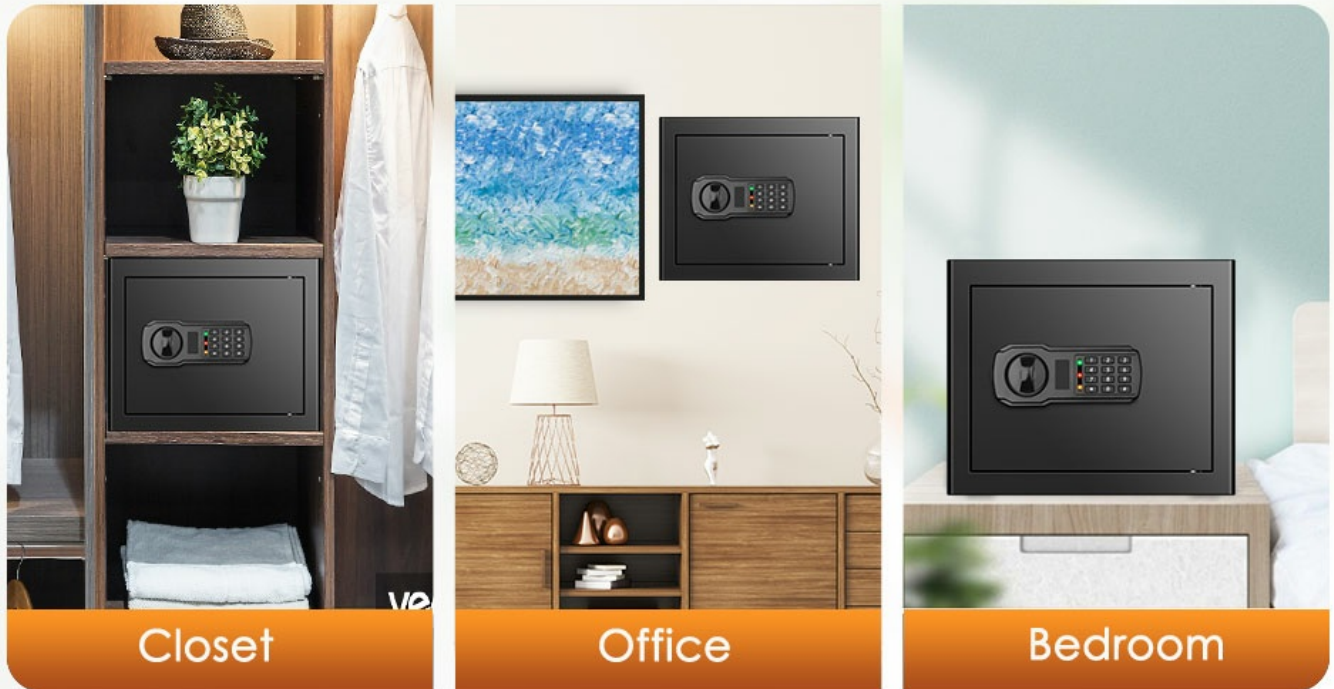


Figure 8: The safe is suitable for various locations within your home or office.

6. OPERATING INSTRUCTIONS

6.1 Opening with Digital Code

1. Enter your 3-8 digit user or master code on the keypad.
2. Press the "#" key.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

6.2 Opening with Emergency Key

This method is used if you forget your code or the batteries are dead.

1. Insert the emergency key into the keyhole and turn it clockwise.
2. Simultaneously turn the knob clockwise to open the safe door.

6.3 Opening with External Power Supply

If the internal batteries are depleted and you do not have the emergency key readily available, use the external battery box.

1. Insert 4 AA batteries into the external battery box.
2. Plug the external battery box into the power port on the keypad.
3. Enter your digital code and press "#".
4. Turn the knob clockwise to open the safe door.
5. Once open, replace the internal batteries.

Quick Access Personal Safe



Attention: Don't keep the emergency keys in the safe.

Figure 9: Three methods for quick access to your personal safe.

Your browser does not support the video tag.

Video 1: Demonstrates the quick access methods for the digital personal safe.

6.4 Alarm Mode and Silent Mode

- **Alarm Mode:** If an incorrect code is entered three consecutive times, the safe's alarm will activate for 20 seconds, and the keypad will be temporarily disabled.
- **Silent Mode:** To turn off the keypad sound, enter "**633". To turn the sound back on, enter "**66".

The advertisement features a black home safe with a keypad and a red alarm light. The background is a collage: the top right shows a burglar in a hoodie attempting to break into a window at night; the bottom shows a man sleeping peacefully in a bed. Text overlays describe the safe's features.

Alarm Mode
3 incorrect entries will activate the alarm system.

Personal Safe For Home With Alarm & Silent Mode

Silent Mode
①Enter " *633" to turn off the sound
②Enter " *66" to turn on the sound

Figure 10: The safe features both an alarm system and an optional silent mode for keypad operations.

7. MAINTENANCE

- **Battery Replacement:** Replace batteries annually or when the low battery indicator appears. Always use new, high-quality AA alkaline batteries.
- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Internal Mat:** The soft mat inside the safe helps prevent scratches to your valuables. Ensure it is properly placed.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect code entered, dead batteries, keypad malfunction.	Re-enter code carefully. Replace batteries or use external battery box. Use emergency key.
Alarm sounds frequently.	Incorrect code entries, sensitive keypad.	Ensure correct code entry. Consider using silent mode if accidental presses occur.
Knob does not turn after entering code.	Not turning within 5 seconds, mechanism stuck.	Turn the knob immediately after successful code entry. If stuck, use emergency key.
Safe door does not close properly.	Obstruction, misaligned bolts.	Check for any items blocking the door. Ensure bolts retract fully before closing.

9. SPECIFICATIONS

Feature	Detail
Brand	GHJGAGE
Model Number	Safe02
Product Dimensions	14.56"D x 12.2"W x 11.81"H (37 x 31 x 30 cm)
Lock Type	Electronic Combination Lock
Color	Black
Material	Alloy Steel
Special Features	Alarm System, Fireproof, Sensor Light
Mounting Type	Wall Mount
Control Type	Knob Control
Item Weight	20.94 Pounds (9.5 kg)
Water Resistance Level	Waterproof
Batteries Required	Yes (4 x AA, not included)

10. WARRANTY AND SUPPORT

GHJGAGE provides a lifetime warranty service for this product. If you encounter any issues or have questions regarding your safe, please contact our professional customer service team. We are committed to solving your problems within 24 hours.

Your satisfaction is very important to us.



