

Disney LAS4038

User Manual: Disney Lilo & Stitch LED Watch

Model: LAS4038

1. INTRODUCTION

Thank you for purchasing the Disney Lilo & Stitch LED Watch. This manual provides essential information for the proper setup, operation, and maintenance of your new watch. Please read it carefully to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The Disney Lilo & Stitch LED Watch is designed with a vibrant Stitch dial and a comfortable, printed strap. It features a clear red digital display for time and date. The watch is suitable for daily wear and comes in official branded packaging.

- **Stitch Dial:** Features a prominent Stitch print on the watch face.
- **Digital Display:** Red LED display shows time and date.
- **Printed Strap:** Adorned with character prints and secured with a traditional buckle.
- **Easy Operation:** Designed for straightforward use.





Figure 2.1: Front view of the Disney Lilo & Stitch LED Watch, displaying the digital time 10:10 and a smiling Stitch character on the dial. The watch has a silver-tone case and a blue strap with yellow patterns.

3. SETUP

3.1 Initial Activation

Your watch comes with a pre-installed battery. To activate the display, press the button located on the side of the watch case. The display will illuminate, showing the current time.

3.2 Setting the Time and Date

1. **Access Time Setting Mode:** Press the side button repeatedly until the time display starts flashing.

2. **Adjust Hours:** While the hours are flashing, press and hold the side button to advance the hour. Release and press again to confirm.
3. **Adjust Minutes:** Once hours are set, the minutes will start flashing. Press and hold the side button to advance the minute. Release and press again to confirm.
4. **Set Date (if applicable):** After setting minutes, the month and day may flash. Use the same press-and-hold method to adjust and confirm the month, then the day.
5. **Exit Setting Mode:** The watch will automatically exit setting mode if no button is pressed for a few seconds, or you can cycle through all settings until the display returns to normal time.

Note: Specific button functions may vary slightly. Refer to the quick start guide included in the packaging for precise instructions if available.

4. OPERATING INSTRUCTIONS

4.1 Displaying Time

To view the current time, press the side button once. The red LED display will illuminate for a few seconds, showing the time in a digital format (e.g., HH:MM).

4.2 Displaying Date

To view the current date, press the side button twice in quick succession. The display will show the month and day (e.g., MM-DD).





Figure 4.1: Full length view of the Disney Lilo & Stitch LED Watch, highlighting the blue strap with yellow patterns and multiple Stitch characters, and the silver buckle closure.

5. MAINTENANCE

- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is generally splash-resistant but not waterproof. Avoid submerging it in water or exposing it to heavy rain.
- **Battery Replacement:** When the display dims or stops working, the battery may need replacement. This should ideally be done by a qualified technician to avoid damaging the watch.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|--------------------------|---------------------------------------|--|
| Display is blank or dim. | Low or depleted battery. | Replace the battery. |
| Time/Date is incorrect. | Time/Date not set correctly or reset. | Follow the "Setting the Time and Date" instructions in Section 3.2. |
| Button not responding. | Stuck button or internal malfunction. | Gently press the button to ensure it's not stuck. If the issue persists, contact customer support. |

7. SPECIFICATIONS

- **Model Number:** LAS4038
- **Display Type:** Red Digital LED
- **Case Material:** Silver-tone Plastic
- **Strap Material:** Printed Silicone/Plastic
- **Battery:** 1 Product-specific battery (included)
- **Dimensions (L x W x H):** 21.5 x 3.5 x 1 cm
- **Weight:** 40 grams
- **Manufacturer:** Peers Hardy
- **Country of Origin:** China





Figure 7.1: The Disney Lilo & Stitch LED Watch presented in its official retail packaging, featuring Disney Stitch branding.

8. WARRANTY AND SUPPORT

This Disney Lilo & Stitch LED Watch comes with **a one-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or service, please contact the retailer or the manufacturer, Peers Hardy, through their official channels. Contact information can typically be found on the product packaging or their official website.