

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EPOMAKER](#) /

› [EPOMAKER TH80 Pro 75% Mechanical Gaming Keyboard Instruction Manual](#)

## EPOMAKER TH80 Pro

# EPOMAKER TH80 Pro 75% Mechanical Gaming Keyboard Instruction Manual

Model: TH80 Pro | Brand: EPOMAKER

## INTRODUCTION

The EPOMAKER TH80 Pro is a high-performance 75% compact mechanical gaming keyboard designed for versatility and customization. It features tri-mode connectivity (2.4Ghz wireless, Bluetooth 5.0, and USB-C wired), hot-swappable switches, PBT keycaps, and vibrant RGB backlighting. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure an optimal user experience.



Image: EPOMAKER TH80 Pro keyboard showcasing its main features.

## WHAT'S IN THE Box

Upon unboxing your EPOMAKER TH80 Pro, please ensure all the following items are present:

- EPOMAKER TH80 Pro Mechanical Keyboard
- USB-C to USB-A Cable
- 2.4G Wireless Receiver

- Keycap/Switch Puller
- Extra Switches (4 pieces)
- Extra Keycaps (5 pieces, including Mac alternate keycaps)
- User Manual

## UPGRADE PACKAGE LIST, MAC ALTERNATE KEYCAPS ARE INCLUDED



Image: All items included in the EPOMAKER TH80 Pro package.

## SETUP

### Connectivity Modes

The TH80 Pro supports three connectivity modes: 2.4Ghz Wireless, Bluetooth 5.0, and USB-C Wired. A switch on the back of the keyboard allows you to select your desired mode.

- **2.4Ghz Wireless:** Insert the 2.4G wireless receiver (found in the keyboard's bottom compartment) into your computer's USB port. Switch the keyboard to 2.4G mode.
- **Bluetooth 5.0:** Switch the keyboard to Bluetooth mode. On your device (laptop, PC, smartphone, tablet), search for

