

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Retekess](#) /

› [Retekess TR621 CD and Cassette Boombox & TR606 Cassette Player Instruction Manual](#)

Retekess TR621

Retekess TR621 CD and Cassette Boombox & TR606 Cassette Player

INSTRUCTION MANUAL

Introduction

This manual provides detailed instructions for the operation and maintenance of your Retekess TR621 CD and Cassette Boombox and the Retekess TR606 Cassette Player. Please read this manual thoroughly before using the devices to ensure proper function and longevity.

Product Overview

**EQUIPPED
WITH REMOTE CONTROL**



**The remote control
can set CD/ TF card/USB
playback.**

Reteless TR621

Image: The Reteless TR621 CD and Cassette Boombox, a portable unit with CD, cassette, AM/FM radio, USB, and TF card playback capabilities. It features dual stereo speakers and a clear display.



Image: The Reteless TR606 Cassette Player and Recorder, a compact device for playing and recording standard size tapes, featuring an AM/FM radio and a telescopic antenna.

Setup

1. Power Supply for TR621 Boombox

- **AC Power:** Connect the included AC power cable to the AC input jack on the back of the TR621 and then to a standard 110V AC outlet.
- **Battery Power:** For portable use, open the battery compartment on the bottom of the TR621 and insert 6 x D size batteries (not included), ensuring correct polarity.



Image: Illustration showing the two power supply methods for the TR621: AC cable connection and battery compartment for D-size batteries.

2. Power Supply for TR606 Cassette Player

- **Battery Power:** Open the battery compartment on the back of the TR606 and insert 2 x AA batteries (not included), ensuring correct polarity.
- **DC 4.5V Power:** The TR606 can also be powered by a DC 4.5V adapter (not included). Connect the adapter to the DC input jack.



Image: The Reteless TR606 showing its battery compartment for AA batteries and the DC 4.5V input port for external power.

3. Antenna Setup

- For optimal FM reception on both TR621 and TR606, extend the telescopic antenna fully.
- For AM reception, rotate the unit for the best signal.

Operating the Reteless TR621 CD and Cassette Boombox

1. CD Playback

1. Gently press the 'OPEN' button on the CD compartment lid to open it.
2. Place a CD (CD/CDR/CDRW/MP3/WMA format) onto the spindle with the label side facing up.
3. Close the CD compartment lid.
4. Press the 'PLAY/PAUSE' button to start playback.
5. Use 'SKIP+' or 'SKIP-' to navigate tracks.
6. Press 'STOP' to end playback.
7. The 'REPEAT' button allows for single track or all track repeat.

CD AND TAPE PLAYERS



Support CD/MP3/
WMA format.

Reteless TR621

Image: The Reteless TR621 with its CD compartment open, showing where to place a CD, and the cassette deck below it.

2. Cassette Playback

1. Press the 'STOP/EJ' button to open the cassette compartment.
2. Insert a standard size tape into the compartment.
3. Close the cassette compartment.
4. Press the 'PLAY' button to start playback.
5. Use 'F.FW' for fast forward and 'REW' for rewind.
6. Press 'STOP/EJ' to stop playback and eject the tape.


3. AM/FM Radio Operation

1. Select 'RADIO' mode using the function switch.
2. Turn the 'TUNING' knob to select your desired AM or FM station.
3. Adjust the volume using the 'VOLUME' knob.

4. USB/TF Card Playback

1. Insert a USB drive or TF card (up to 128GB, not included) into the respective slot.
2. Select 'USB' or 'TF' mode using the function switch.
3. The unit will automatically detect and play MP3/WMA audio files.
4. Use 'PLAY/PAUSE', 'SKIP+', 'SKIP-', and 'STOP' buttons for control.

U DISK AND TF CARD PLAYER

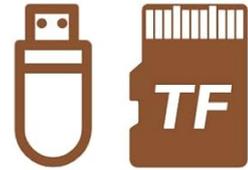

Support up to 128GB
U disk and TF card
(not included)

Support MP3/WMA
audio format

Image: Close-up of the Reteless TR621 showing the USB port and TF card slot, indicating support for MP3/WMA audio formats.

5. Recording to Cassette (TR621)

The TR621 can record from the radio or external sources to a cassette tape. It does not record onto CDs.

1. Insert a blank cassette tape into the cassette compartment.
2. Select the desired input source (AM/FM radio or AUX input).
3. Press the 'RECORD' button to begin recording.
4. Press 'STOP/EJ' to end recording.

RECORDING TO TAPE



Record the sounds
around you

Or record your favorite
radio station and shows

Image: The Reteless TR621 boombox on a table, illustrating its capability to record sounds from the environment or radio stations onto a cassette tape.

6. Remote Control Usage (TR621)

The TR621 comes with a remote control for CD and USB playback. It cannot control cassette or radio functions. The maximum effective distance for the remote control is 32 feet.



RETELESS TR621 BOOMBOX AM FM RADIO

Stylishly designed
multi-function CD player

- CD Player
- Tape Player
- U Disk Player
- TF Card Player
- AM/FM radio
- Remote Control

Image: The Reteless TR621 boombox shown with its remote control, highlighting the convenience of remote operation for CD and USB playback.

Operating the Reteless TR606 Cassette Player/Recorder

1. Cassette Playback

1. Open the cassette compartment.
2. Insert a standard size tape.
3. Close the compartment and press 'PLAY'.
4. Use fast forward or fast rewind functions as needed. Note: This unit does not have an automatic reverse function.

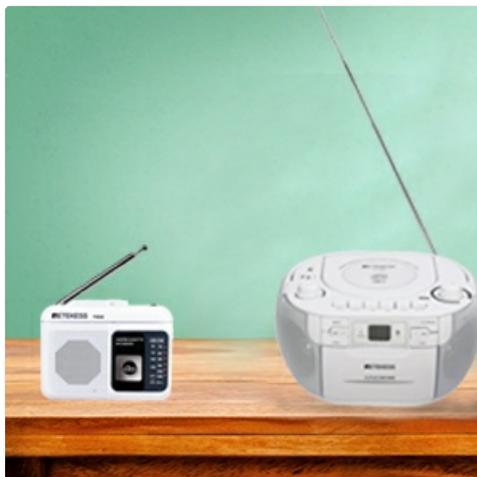


Image: Close-up of the Reteless TR606 cassette player, showing the cassette compartment and controls for tape playback.

2. AM/FM Radio Operation

1. Switch to 'RADIO' mode.
2. Use the tuning dial to find your preferred AM or FM station.

3. Adjust the volume.

AM FM Radio

With 18.9 inches long antenna,
you can listen to your favorite AM FM station.



Image: The Reteless TR606 cassette player displaying its AM/FM radio functionality, with icons representing different types of radio content like talk shows, news, and music.

3. Recording to Cassette (TR606)

The TR606 can record external voice or radio sound onto a cassette tape.

1. Insert a blank tape.
2. Press the 'RECORD' button to start recording.
3. Use the built-in microphone for voice recording or select radio as the source.
4. A 3.5mm AUX jack is available for connecting an external microphone or AUX cable for recording.



Record to Tape



Image: The Reteless TR606 cassette recorder, illustrating its ability to record audio, with a microphone icon and a cat yawning in the background, suggesting voice recording.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the units. Do not use liquid cleaners or abrasive materials.
- **CD/Cassette Compartments:** Keep these areas free of dust and debris to ensure smooth operation.
- **Battery Replacement:** Replace batteries promptly when power is low to prevent leakage and damage.
- **Storage:** Store the units in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

| Problem | Possible Cause | Solution |
|----------|--|---|
| No power | AC cable not connected, batteries drained/incorrectly inserted | Check AC connection, replace/reinsert batteries correctly |

| Problem | Possible Cause | Solution |
|------------------------------------|--|--|
| CD/Cassette not playing | Disc/tape inserted incorrectly, dirty disc/tape, wrong mode selected | Reinsert media, clean media, select correct function mode |
| Poor radio reception | Antenna not extended, weak signal area | Extend antenna, reposition unit for better signal |
| Remote control not working (TR621) | Batteries drained, obstruction, out of range | Replace remote batteries, remove obstructions, move closer to unit |

Specifications

| Feature | Description |
|---------------------------|---|
| Brand | Retekess |
| Model | TR621 (Boombox), TR606 (Cassette Player) |
| Connectivity Technology | Auxiliary, USB |
| Speaker Type | Stereo (TR621), Mono (TR606) |
| Power Source | TR621: AC 110V or 6 x D size batteries; TR606: 2 x AA batteries or DC4.5V |
| Supported Audio Format | CD, MP3, WMA (TR621); Standard Tapes (TR621, TR606) |
| Frequency Response (CD) | 50Hz-18KHz |
| Frequency Response (Tape) | 100Hz-8KHz |
| Remote Control | Yes (TR621, for CD/USB playback only) |
| Recording Function | Yes (to cassette from radio/external sources) |

Product Video Overview

Video: An overview of the Reteless TR621 boombox, demonstrating its various functions including CD, cassette, USB, TF card playback, and AM/FM radio. It highlights the stereo sound and ease of use for both home and outdoor environments.

Warranty and Support

For warranty information, technical support, or service inquiries, please refer to the official Reteless website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.