

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [IsEasy](#) /
- › [IsEasy 4400W Portable Induction Cooktop User Manual](#)

IsEasy 4400W

IsEasy 4400W Portable Induction Cooktop User Manual

Model: 4400W | Brand: IsEasy

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your IsEasy 4400W Portable Induction Cooktop. Please read it thoroughly before use and retain it for future reference.

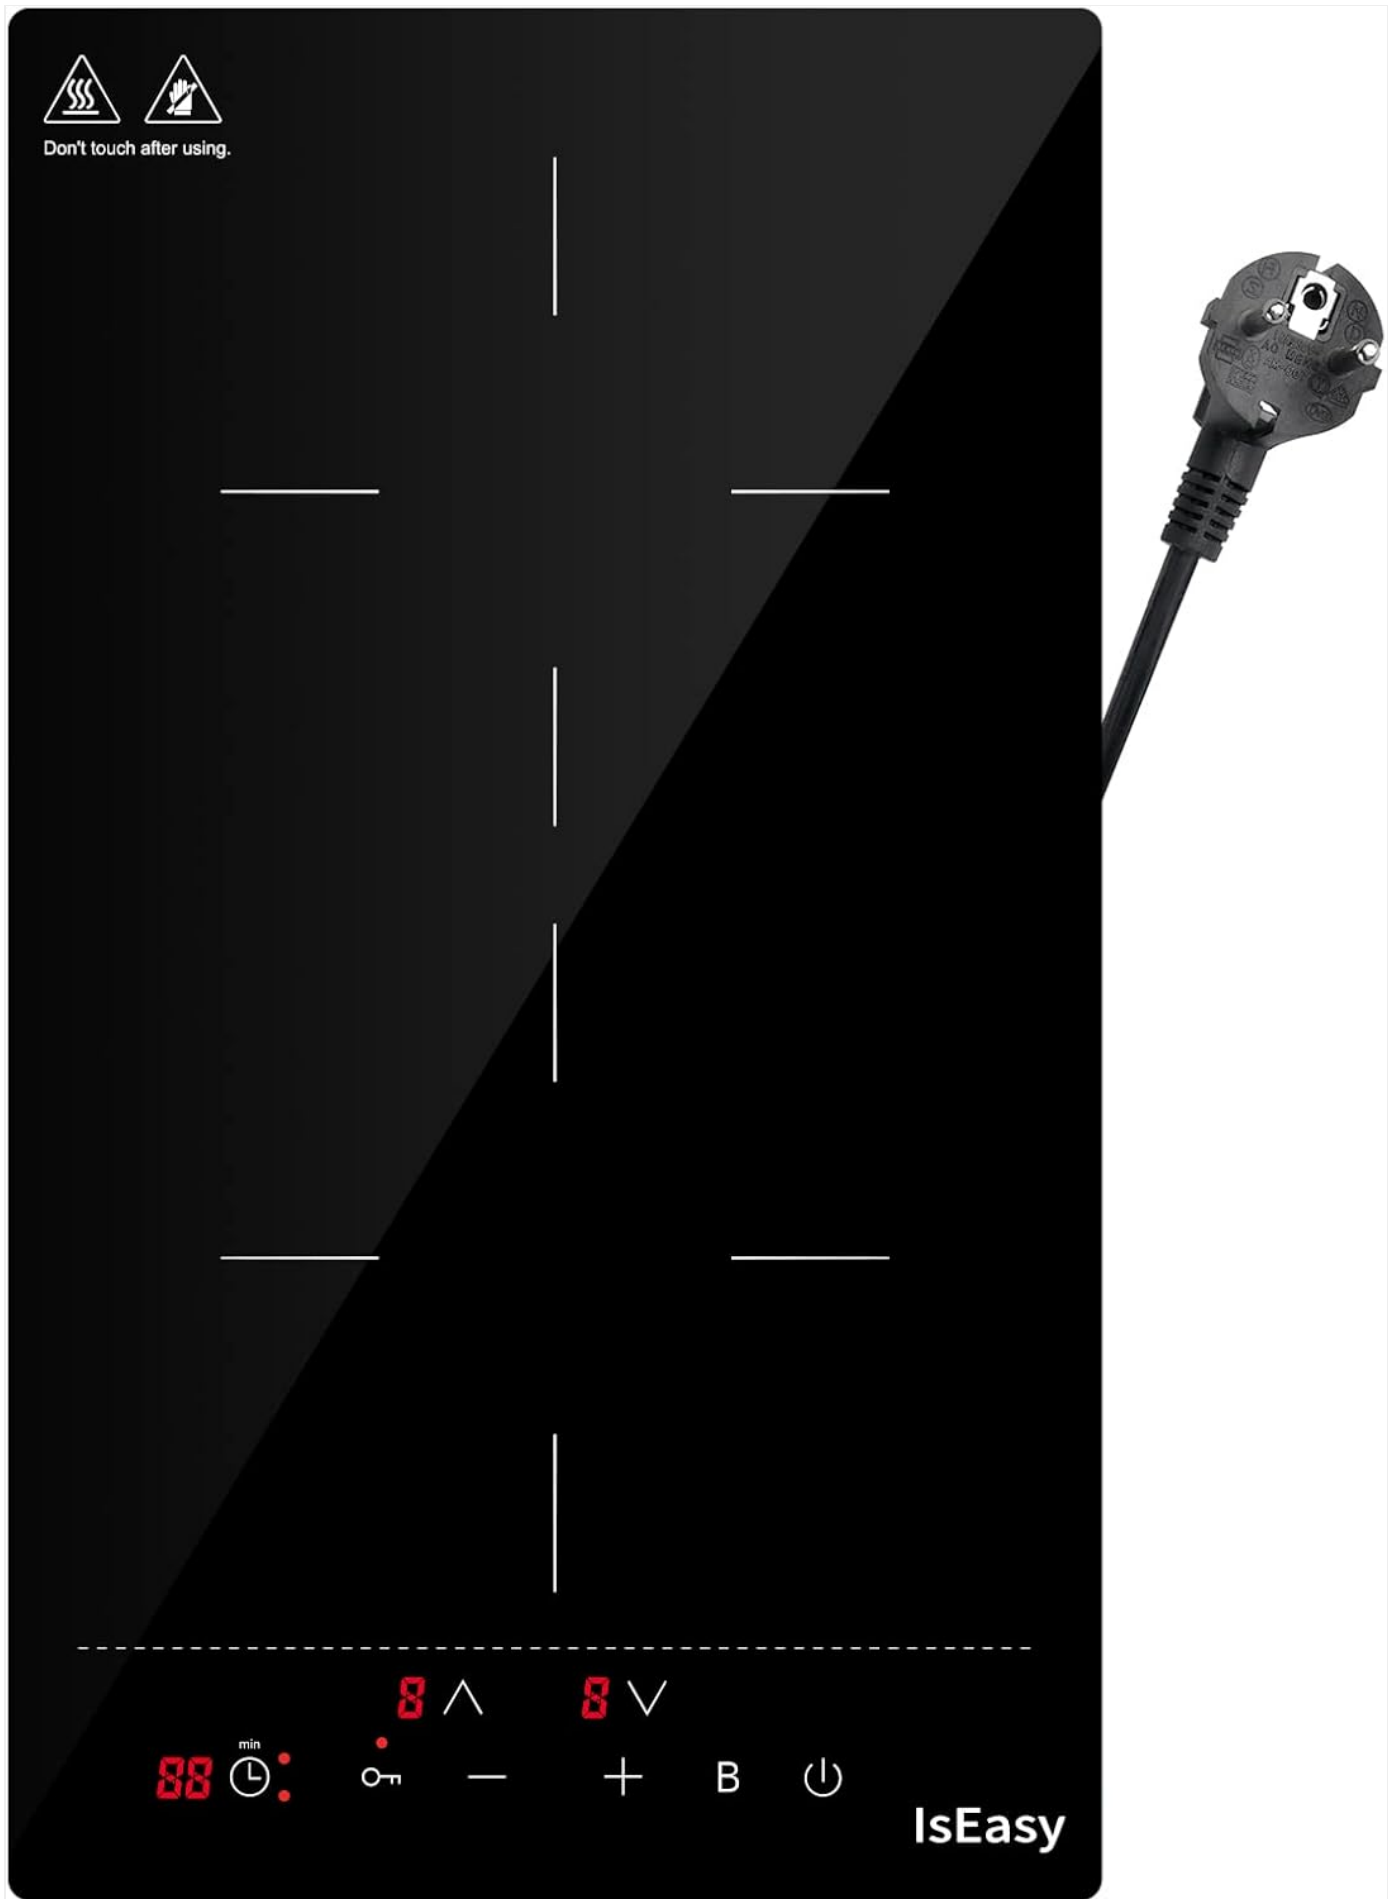


Image: Front view of the IsEasy 4400W Portable Induction Cooktop, showcasing its sleek black glass surface and touch controls. A power plug is visible on the right side.

BLOQUEOS PARA NIÑOS

Manteniendo a su familia segura



Image: A hand lifting a pot lid from a cooktop, illustrating energy-efficient cooking with precise heating to reduce energy loss.

IMPORTANT SAFETY INSTRUCTIONS

To prevent injury or damage, always observe the following safety precautions:

- **Overheating Protection:** The cooktop is equipped with an automatic overheating protection system. If the temperature exceeds safe limits, the unit will shut down automatically.
- **Child Safety Lock:** Activate the child safety lock to prevent accidental operation by children.
- **Hot Surface Indicator:** An 'H' indicator will appear on the display to warn that the cooking zone is still hot after use. Avoid touching the surface until the indicator disappears.
- **Automatic Shut-off:** The cooktop will automatically turn off if no cookware is detected or after a prolonged period of inactivity.
- **Cookware Detection:** Ensure only induction-compatible cookware is used. The cooktop will not operate with non-compatible pots or pans.
- **Ventilation:** Ensure adequate ventilation around the cooktop during operation. Do not block air vents.

- **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Do not place near flammable materials.



Image: A child looking at the induction cooktop with a child lock icon overlaid, illustrating the child safety feature.

SETUP AND INSTALLATION

The IsEasy 4400W Induction Cooktop is designed for either countertop use or built-in installation.

Dimensions:

Product Dimensions: 51 cm (Length) x 29.5 cm (Width) x 6.9 cm (Height)

Cut-out Dimensions (for built-in): Approximately 49 cm (Length) x 27 cm (Width)

DE ENCIMERA/ DISEÑO EMPOTRADO



Image: Diagram showing the dimensions of the induction cooktop and the required cut-out size for built-in installation on a kitchen counter.

Installation Steps:

1. Ensure the installation area is clean, dry, and has adequate clearance for ventilation.
2. For built-in installation, prepare a countertop cut-out according to the specified dimensions (49 cm x 27 cm).
3. Carefully place the induction cooktop into the prepared opening or onto a stable countertop.
4. Connect the power plug to a suitable 220-240V AC power outlet.
5. Verify that the ventilation fan at the bottom of the unit is not obstructed.

OPERATING INSTRUCTIONS

Compatible Cookware:

The IsEasy Induction Cooktop requires cookware with a magnetic base. Compatible materials include iron, stainless steel, and alloy pans. Cookware diameter should be between 12-26 cm.

Compatible: Magnetic pots, cast iron pans, stainless steel pots, iron pots.

Incompatible: Glass pots, copper pots, ceramic vessels, aluminum pots.

COMPATIBILIDAD

Utensilios de cocina de inducción magnética 12-26cm



Olla magnética



Sartén de
hierro fundido



Bote de vidrio



Olla de cobre



Olla de
hierro fundido



Olla de
acero inoxidable



Vasija
de cerámica



Olla
de aluminio

Image: Visual guide showing compatible cookware types (magnetic pot, cast iron pan, stainless steel pot, iron pot) and incompatible types (glass pot, copper pot, ceramic vessel, aluminum pot) for induction cooking.



Image: A hand holding a magnet to the bottom of a pot, demonstrating how to test for induction compatibility.

Touch Control Panel:

The cooktop features a sensitive touch control panel for easy operation.



Image: Close-up of the induction cooktop's touch control panel, highlighting buttons for power, timer, child lock, booster, and power level adjustments.

Functions:

- **Power On/Off:** Press the power button () to turn the unit on or off.
- **Power Levels (1-9):** Each cooking zone has 9 adjustable power levels. Use the '+' and '-' buttons to increase or decrease the heat intensity.
- **Booster Function (B):** Press the 'B' button to activate the booster function for rapid heating. This provides up to 2000W per burner for 5 minutes.
- **Timer (0-99 minutes):** Set a cooking timer for each zone independently, from 0 to 99 minutes.
- **Child Lock:** Activate the child lock to prevent unintended changes to settings or accidental activation.

FÁCIL DE LIMPIAR

Superficie de vidrio, limpie suavemente como siempre



Image: A couple cooking on the induction cooktop, illustrating the use of 9 power levels for precise temperature control.

EFICIENCIA ENERGÉTICA

El calentamiento preciso reduce las pérdidas de energía



Image: Graphic illustrating the booster function, showing power increasing from 1800W to 2000W per burner for faster heating.

CARE AND MAINTENANCE

The glass surface of the IsEasy Induction Cooktop is designed for easy cleaning.

- Always ensure the cooktop is cool and unplugged before cleaning.
- Wipe the glass surface with a soft cloth and a mild detergent.
- For stubborn stains, use a ceramic hob scraper, but avoid abrasive cleaners or scouring pads that could scratch the surface.
- Do not immerse the cooktop in water or spray water directly onto it.
- Regularly check and clean the ventilation openings to ensure proper airflow.

QUEMADOR DE ALTA POTENCIA

Booster durante 5 minutos

1800W
Booster:2000W

1800W
Booster:2000W



Image: A person wearing gloves cleaning the black glass surface of the induction cooktop with a soft cloth and spray cleaner, demonstrating ease of cleaning.

TROUBLESHOOTING GUIDE

If you encounter issues with your induction cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not properly connected.	Check if the cooktop is plugged in and the power outlet is functional.
'E' error code or no heating.	Incompatible cookware; no cookware detected; cookware too small/large.	Use induction-compatible cookware with a diameter between 12-26 cm. Ensure the pot is centered on the cooking zone.

Problem	Possible Cause	Solution
Cooktop shuts off during operation.	Overheating protection activated; prolonged inactivity.	Allow the unit to cool down. Ensure ventilation is not blocked. If no cookware is present, the unit will automatically shut off.
Unusual noise during operation.	Normal fan operation; resonance from certain cookware.	A low humming sound from the cooling fan is normal. Some cookware may produce a slight buzzing sound due to vibration; this is not a defect.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model	4400W
Brand	IsEasy
Power (Total)	4000W (2 x 2000W burners)
Voltage	AC 220-240V
Number of Burners	2
Power Levels	9 per zone
Timer	0-99 minutes
Product Dimensions	51 cm (L) x 29.5 cm (W) x 6.9 cm (H)
Cut-out Dimensions	49 cm (L) x 27 cm (W)
Material	Glass
Special Features	Portable, Timer, Booster Function, Child Safety Lock, Overheating Protection, Automatic Shut-off

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the retailer. For technical support or service inquiries, please contact IsEasy customer service through their official channels.

You can visit the IsEasy store for more information: [IsEasy Store](#)

