

Glem GFXV21BK-S2

Glem GFXV21BK-S2 Electric Gas Oven User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Glem GFXV21BK-S2 Electric Gas Oven. Please read these instructions carefully before installation, operation, or maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure the oven is installed by a qualified technician in accordance with local regulations.
- Do not allow children to operate or play near the oven.
- Always use oven mitts when handling hot dishes or oven components.
- Do not store flammable materials in or near the oven.
- Never use water to extinguish a grease fire; use a dry chemical extinguisher or baking soda.
- Ensure adequate ventilation when using the gas function.
- Disconnect the appliance from the power supply before cleaning or maintenance.

3. PRODUCT OVERVIEW

The Glem GFXV21BK-S2 is a multifunction electric and gas oven designed for versatile cooking. It features an electric grill, a ventilated gas oven, and a 63-liter cavity. The interior is coated with Titanium enamel for durability and ease of cleaning, complemented by a removable full-glass inner door and chromed side racks. For user convenience, it includes a minute minder and a triple-glazed cool-touch door with a tangential cooling system.



This image displays the front of the Glem GFXV21BK-S2 oven. It features a sleek black design, three control knobs for temperature, timer, and function selection, and a large glass door for viewing the oven interior. The Glemgas logo is visible at the bottom.

4. SETUP AND INSTALLATION

Installation of this appliance must be carried out by a qualified professional in compliance with all applicable local and national regulations for gas and electrical installations. Incorrect installation can lead to hazards and void the warranty.

4.1 Electrical Connection

Ensure the electrical supply matches the voltage and frequency specified on the appliance rating plate. The oven must be properly earthed.

4.2 Gas Connection

Connect the oven to the gas supply using approved flexible or rigid piping. Check for gas leaks using a soapy water solution; never use an open flame.

4.3 Ventilation

Ensure adequate ventilation in the kitchen area, especially when using the gas oven function, to prevent the buildup of combustion byproducts.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control knobs before operating the oven.

5.1 Control Knobs

- **Temperature Knob:** Used to select the desired cooking temperature for both electric and gas functions.
- **Function Selector Knob:** Used to choose between different cooking modes, such as gas oven, electric grill, or ventilated cooking.
- **Minute Minder:** A mechanical timer that can be set for up to 60 minutes to alert you when cooking time is complete. It does not control the oven's operation.

5.2 First Use

Before first use, remove all packaging materials and accessories. Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure good ventilation during this process.

5.3 Cooking Modes

- **Gas Oven:** Ideal for traditional baking and roasting. The ventilation system ensures even heat distribution.
- **Electric Grill:** Use for grilling, toasting, or browning dishes. Position food on the upper racks for best results.
- **Ventilated Cooking:** Combines heat with a fan for faster and more even cooking, suitable for multiple dishes simultaneously.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

6.1 General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Wipe the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- Clean the interior with a damp cloth and a non-abrasive oven cleaner suitable for Titanium enamel.

6.2 Removable Full-Glass Inner Door

The inner glass panel can be removed for thorough cleaning. Consult a service technician or the full product manual for specific instructions on removal and reinstallation to avoid damage.

6.3 Accessories

The oven grid and baking tray can be washed with warm soapy water or in a dishwasher.

7. TROUBLESHOOTING

Before contacting customer service, review the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven not heating	No power supply; Gas supply off; Incorrect settings	Check power connection and circuit breaker; Ensure gas valve is open; Verify function and temperature settings.
Oven light not working	Bulb faulty or loose	Replace the bulb (ensure oven is cool and disconnected from power).
Uneven cooking	Incorrect rack position; Overcrowding; Door opened too frequently	Use recommended rack positions; Avoid overcrowding; Minimize opening the door during cooking.

8. SPECIFICATIONS

- **Model:** GFXV21BK-S2
- **Brand:** Glem
- **Type:** Multifunction Electric and Gas Oven
- **Energy Class:** A
- **Cavity Volume:** 63 liters
- **Interior:** Titanium Enamel
- **Door:** Triple-glazed, cool-touch, removable full-glass inner door
- **Cooling System:** Tangential
- **Features:** Electric grill, ventilated cooking, minute minder, chromed side racks
- **Included Accessories:** 1 oven grid, 1 MAXI baking tray

9. WARRANTY AND SUPPORT

For warranty claims, returns, or technical support, please refer to the retailer's specific policies or contact Glem customer service directly. Standard return policies typically apply for products within 30 days of receipt if you change your mind. For defective or damaged products, specific assistance and repair services are available.

Please have your model number (GFXV21BK-S2) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question