



[Manuals.plus](#) /

> [MCombo](#) /

> MCombo 3 Seat Patio Swing Chair Model 4090 Instruction Manual

MCombo 4090

MCombo 3 Seat Patio Swing Chair (Model 4090) Instruction Manual

Adjustable Canopy, Weather Resistant Steel Frame

1. INTRODUCTION

Thank you for choosing the MCombo 3 Seat Patio Swing Chair, Model 4090. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new patio swing. Please read these instructions carefully before assembly and retain them for future reference.

2. SAFETY INFORMATION

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 750 lbs (approximately 340 kg). This swing is designed for up to three adults.
- **Assembly:** Ensure all parts are correctly assembled and tightened according to the instructions. Improper assembly can lead to instability and injury.
- **Placement:** Place the swing on a flat, stable surface. Avoid uneven ground or slopes.
- **Weather Conditions:** While weather-resistant, it is recommended to secure or store the canopy and cushions during strong winds or severe weather to prevent damage.
- **Children:** Supervise children when they are using the swing. Do not allow them to stand on the seat or engage in rough play.
- **Inspection:** Regularly inspect all bolts, nuts, and connections for tightness. Re-tighten as necessary. Check for any signs of wear or damage to the frame, fabric, or springs.
- **Sharp Objects:** Keep sharp objects away from the swing fabric to prevent tears.

3. PACKAGE CONTENTS

Your MCombo Patio Swing Chair is shipped in two boxes. Please ensure all components are present

before beginning assembly. If any parts are missing or damaged, contact customer support.

Components List:

- Steel Frame Components (legs, crossbars, canopy supports)
- Swing Seat Frame
- Canopy Fabric
- Seat Cushions and Backrests
- Springs and Hanging Chains
- Hardware Kit (bolts, nuts, washers, wrenches)
- Side Trays (if applicable)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly typically requires two adults and takes approximately 30 minutes. Follow the numbered steps in the included diagrammatic instructions for best results. Use the provided hardware and tools, or your own tools for easier assembly.

General Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Base Frame:** Connect the main leg sections and crossbars to form the base of the swing. Secure with bolts and nuts, but do not fully tighten yet.
3. **Attach Upright Supports:** Fasten the upright supports to the base frame.
4. **Assemble Swing Seat:** Construct the swing seat frame and attach the hanging chains.
5. **Hang Swing Seat:** Carefully lift and attach the swing seat to the upright supports using the provided springs and hooks.
6. **Install Canopy Frame:** Assemble the canopy frame and attach it to the top of the main frame.
7. **Attach Canopy Fabric:** Secure the canopy fabric to the canopy frame.
8. **Place Cushions:** Position the seat cushions and backrests onto the swing seat.
9. **Final Tightening:** Once all components are in place, systematically tighten all bolts and nuts securely. Do not overtighten.



Image: Front view of the assembled MCombo 3 Seat Patio Swing Chair in dark grey.



Image: Diagram illustrating the thickened steel frame construction for enhanced durability.

5. OPERATING INSTRUCTIONS

Using the Swing:

- Gently sit on the swing seat. Avoid sudden movements or excessive force when swinging.
- Ensure weight is distributed evenly across the seat.

Adjusting the Canopy:

The canopy can be adjusted to provide optimal shade. Locate the adjustment knobs on either side of the canopy frame. Loosen the knobs, position the canopy to your desired angle (up to 45 degrees), and then tighten the knobs to secure it.



Image: Close-up view of the adjustable canopy mechanism, showing how to rotate and secure the canopy.

Converting to a Flatbed:

This swing features a 2-in-1 design, allowing it to convert into a flatbed. To convert:

1. Ensure no one is on the swing.
2. Locate the lock and release system mechanism, typically on the sides of the swing seat.

3. Follow the specific instructions in your diagrammatic manual to unlock and recline the backrest until it forms a flat surface with the seat.
4. Ensure the recline mechanism is securely locked in the flat position before use.



Image: The MCombo swing chair converting from a seated position to a flatbed, with a person relaxing on it.

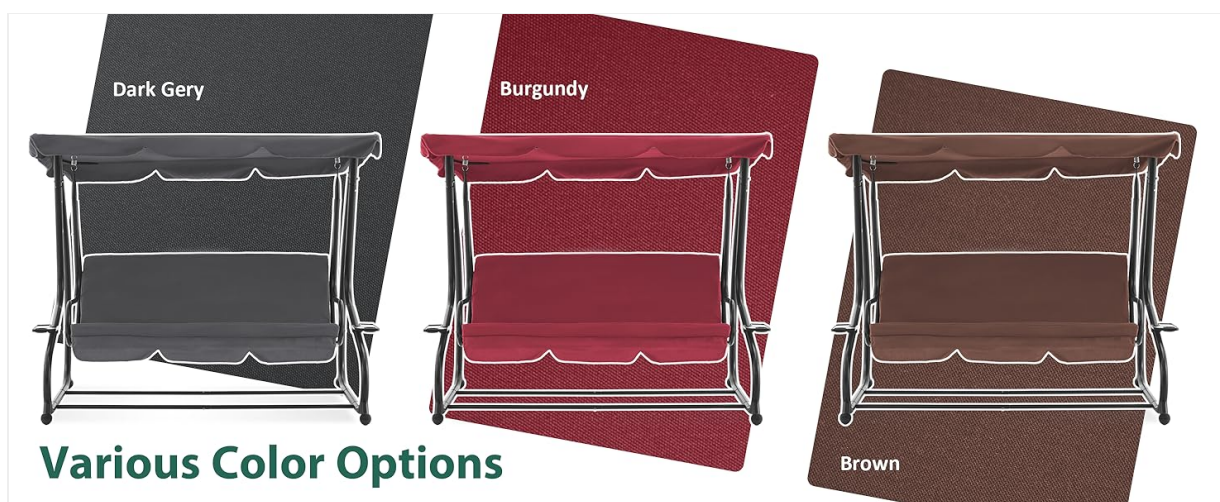


Image: A visual representation of the swing's 2-in-1 design, showing its transformation from a swing to a flatbed.

6. MAINTENANCE

Cleaning:

- **Frame:** Wipe the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry to prevent rust.
- **Fabric (Canopy & Cushions):** The thickened polyester fabric is UV light-resistant and waterproof. Clean with a soft brush, mild soap, and water. Allow to air dry completely. Do not use harsh chemicals or abrasive cleaners.
- The seat cushions are detachable for easier cleaning and storage.



Image: Close-up of the thickened polyester fabric, highlighting its UV light-resistant and waterproof properties.

Detachable Seat Cushion

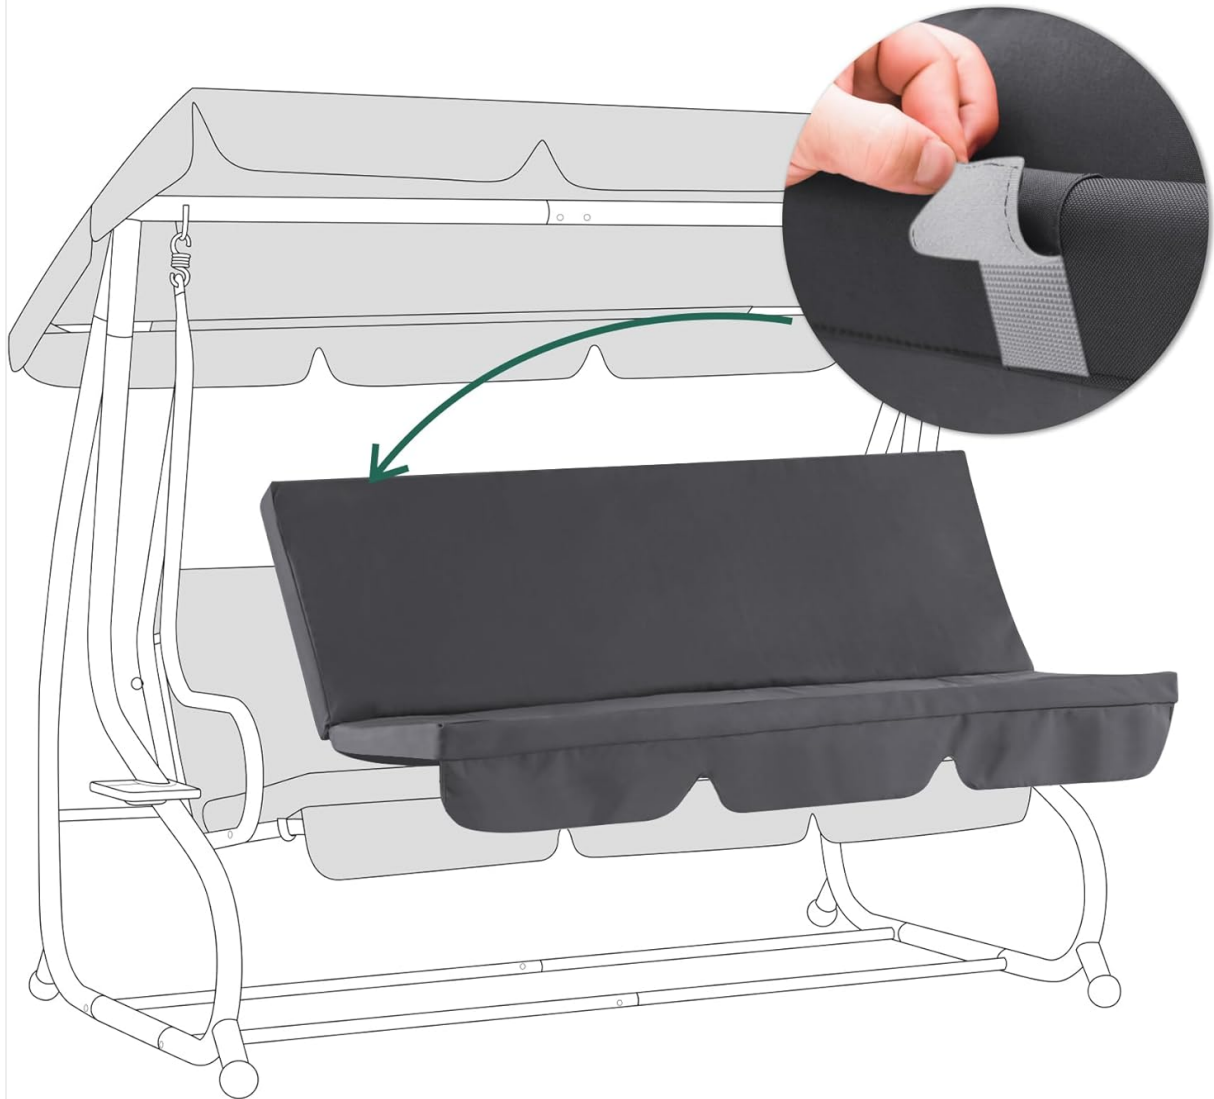


Image: Diagram illustrating the detachable seat cushion feature for easy removal and cleaning.

Storage:

During off-season or prolonged periods of non-use, it is recommended to store the cushions and canopy indoors in a dry place. If possible, cover the entire swing with a weather-resistant cover to protect the frame.

7. TROUBLESHOOTING

- **Swing feels unstable:** Check all bolts and nuts to ensure they are securely tightened. Verify the swing is placed on a flat, level surface.
- **Canopy does not stay in position:** Ensure the adjustment knobs on the canopy frame are fully tightened after positioning.
- **Difficulty converting to flatbed:** Ensure the lock and release mechanism is fully disengaged before attempting to recline the backrest. Do not force the mechanism.
- **Squeaking noise during swinging:** Apply a silicone-based lubricant to the springs and pivot points of the swing mechanism. Avoid oil-based lubricants that can attract dirt.

8. SPECIFICATIONS

Brand	MCombo
Model Number	4090
Color	Dark Grey
Material	Polyester (Fabric), Alloy Steel (Frame)
Product Dimensions (D x W x H)	49"D x 77"W x 65"H (124.5 cm D x 195.6 cm W x 165.1 cm H)
Seat Depth	20 inches (50.8 cm)
Item Weight	91.5 Pounds (41.5 kg)
Maximum Weight Recommendation	750 Pounds (340 kg)
Maximum Compatible Number of Seats	3
Frame Material	Alloy Steel with Powder Coated Finish
Required Assembly	Yes

Weight Capacity: **750 lbs**



Image: Detailed dimensions of the MCombo 3 Seat Patio Swing Chair, including height, width, and depth.

9. WARRANTY AND SUPPORT

MCombo products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official MCombo website. If you have any questions, require replacement parts, or need assistance with assembly or operation, please contact MCombo customer support. Contact information can typically be found on the product packaging or the MCombo brand store on Amazon.

MCombo is committed to providing the best solution within 24 hours for any inquiries regarding your swing.