

[Manuals.plus](#) /

› [Midea](#) /

› Midea Front Load Washer Dryer MF200D150WB/T User Manual

Midea MF200D150WB/T

Midea Front Load Washer Dryer User Manual

Model: MF200D150WB/T

PRODUCT OVERVIEW

The Midea MF200D150WB/T is a versatile front-load washer dryer designed for efficient and convenient laundry care. It features a washing capacity of 15 kg and a drying capacity of 8 kg, making it suitable for various household needs. Equipped with advanced technologies such as the Inverter Quattro motor for energy efficiency and quiet operation, and MSmart (Wi-Fi) functionality for remote control, this appliance offers a modern laundry experience.

Key features include HealthGuard for sterilization, a user-friendly Lunar Dial for program selection, and an Add Garment function to pause and add items during a cycle. It offers 14 wash programs and 6 dry programs, including a quick 15-minute wash and a 1-hour wash and dry option.



Figure 1: Front view of the Midea MF200D150WB/T Front Load Washer Dryer, showcasing its sleek design and central control panel.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your Midea washer dryer. Please follow these guidelines carefully.

1. Unpacking

- Carefully remove all packaging materials, including polystyrene foam and plastic wrapping.
- Remove any transport bolts or shipping braces from the rear of the appliance. Refer to the installation guide for specific instructions on transport bolt removal.

2. Location Requirements

- Place the appliance on a firm, level surface to minimize vibration and noise during operation.
- Ensure adequate ventilation around the appliance. Do not block air vents.
- The location should have access to cold water supply, a drain, and a grounded electrical outlet.

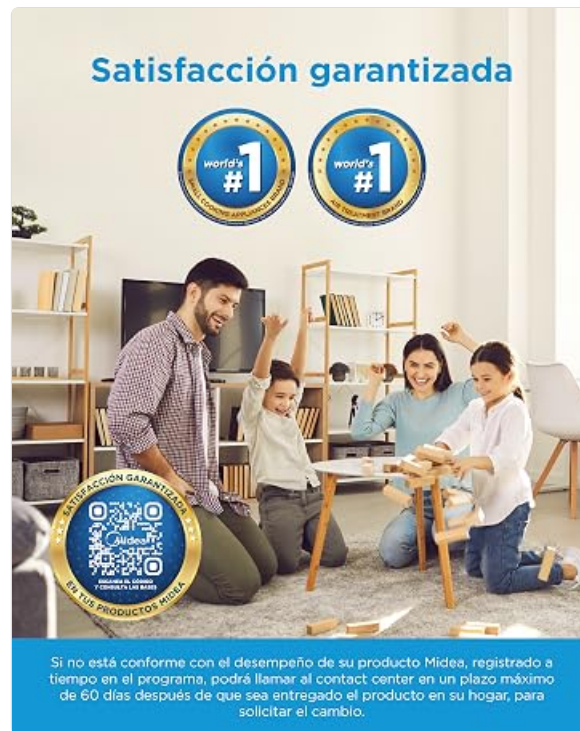


Figure 2: Example of a suitable installation environment for the Midea washer dryer, showing proper spacing and access.

3. Connecting Water and Drain

- Connect the water inlet hose(s) to the corresponding cold water tap. Ensure connections are tight to prevent leaks.
- Securely attach the drain hose to a standpipe or laundry tub, ensuring it is properly positioned to prevent backflow.

4. Electrical Connection

- Connect the power cord to a grounded 127 Volt electrical outlet. Do not use extension cords or adapters.
- Ensure the electrical supply matches the appliance's requirements.

5. Leveling the Appliance

- Use a spirit level to check if the appliance is perfectly level.
- Adjust the leveling feet at the bottom of the appliance until it is stable and level on all sides. This helps prevent excessive vibration during spin cycles.



Figure 3: Side view of the appliance, illustrating its compact design suitable for various spaces. Dimensions are 59.5 cm (width) x 59.5 cm (depth) x 85 cm (height).

OPERATING INSTRUCTIONS

This section provides detailed instructions on how to operate your Midea washer dryer for optimal results.

1. Control Panel and Lunar Dial

The central Lunar Dial allows for intuitive selection of wash and dry programs. The display provides information on cycle time, selected options, and status.

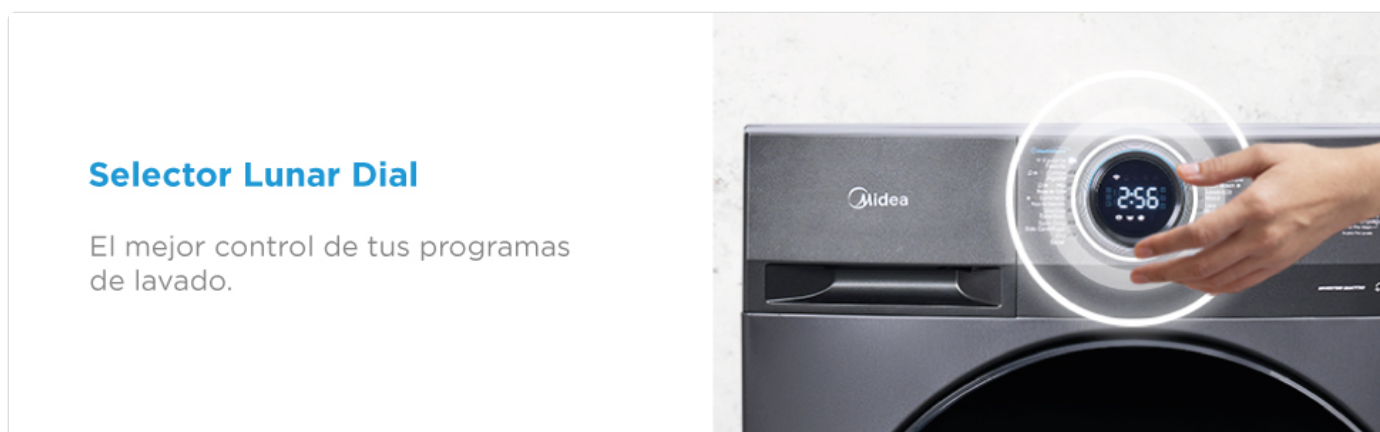


Figure 4: The Lunar Dial, providing easy and precise control over all washing and drying programs.

2. Loading Laundry

- Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely.
- The maximum washing capacity is 15 kg, and the maximum drying capacity is 8 kg.
- For best drying results, do not load more than the specified drying capacity.

3. Detergent Dispenser

The multi-dispenser drawer is designed for liquid detergent, powder detergent, and fabric softener. Add the appropriate amount of each product to its designated compartment before starting a cycle.

Multidispensador

El espacio suficiente para detergente y suavizante.

Incluye cepillo para limpieza de multidispensador de detergente.

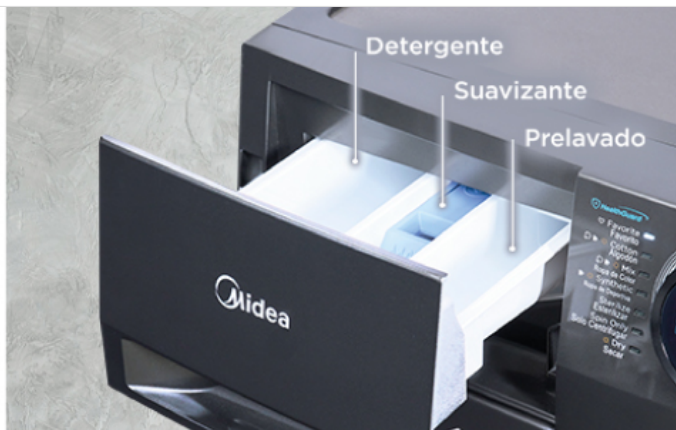


Figure 5: The multi-dispenser, clearly labeled for liquid detergent, powder detergent, and fabric softener.

4. Program Selection

Turn the Lunar Dial to select one of the 14 wash programs or 6 dry programs. Common programs include:

- **Quick Wash 15'**: For lightly soiled items needing a fast wash.
- **Wash & Dry in 1Hr**: A convenient option for small loads requiring both washing and drying.
- **HealthGuard**: Utilizes Steam Care, Auto Clean, and Drum Clean functions for enhanced hygiene and sterilization.
- Various temperature settings: Automatic, 30°, 60°, 90°, 120°, 180°.

5. Special Functions

- **MSmart (Wi-Fi)**: Connect your appliance to your smartphone via Wi-Fi to control and monitor cycles remotely. Compatible with Android and Apple devices.
- **Add Garment**: Pause the cycle to add forgotten items without interrupting the program.
- **Turbo Mode**: Save up to 40% of washing time with the same cleaning performance.



Modo Normal u Opción Turbo

Ahorra hasta el 40% de tiempo con el mismo desempeño de lavado.

Figure 6: Visual representation of the Turbo mode, indicating faster wash times.

6. Starting a Cycle

After selecting the program and options, press the Start/Pause button to begin the cycle. The display will show the remaining time.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your Midea washer dryer.

1. Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

2. Cleaning the Drum

- Utilize the **Drum Clean** function regularly to prevent odor and residue buildup inside the stainless steel drum.
- Leave the door slightly ajar after each use to allow the drum to air dry.

3. Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water to remove any detergent or softener residue.
- Clean the dispenser housing with a brush if necessary.

4. Cleaning the Filter

- Periodically check and clean the drain pump filter, typically located at the bottom front of the appliance. This prevents blockages and ensures proper drainage.
- Refer to the detailed diagram in your physical manual for exact filter location and cleaning steps.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start.	No power supply; Door not closed properly; Program not selected.	Check power cord connection and circuit breaker. Ensure the door is securely latched. Select a program and press Start.
Water not filling or draining.	Water tap closed; Inlet hose kinked; Drain hose blocked or kinked; Filter clogged.	Open water tap. Straighten hoses. Clean the drain pump filter.
Excessive vibration or noise during spin.	Appliance not level; Transport bolts not removed; Uneven load.	Adjust leveling feet to ensure the appliance is stable. Verify all transport bolts have been removed. Redistribute laundry evenly inside the drum.
Clothes not drying properly.	Overloaded dryer; Lint filter clogged; Incorrect drying program.	Reduce load size. Clean the lint filter. Select an appropriate drying program for the fabric type.
Display shows an error code.	Specific malfunction.	Refer to your full user manual for a list of error codes and their corresponding solutions. If the issue persists, contact customer support.

SPECIFICATIONS

Technical specifications for the Midea MF200D150WB/T Washer Dryer.

Feature	Detail
Model Number	MF200D150WB/T

Feature	Detail
Washing Capacity	15 Kilograms
Drying Capacity	8 Kilograms
Dimensions (W x D x H)	59.5 cm x 59.5 cm x 85 cm
Product Weight	73 Kilograms
Voltage	127 Volts
Maximum Spin Speed	1400 RPM
Noise Level (Operation)	63 dB
Number of Wash Cycles	14
Number of Dry Cycles	6
Drum Material	Stainless Steel
Motor Type	Inverter Quattro
Connectivity	Wi-Fi (Android, Apple compatible)
Special Features	Smart Connectivity, Programmable, Hygienic Steam

WARRANTY AND SUPPORT

Midea is committed to providing high-quality products and excellent customer service.

Warranty Information

- **10-Year Warranty** on the Inverter Quattro Motor.
- **2-Year Warranty** on all other parts, components, and the drum.



Figure 7: Midea's commitment to quality, highlighted by the 2-year total warranty and 10-year motor warranty.

Satisfaction Guarantee

If you are not satisfied with the performance of your Midea product, you may contact customer service within 60 days of delivery to your home to request an exchange. Please ensure your purchase is registered in time to qualify for this program.

Proyectos Icónicos



Estadios del Mundial Rusia 2018
Midea suministró HVAC a 7 de 12 estadios en el mundial de Rusia 2018.



Estadios de los Juegos Olímpicos de Río 2016
Midea proporcionó HVAC para todos los estadios de nueva construcción.

Figure 8: Scan the QR code for more details on Midea's satisfaction guarantee and product registration.

Customer Support

For further assistance, technical support, or warranty claims, please refer to the contact information provided in your product's packaging or visit the official Midea website. Always have your model number and purchase details ready when contacting support.

© 2024 Midea. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I operate the Midea MF200 dryer? My clothes are always wet after the drying cycle and I do not have a manual.

If your clothes are still wet after a cycle on your Midea MF200D150WB/T, it is often due to overloading or incorrect settings. Please follow these steps to ensure proper drying: Check the Load Size: While...

[Read full answer](#)