

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ekster](#) /

› [Ekster Parliament Wallet User Manual](#)

## **Ekster Parliament**

# **Ekster Parliament Wallet User Manual**

Brand: Ekster | Model: Parliament


## **INTRODUCTION**

Welcome to the user manual for your Ekster Parliament Wallet. This minimalist, RFID-blocking leather wallet is designed for efficiency and security, providing quick access to your cards and protecting your sensitive information. Crafted from premium materials, it offers a sleek solution for your daily essentials.

## **PRODUCT OVERVIEW**



The Ekster Parliament Wallet features a compact design with a patented card ejection mechanism. It includes a main cardholder, additional internal card slots, and a cash strap. The wallet is made from LWG-certified top-grain leather and 6063 T5 Aluminum, ensuring durability and a premium feel.

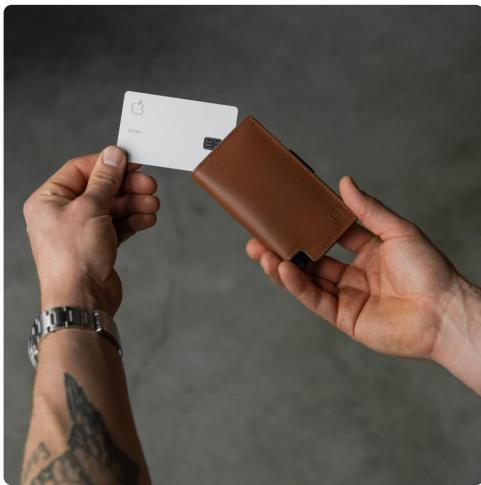

Designed for a perfect pocket fit, the Parliament wallet maintains a slim profile while offering ample storage. It can comfortably hold up to 10+ cards, with 4-6 cards securely stored in the RFID-protected cardholder, and additional space for other cards and bills.


## SETUP

### 1. Unboxing

Your Ekster Parliament Wallet comes securely packaged. Carefully remove the wallet from its box and any protective wrapping. Inspect the wallet for any signs of damage during transit.

### 2. Loading Cards

- **Main Cardholder:** Insert your most frequently used cards (up to 4-6, depending on card thickness and raised lettering) into the aluminum cardholder. Ensure they slide in smoothly. This section provides RFID protection.
- **Internal Card Slots:** The leather flap contains additional slots for less frequently accessed cards, such as ID or membership cards.
- **Cash Strap:** Utilize the elastic cash strap on the inside of the leather flap to secure folded banknotes.

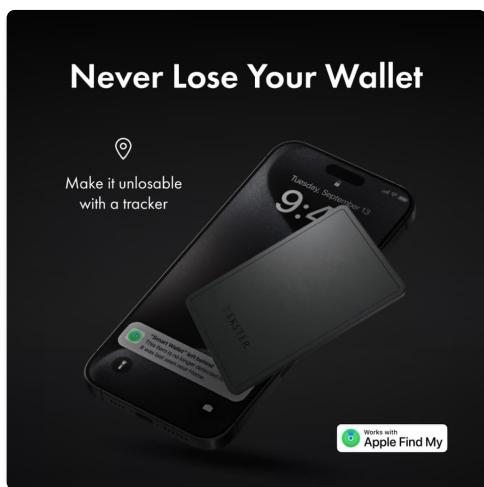

The image above illustrates the various compartments for card and cash storage within the Parliament wallet, highlighting its slim yet spacious design.

## OPERATING THE PARLIAMENT WALLET

### Quick Card Access

The Parliament Wallet features a patented push-button mechanism for instant card access. Simply push the trigger

located at the bottom of the wallet, and your cards will fan out, allowing you to easily select the one you need.

## Quick Card Access

No more struggles

⌚  
Fast-eject  
Trigger



This image demonstrates the quick card access feature, showing how the push-button trigger allows for effortless retrieval of your cards.

## RFID Blocking Technology

The main aluminum cardholder is equipped with RFID (Radio-Frequency Identification) blocking technology. This feature protects your sensitive card data from unauthorized scanning and wireless theft, ensuring your personal information remains secure.



The image above shows the interior of the wallet, emphasizing the integrated RFID-blocking technology within the cardholder.

## Optional Tracker Card Integration

The Ekster Parliament Wallet is designed to perfectly fit an Ekster Tracker Card (sold separately). This allows you to track your wallet using your smartphone, helping you locate it if misplaced or lost. The tracker card works with various Ekster wallet models and is compatible with Apple Find My.

# Perfect Pocket Fit

The Slimmest Smart Wallet



This image illustrates the integration of the optional Ekster Tracker Card with a smartphone, demonstrating how it can help prevent losing your wallet.

## MAINTENANCE AND CARE

To ensure the longevity and appearance of your Ekster Parliament Wallet, follow these care instructions:

- Cleaning:** Use a dry cloth to clean the leather and aluminum surfaces. Avoid using harsh chemicals or abrasive materials.
- Leather Care:** The wallet is crafted from premium top-grain leather. Over time, the leather will develop a unique patina. To maintain its quality, avoid prolonged exposure to direct sunlight, extreme temperatures, and excessive moisture. If the leather gets wet, gently blot it dry with a soft cloth and allow it to air dry naturally.
- Mechanism Care:** The card ejection mechanism is designed for durability. Avoid forcing cards into the holder or attempting to insert more than the recommended capacity, as this can strain the mechanism.

## TROUBLESHOOTING

If you encounter any issues with your Ekster Parliament Wallet, please refer to the common solutions below:

Issue	Possible Cause / Solution
Cards not ejecting smoothly or fully.	<b>Overload:</b> Ensure you are not exceeding the recommended capacity of 4-6 cards in the main cardholder. Too many cards, especially those with raised lettering, can impede the mechanism. <b>Card Type:</b> Some thicker or metal cards may not slide as easily. Try rearranging cards or using fewer of these types. <b>Mechanism Obstruction:</b> Check for any debris or foreign objects inside the cardholder that might be blocking the cards.
Wallet flap does not close entirely.	<b>New Wallet Stiffness:</b> This is common with new leather wallets. The leather needs time to break in and adapt to the contents. <b>Overstuffing:</b> Reduce the number of cards or bills in the internal slots and cash strap. <b>Natural Shaping:</b> After 1-2 weeks of regular use, the leather will soften and conform to your pocket, allowing the flap to close naturally.

## SPECIFICATIONS

**Brand:** Ekster

**Model:** Parliament

**Material:** Premium Top-Grain Leather (LWG-certified), 6063 T5 Aluminum

**Card Capacity:** Up to 10+ cards (4-6 in main cardholder)

**Features:** RFID Blocking, Patented Card Ejection Mechanism, Cash Strap, Optional Tracker Card Compatibility

**Care Instructions:** Dry Cloth Clean

**First Available:** April 20, 2022

## **WARRANTY AND SUPPORT**

---

Ekster is committed to providing high-quality products. Your satisfaction is our top priority. If you are not completely satisfied with your purchase, please contact Ekster customer support for assistance.

For detailed warranty information and support inquiries, please visit the official Ekster website or refer to the contact information provided with your product packaging.

**Note:** Depending on the number of cards and bills stored, the flap may not close entirely in the first weeks of use. After 1-2 weeks of usage, your wallet will take the natural shape of your pocket and will remain closed naturally.