

- Manuals.plus /
- > [Beyution](#) /
- > Beyution RAS13 ZN04290 Replacement Remote Control User Manual

Beyution WY--RAS13-ZN04290

Beyution RAS13 ZN04290 Replacement Remote Control User Manual

Model: WY--RAS13-ZN04290

PRODUCT OVERVIEW

This Beyution RAS13 ZN04290 replacement remote control is designed to function as a direct substitute for original remote controls compatible with various Yamaha Integrated Amplifier models. It operates using infrared technology and requires no complex programming or setup.



Image: The Beyution RAS13 ZN04290 replacement remote control, showing its full button layout and ergonomic design.

Key features include:

- **Direct Replacement:** No setup or programming is required; simply insert batteries.
- **Infrared Connectivity:** Utilizes standard infrared signals for communication with your amplifier.
- **Optimal Range:** Effective operating distance of up to 10 meters (approximately 33 feet).
- **Ergonomic Design:** Lightweight and comfortable to hold, with responsive buttons.

SETUP AND BATTERY INSTALLATION

The Beyution RAS13 ZN04290 remote control is designed for immediate use without any programming. Simply install the required batteries to begin operation.

Battery Requirements

- Two (2) AAA batteries are required.
- Alkaline batteries are recommended for optimal performance and longevity.

Installation Steps

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: The open battery compartment of the remote control, showing the slots for two AAA batteries.

Once batteries are installed, the remote control is ready for use with your compatible Yamaha Integrated Amplifier.

OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible Yamaha Integrated Amplifiers. Point the remote control directly at the infrared receiver on your amplifier for optimal performance.

Button Functions





The remote features standard controls for amplifier operation, including:

- **Power (AMP):** Turns the amplifier on or off.
- **Input Selection (CD, Coaxial, Optical, Line 1/2/3, Phono, Tuner):** Selects the desired audio input source.
- **Volume Control (+/-):** Adjusts the master volume level.
- **Mute:** Temporarily silences the audio output.
- **Pure Direct:** Activates or deactivates the Pure Direct mode for high-fidelity audio playback.
- **CD Controls (Open/Close, Play, Pause, Stop, Skip, Disc Skip):** For controlling a connected CD player.
- **Tuner Controls (Band, Tuning, Memory, Preset):** For controlling a connected tuner.

Operating Range

The remote control has an effective operating range of approximately 8 to 10 meters (26 to 33 feet) under normal conditions. Ensure there are no obstructions between the remote and the amplifier's infrared receiver.

Compatible Amplifier Models

This remote control is compatible with a wide range of Yamaha Integrated Amplifier models, including but not limited to:

- A-S301, A-S501, A-S501BL, A-S501SL, A-S301BL, A-S301U, A-S501U, A-S301R, A-S501L, A-S501J, A-S301J, A-S501T, A-S501A, A-S301T, A-S301G, A-S501G, A-S501R, A-S301L, A-S301A, A-S301k, A-S301B, A-S501B.

If your specific model is not listed, please refer to the product listing or contact customer support for compatibility verification.

MAINTENANCE AND CARE

Proper care and maintenance will ensure the longevity and reliable operation of your remote control.

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common troubleshooting steps:

1. Remote Not Responding:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with fresh AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the amplifier's infrared receiver.
- Confirm you are within the effective operating range (up to 10 meters).

2. Intermittent Functionality:

- This often indicates low battery power. Replace the batteries.
- Ensure the remote's infrared emitter (at the front tip) is clean and free of dust or debris.

3. Remote Does Not Control Amplifier:

- Verify that your Yamaha Integrated Amplifier model is listed as compatible.
- Ensure the amplifier is powered on and not in standby mode.

If these steps do not resolve the issue, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Remote Control Model	RAS13 ZN04290
Connectivity Technology	Infrared
Maximum Operating Distance	10 Meters (approx. 33 feet)
Material	ABS Plastic
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6.3 x 1.57 x 0.39 inches (16 x 4 x 1 cm)
Item Weight	2.82 ounces (80 grams)
Programming Required	No

WARRANTY AND SUPPORT

Warranty Information

This product comes with a 6-month warranty period from the date of purchase. This warranty covers manufacturing defects and ensures the remote control functions as described.

Customer Support

For any questions, concerns, or issues not covered in this manual, please contact our customer service team. If the remote control you receive is damaged or does not work, please reach out to us directly. Our customer service staff will provide a satisfactory solution within 24 hours.

Please refer to your purchase platform or packaging for specific contact details, or use the contact information provided by the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BMPPTN28>

More documents and user manuals: **<https://manuals.plus/>**