

[Manuals.plus](#) /

› [Alpha Motors](#) /

› Alpha Motors WSRE301 Navigator 1-Channel Roller Shade Remote Control User Manual

Alpha Motors WSRE301

Alpha Motors WSRE301 Navigator 1-Channel Roller Shade Remote Control User Manual

Model: WSRE301

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Alpha Motors WSRE301 Navigator 1-Channel Roller Shade Remote Control. Please read this guide thoroughly before using your remote to ensure proper functionality and longevity of the product.

PRODUCT OVERVIEW

The Alpha Motors WSRE301 Navigator is a single-channel remote control designed for operating Alpha Motors motorized roller shades. It features three primary buttons for shade control: Up, Stop/Favorite, and Down.





Image 1: Front view of the Alpha Motors WSRE301 Navigator remote control. It is white with three gray buttons: an upward arrow, a dot, and a downward arrow, arranged vertically. The Alpha logo is at the top.





Image 2: Back view of the Alpha Motors WSRE301 Navigator remote control. A label displays model WSRE301, frequency 433.92MHz, battery type CR:2032, and FCC ID: XFCWISTAR-RE302. A pull tab for battery activation is visible at the bottom.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. If present, remove the plastic pull tab to activate the pre-installed CR2032 battery.
3. If replacing the battery, gently open the compartment and insert a new CR2032 3V battery, ensuring correct polarity (+/-).
4. Close the battery compartment securely.

2. Pairing with Motorized Shade

The pairing process connects your remote control to your Alpha Motors motorized roller shade. Specific pairing instructions may vary slightly depending on your shade motor model. Refer to your shade motor's instruction manual for precise steps. A general pairing procedure is as follows:

1. Ensure your motorized shade is powered on.
2. Locate the programming button or sequence on your shade motor. This might be a small button on the motor head or a specific power cycle sequence.
3. Activate the motor's pairing mode (e.g., press the program button briefly, or follow the power cycle instructions). The motor may jog slightly or emit a sound to indicate it's in pairing mode.
4. Within a few seconds of activating pairing mode on the motor, press and hold the "Stop/Favorite" button (the middle dot button) on your WSRE301 remote until the shade jogs or responds, confirming successful pairing.
5. Test the remote by pressing the Up and Down buttons to ensure the shade responds correctly.

If the remote does not pair, ensure the battery is fresh and correctly installed, and repeat the pairing steps.

OPERATING INSTRUCTIONS

Once paired, your WSRE301 remote control provides simple operation for your roller shade:

- **Up Button (▲):** Press this button to raise the roller shade. Pressing it again will stop the shade.
- **Stop/Favorite Button (•):**
 - Press this button once to stop the shade at its current position.
 - If a favorite position has been set on your shade motor, pressing this button will move the shade to that pre-programmed position.
 - This button is also used for pairing and programming functions (refer to your shade motor manual for details on setting favorite positions).
- **Down Button (▼):** Press this button to lower the roller shade. Pressing it again will stop the shade.

MAINTENANCE

- **Battery Replacement:** When the remote's indicator light (if present) dims or the remote becomes unresponsive, it's time to replace the CR2032 3V battery. Follow the battery installation steps in the "Setup" section.
- **Cleaning:** To clean the remote control, use a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, but ensure no moisture enters the remote. The product care instructions specify "Spot Clean Only."

TROUBLESHOOTING

- **Remote Not Responding:**

- Check the battery. Replace with a fresh CR2032 battery if necessary.
- Ensure the remote is within range of the shade motor.
- Verify that the shade motor is powered on.
- **Shade Not Moving After Pairing:**
 - Re-attempt the pairing process as described in the "Setup" section.
 - Confirm that the shade motor is correctly installed and functioning independently.
- **Shade Moves Erratically:**
 - This could indicate interference. Try operating the remote closer to the shade.
 - Ensure no other devices are operating on the same frequency (433.92 MHz) nearby.

SPECIFICATIONS

Model Number:	WSRE301
Brand:	Alpha Motors
Control Type:	Remote
Channels:	1
Frequency:	433.92 MHz
Battery Type:	CR2032 (3V)
Product Dimensions:	5"L x 2"W (approximate)
Color:	White
Product Care:	Spot Clean Only
FCC ID:	XFCWISTAR-RE302

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your Alpha Motors WSRE301 Navigator remote control, please contact Alpha Motors customer service or refer to the documentation provided with your motorized roller shade system. Specific warranty terms may vary.

You may also visit the official Alpha Motors website for updated information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why will my Alpha Motors WSRE301 Navigator remote not pair with the motorized shade?

If your Alpha Motors WSRE301 Navigator remote is not pairing with your motorized shade, follow these troubleshooting steps based on the user manual and community feedback: Check the Battery: Ensure the plastic pull tab has...

[Read full answer](#)