

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Elegant 6.5L Air Fryer Instruction Manual

AGARO Elegant 6.5 Ltr

AGARO Elegant 6.5L Air Fryer Instruction Manual

Model: Elegant 6.5 Ltr (Model Number: 33896)

INTRODUCTION

Welcome to the world of healthier cooking with your new AGARO Elegant 6.5L Air Fryer. This appliance utilizes 360-degree air circulation technology to cook your favorite dishes with significantly less oil, offering a healthier alternative to traditional frying. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting.

PRODUCT OVERVIEW

The AGARO Elegant Air Fryer is designed for convenience and versatility, featuring a 6.5-liter capacity suitable for families. Its 1800W power ensures quick heating and uniform heat dispersion for consistent cooking results.

Key Features:

- **360-Degree Air Circulation Technology:** Enables grilling, baking, roasting, and reheating with less oil.
- **1800 Watts Power:** Heats the fryer within 2-3 minutes for quick meal preparation.
- **12 Preset Cooking Options:** Includes modes for Fish, Cake, Chicken Thigh, French Fries, Bacon, Roast, Chicken, Steak, Shrimp, Toast, Vegetables, and Keep Warm.
- **6.5 Litre Non-Stick Inner Frying Pot:** Provides ample cooking space and easy cleaning.
- **Manual Temperature Settings:** Adjustable from 80-200 degrees Celsius.
- **Manual Timer:** Adjustable from 1-60 minutes.
- **Touch Screen Technology:** Intuitive interface for selecting menu, time, and temperature.

Product Visuals:



Front view of the AGARO Elegant Air Fryer, showcasing its sleek black design.



The 6.5-liter inner bowl capacity, ideal for cooking whole chickens or large portions.



Visual representation of the 360-degree air circulation technology for even cooking.



The air fryer highlighted as a versatile 7-in-1 kitchen appliance for various cooking methods.

Product Video Overview:

Your browser does not support the video tag.

This video provides a brief overview of the AGARO Elegant Air Fryer's features and design.

Your browser does not support the video tag.

A short preview highlighting the key functionalities and ease of use of the air fryer.

SETUP

- Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.

2. **Initial Cleaning:** Before first use, clean the inner frying pot and removable tray with warm, soapy water. Wipe the exterior of the appliance with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space around the sides and back, and 20 cm (8 inches) above the appliance for proper air circulation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance.

OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the touch screen to turn on the appliance.
2. **Preheating (Optional but Recommended):** For best results, preheat the air fryer. Set the desired temperature (e.g., 180°C) and time (e.g., 3-5 minutes) and let it run empty.
3. **Prepare Food:** Place your ingredients in the non-stick inner frying pot. For optimal crispiness, a thin layer of oil can be brushed or sprayed onto the food. Do not overfill the basket.
4. **Insert Basket:** Carefully slide the frying pot back into the air fryer until it clicks into place.
5. **Select Cooking Mode:**
 - **Preset Modes:** Choose from the 12 available preset icons on the digital display for common dishes like French fries, chicken, fish, etc. The appliance will automatically set the recommended temperature and time.
 - **Manual Settings:** Alternatively, manually adjust the temperature using the temperature control buttons (80°C to 200°C) and the timer using the time control buttons (1 to 60 minutes).
6. **Start Cooking:** Press the start/pause button to begin the cooking process.
7. **Shake/Flip Food (Mid-Cycle):** For even cooking and browning, it is recommended to shake or flip the food halfway through the cooking time. Carefully pull out the frying pot, shake or flip the contents, and then reinsert the pot. The air fryer will resume cooking automatically.
8. **Completion:** The air fryer will beep when the timer reaches zero. Carefully pull out the frying pot and transfer the cooked food to a serving dish.
9. **Power Off:** Press and hold the power button to turn off the appliance. Unplug it from the wall socket after use.

Cooking Demonstration Video:

Your browser does not support the video tag.

This video demonstrates how to prepare various dishes like samosas and pizza pockets using the AGARO Elegant Air Fryer.

COOKING MODES AND SETTINGS

The AGARO Elegant Air Fryer features a digital touch screen with 12 preset cooking modes for your convenience. You can also manually adjust temperature and time to suit your recipes.

Digital Display and Controls:



Close-up of the digital display showing temperature, timer, and 12 preset cooking mode icons.

Preset Cooking Modes:

- Fish
- Cake
- Chicken Thigh
- French Fries
- Bacon
- Roast
- Chicken
- Steak
- Shrimp
- Toast
- Vegetables
- Keep Warm

Manual Settings:

- **Temperature Range:** 80°C - 200°C
- **Timer Range:** 1 - 60 minutes

Use the '+' and '-' buttons next to the temperature and time indicators to adjust settings manually. Press the corresponding icon to select a preset mode.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

1. **Inner Frying Pot and Removable Tray:** These parts are non-stick and can be washed with warm, soapy water. Avoid abrasive cleaning materials or metal utensils that could damage the non-stick coating. Rinse thoroughly and dry completely.
2. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other

liquid.

- 3. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food residue.
- 4. **Air Vents:** Ensure the air vents on the sides and back of the appliance are clear of any obstructions.
- 5. **Storage:** When not in use, ensure the appliance is clean and dry. The power cord can be neatly wound around the integrated cord winder at the back for tidy storage.

Note: The inner frying pot and removable tray are not dishwasher safe.



Dimensions of the AGARO Elegant Air Fryer for proper placement and storage.

TROUBLESHOOTING

If you encounter any issues with your AGARO Elegant Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power button not pressed; power outage.	Ensure the power cord is securely plugged into a working outlet. Press the power button. Check your household's power supply.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped.	Do not overload the basket. Shake or flip food halfway through cooking. Ensure proper spacing between food items.
White smoke coming from the appliance.	Greasy food residue; excessive oil; food with high fat content.	Clean the inner pot and heating element thoroughly. Use less oil. For fatty foods, drain excess oil from the bottom of the basket during cooking.
Food is not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before air frying. Ensure not to overcrowd the basket.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	AGARO
Model Name	Elegant
Item Model Number	33896
Capacity	6.5 Litres
Output Wattage	1800 Watts
Voltage	220 Volts (AC)
Control Method	Touch
Temperature Range	80°C - 200°C
Timer Range	1 - 60 Minutes
Special Feature	Temperature Control, 360 Degree Air Circulation
Material	Stainless Steel
Has Nonstick Coating	Yes
Is Dishwasher Safe	No (for inner pot/tray)
Product Dimensions	30D x 34W x 38H Centimeters
Item Weight	5.78 Kilograms

WARRANTY AND SUPPORT

The AGARO Elegant Air Fryer comes with a **2-year warranty**. For detailed warranty information, service requests, or further assistance, please refer to the product detail page on the retailer's website or contact AGARO customer support directly.

Manufacturer: Universal Corporation Limited

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question