

## Beyution XXD3033

# Beyution XXD3033 Replacement Remote Control User Manual

For Pioneer DVD Receiver Models

## 1. INTRODUCTION

---

This manual provides instructions for the Beyution XXD3033 replacement infrared remote control. This remote is designed to function as a direct replacement for the original remote controls of various Pioneer DVD Receiver models, offering similar functionality without complex setup.

### Compatible Models:

- XV-HTD50
- XV-HTD5
- XV-HTD320
- S-HTD320
- S-HTD50
- S-HTD5
- XV-HTD510
- S-HTD510
- HTD-510DV
- XV-HTD520
- S-HTD520
- XV-HTD1
- S-HTD1
- XV-HTD5100V
- XV-HTD510DV
- XV-HTD510DVA
- XVHTD520
- SHTD520
- XVHTD510
- SHTD510



Image 1.1: The Beyution XXD3033 replacement remote (left) compared to an original Pioneer remote (right).

## 2. SETUP

The Beyution XXD3033 remote control is designed for immediate use without requiring any programming or pairing. Simply install the batteries, and it will be ready to operate your compatible Pioneer DVD Receiver.

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

*Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance.*



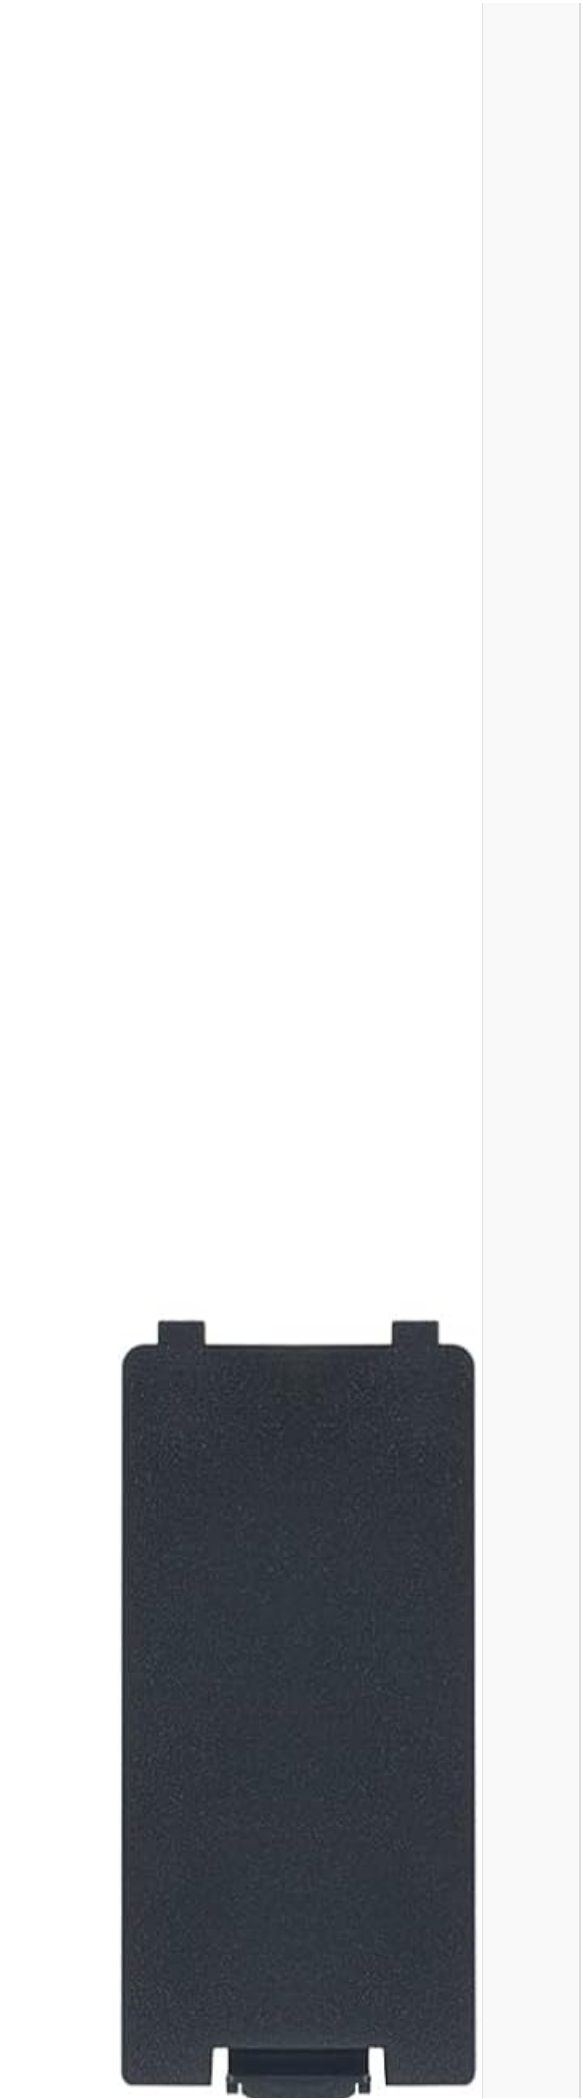




Image 2.1: Rear view of the remote control with the battery compartment open, showing battery placement.

### 3. OPERATING INSTRUCTIONS

---

The Beyution XXD3033 remote control operates using infrared technology, providing a stable and responsive connection to your Pioneer DVD Receiver. Its ergonomic design ensures comfortable handling.



#### 3.1 Basic Operation

- **Power On/Off:** Press the **STANDBY/ON** button to power your device on or off.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the audio level.
- **Channel/Track Navigation:** Use the directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) and **ENTER** for menu navigation and selection.
- **Playback Controls:** Utilize buttons such as **PLAY/PAUSE, STOP, PREV,** and **NEXT** for media playback.
- **Input Selection:** Buttons like **DVD/CD, TUNER/BAND,** and **TV/AUX** allow you to switch between different input sources.

The remote offers a transmitting distance of up to 10 meters (approximately 33 feet). Buttons are designed for responsive feedback with light pressure.



**Replace**

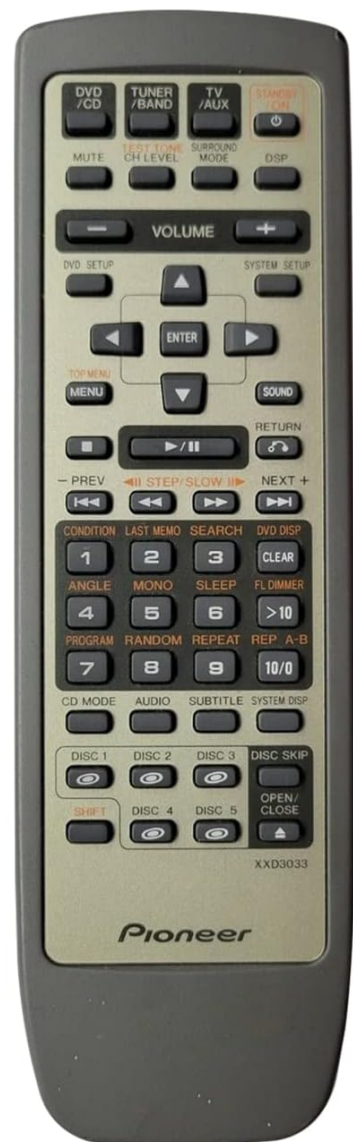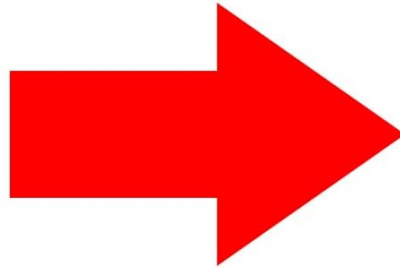

**Original**

Image 3.1: Front view of the Beyution XXD3033 replacement remote control, showing all buttons.

## 4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners, aerosols, or harsh chemicals, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

## 5. TROUBLESHOOTING

If you experience issues with your Beyution XXD3033 remote control, consider the following troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA alkaline batteries.
- Ensure there are no obstructions between the remote control and the infrared sensor on your Pioneer DVD Receiver.
- Confirm you are within the effective operating range (up to 10 meters).

- **Specific Buttons Not Working:**

- Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
- If only certain functions are affected, ensure your Pioneer DVD Receiver is in the correct mode (e.g., DVD mode for DVD functions).

- **Remote Appears Damaged:**

- If the remote control is physically damaged or continues to malfunction after troubleshooting, please contact customer support for assistance.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Beyution
Model Name	XXD3033
Connectivity Technology	Infrared
Color	Black
Special Feature	Ergonomic design
Maximum Range	10 Meters (33 Feet)
Number of Batteries Required	2
Battery Type	AAA Alkaline
Item Weight	80 Grams
Item Dimensions (L x W x H)	5"L x 1"W x 0.5"H

## 7. WARRANTY AND SUPPORT

**Warranty Period:** This product comes with a 1-year warranty from the date of purchase.

**Return Policy:** A 30-day return policy is typically available for refunds or replacements, subject to retailer terms.

**Customer Support:** If you have any questions, encounter issues, or require assistance with your Beyution XXD3033 remote control, please contact our customer service. Our support staff aims to provide a satisfactory solution within 24 hours.

Please refer to your purchase documentation for specific contact details or the retailer's support channels.

