

[Manuals.plus](#) /

› [etoolab](#) /

› etoolab Electric Spin Scrubber User Manual

etoolab Scrubber

etoolab Electric Spin Scrubber User Manual

Model: Scrubber

INTRODUCTION

The etoolab Electric Spin Scrubber is a versatile and efficient cleaning tool designed to simplify various household cleaning tasks. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your device to ensure optimal performance and longevity.

Key features include an adjustable long handle for extended reach, two-speed settings for different cleaning needs, a powerful rechargeable battery, and a waterproof design. The scrubber comes with multiple interchangeable brush heads, making it suitable for cleaning bathrooms, kitchens, floors, tiles, and more.

PACKAGE CONTENTS

Before you begin, please ensure all components are present in your package:

- Electric Spin Scrubber main unit
- Adjustable extension handle
- Dome Brush
- Large Flat Brush
- Corner Brush
- Small Flat Brush
- Mop Brush
- Charging cable (USB)
- User Manual

The **Best Gift** for Your Loved



Image: The etoolab Electric Spin Scrubber shown with its main unit, adjustable handle, and the five included brush heads: Dome, Large Flat, Corner, Small Flat, and Mop brushes.

SETUP

1. Initial Charging

It is recommended to fully charge the electric spin scrubber before its first use. Connect the charging cable to the scrubber and a suitable USB power adapter (not included). The charging indicator will show the charging status. A full charge typically takes approximately 2.5 hours.

2500mAh Fast Charging Battery

18650 Lithium Battery, Strong Stability and Long Service Life



2.5h Fast Charging



120 Mins Working Time



Overcharge Protect



Long life 1000 times



Image: An internal view of the scrubber handle highlighting the 2500mAh lithium battery, indicating 2.5 hours for fast charging and 120 minutes of working time.

2. Assembly

The scrubber can be used in a compact handheld mode or with the extension handle for longer reach. To assemble the extension handle, align the connection points and snap the sections together firmly. To attach a brush head, align the brush head with the rotating shaft on the main unit and press firmly until it clicks into place. Ensure the brush head is securely attached before use.

Designed to Improve **Cleaning Effect**

Low Speed for Daily Cleaning



Stable Spinning under Pressure



High Speed for Deep Cleaning



Image: The scrubber handle demonstrating its adjustable lengths: 63cm (24.8 inches), 120cm (47 inches), and 138cm (55 inches), allowing for comfortable cleaning without bending.

OPERATING INSTRUCTIONS

1. Selecting a Brush Head

Choose the appropriate brush head for your cleaning task:

- **Dome Brush:** Ideal for curved surfaces like bathtubs, sinks, and toilets.
- **Large Flat Brush:** Suitable for large flat areas such as hard floors, tiles, walls, doors, and window glass.
- **Corner Brush:** Designed for narrow spaces, grout lines, edges, corners, and other hard-to-reach areas.
- **Small Flat Brush:** Best for detailed cleaning on counters, doors, stovetops, and ceramic surfaces.
- **Mop Brush:** For smooth surfaces like car hoods and glass, providing a gentle yet effective clean.



Dome Brush:

shower, tub, bathtub,
sink, toilet.



Large Flat Brush:

hard floor, tile, wall,
door, window glass, counter



Corner Brush:

tile grout, edges, corners,
cranny and tight places.



Small Flat Brush:

counter, door,
windowstove, ceramic



Mop Brush:

car, wipe floors/windows,
clean car windows



Image: A visual guide to the five brush heads (Dome, Large Flat, Corner, Small Flat, Mop) and examples of their specific cleaning applications.

2. Powering On and Adjusting Speed

Press the power button once to turn on the scrubber at the low speed setting (280 RPM), suitable for daily cleaning. For deep cleaning or stubborn stains, long-press the power button to switch to the high speed setting (380 RPM). Press the button again to turn off the device.

Changes in the way you clean your home

Efficient & Easy & Save Time



Image: The scrubber in action, demonstrating its low speed for daily cleaning and high speed for deep cleaning, with a focus on stable spinning under pressure.

3. Cleaning Technique

Apply a suitable cleaning solution or detergent to the surface to be cleaned. Guide the spinning brush head over the dirty area with light pressure. The scrubber's powerful motor will do the work, reducing the need for manual scrubbing. For best results on stubborn stains, allow the cleaning solution to soak for a few minutes before scrubbing.



Happy Cleaning Make Life Easier



2500mAh
battery



120min
work life



<35kgf
torque



Two gears
280-380 RPM



IPX7
waterproof



55"
extra
long handle



Image: The electric spin scrubber actively cleaning a dirty bathtub surface, demonstrating its effectiveness in removing stubborn stains, with a note that it works better with detergent.

MAINTENANCE

1. Cleaning the Scrubber and Brush Heads

After each use, detach the brush head and rinse it thoroughly under running water to remove any cleaning solution or debris. The main unit of the scrubber is IPX7 waterproof, allowing it to be used in wet environments. However, avoid submerging the entire unit in water for extended periods. Wipe the main unit with a damp cloth to clean it.

2. Storage

Store the scrubber and its accessories in a dry place away from direct sunlight. The adjustable handle allows for compact storage. Ensure the device is fully charged before storing for long periods to maintain battery health.



Fast Charging Convenient Storage

A Good Helper for Your Home

-  Charging
-  Fully Charged
-  Working

Image: The electric spin scrubber hanging on a wall hook, illustrating convenient storage and charging status indicators (red for charging, green for fully charged/working).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Low battery or no charge.	Ensure the device is fully charged before use. Connect to power and allow 2.5 hours for a full charge.
Brush head stops spinning or spins slowly.	Low battery; excessive pressure applied; brush head obstructed.	Recharge the battery. Reduce pressure during cleaning. Check for and remove any debris obstructing the brush head.
Scrubber not cleaning effectively.	Incorrect brush head for the task; insufficient cleaning solution; worn brush head.	Select the appropriate brush head for the surface. Use a suitable cleaning solution. Replace worn brush heads if necessary.
Handle feels loose.	Handle sections not fully engaged.	Ensure all handle sections are securely snapped into place.

SPECIFICATIONS

- Brand:** etoolab
- Model:** Scrubber
- Color:** Green
- Handle Material:** Plastic, Durable Aluminum
- Special Features:** Adjustable length, Cordless, IPX7 Waterproof
- Included Components:** Main unit, Extension handle, 5 Replaceable Brush Heads (Dome, Large Flat, Corner, Small Flat, Mop), USB Charging Cable

Surface Recommendation: Floor, Shower, Tile, Tub, Sink, Toilet, Glass, Walls, Counters, Car Hoods

Number of Items: 5 (referring to brush heads, plus main unit and handle)

Item Weight: Approximately 16 ounces (1 pound)

Product Dimensions: 11.8 x 3 x 3 inches (compact mode)

Adjustable Handle Length: Up to 55 inches (138 cm)

Battery: 2500mAh Lithium Battery

Charging Time: Approximately 2.5 hours

Working Time: Up to 120 minutes (on a full charge)

Spin Speeds: Low (280 RPM), High (380 RPM)

Waterproof Rating: IPX7

Adjustable Length

Cleaning is No Longer Limited
Easy to Clean, Save Your Back

138cm/55 inch

120cm/47 inch

63cm/24.8 inch



Image: An exploded view highlighting the scrubber's internal components, including the pure copper motor, carbon brushes with rare metals, bold copper wire, silent bearing, and super torque (>35kgf).

WARRANTY AND SUPPORT

etoolab is committed to providing high-quality products and services. While specific warranty details are not provided, we encourage customers to contact us directly if they encounter any issues with their Electric Spin Scrubber. We aim to resolve any problems within 24 hours of contact.

For support, please refer to the contact information provided with your purchase or visit the official etoolab website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question