

[Manuals.plus](#) /

› [Uten](#) /

› Uten Digital Kitchen Scale User Manual

Uten Uten-Scale-X1372

Uten Digital Kitchen Scale User Manual

Model: Uten-Scale-X1372

INTRODUCTION

Thank you for choosing the Uten Digital Kitchen Scale. This ultra-slim food scale is designed for precise measurements in baking and cooking, offering a range of features including unit conversion, tare function, and a built-in timer. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new kitchen scale to ensure optimal performance and longevity.



Image: The Uten Digital Kitchen Scale displaying a measurement, with a bowl of yogurt and fruit on its stainless steel platform.

KEY FEATURES

- **Slim Design with Hook:** Lightweight, compact, and features a hook for convenient storage.
- **Large LCD Display:** High-contrast, backlit LCD for easy readability.
- **Multi-Functionality:** Includes Zero & Tare Function, Alarm Timer, Real-Time Clock Display, Water/Milk Volume Mode, and Temperature Sensor.
- **Unit Conversion:** Easily switch between g/kg, lb:oz, ml, and fl'oz.
- **High Accuracy:** Built with a high-precision strain gauge sensor, weighing up to 11lb/5kg with a graduation of 1g/0.1oz.
- **Durable Construction:** Features a high-quality SUS401 stainless steel platform and ABS plastic frame for durability and easy cleaning.



Image: The Uten Digital Kitchen Scale displaying a measurement with a meal on it, surrounded by icons representing its various functions like max weight, division, backlight, milk/water volume, clock, thermometer, alarm, battery, and error indicators.

PACKAGE CONTENTS

Upon opening the package, please ensure all items are present and in good condition:

- 1 x Uten Digital Kitchen Scale (with SUS401 stainless steel platform)
- 2 x AAA Batteries (pre-installed or included separately)
- 1 x User Manual (this document)

SETUP

Battery Installation

The Uten Digital Kitchen Scale requires 2 AAA batteries, which are included. If the batteries are not pre-installed or need

replacement:

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the 2 AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Place the scale on a flat, stable surface before use.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the scale, press the **ON/OFF** button. The display will light up and show "0g" or "0.0oz".
- The scale does not have a manual off function. It will automatically turn off after a period of inactivity to conserve battery life.

Unit Conversion

The scale supports 4 units of measurement: grams (g), kilograms (kg), pounds and ounces (lb:oz), milliliters (ml), and fluid ounces (fl'oz).

- Press the **UNIT** button to cycle through the available units.
- The selected unit will be displayed on the LCD screen.

4 UNITS CONVERSION: WEIGHT & VOLUME



Image: A close-up of the Uten Digital Kitchen Scale's display, illustrating the various unit conversion options including fl.oz, g, lb.oz, and ml.

Zero & Tare Function

The Tare function allows you to weigh different ingredients consecutively in the same container without removing the previous load. It resets the scale to zero after placing a container or an ingredient on it.

- Step 1:** Place an empty container or bowl on the scale.
- Step 2:** Press the **ZERO/TARE** button. The display will reset to "0".
- Step 3:** Add your first ingredient to the container. The scale will display its weight.
- Step 4:** To add another ingredient, press the **ZERO/TARE** button again to reset the display to "0", then add the next ingredient. Repeat as needed.

ZERO & TARE FUNCTION

To weigh different loads consecutively without removing loads from the scale.



STEP 1

put the container/ bowl on the scale



STEP 2

press the Z/T button to zero



STEP 3

put the item on the container

Image: A visual guide demonstrating the Zero & Tare function: Step 1 shows an empty bowl on the scale, Step 2 shows pressing the Z/T button to zero the scale, and Step 3 shows adding an item to the bowl for measurement.

Alarm Timer

The scale includes an alarm timer function, useful for cooking and baking tasks.

- Press the **T-SET** button to access the timer settings.
- Use the **ZERO/TARE** and **UNIT** buttons to adjust the time.
- Press **T-SET** again to start the countdown.
- An audible beep will sound when the timer reaches zero.



Image: The Uten Digital Kitchen Scale hanging on a wall, with an alarm clock icon and sound waves emanating from it, suggesting its alarm timer function. In the background, a family is shown relaxing, implying the convenience of the timer.

Real-Time Clock Display

The scale can display the current time. This feature is integrated into the display and can be accessed or set via the **T-SET** button, similar to the alarm timer setup.

Water/Milk Volume Mode

The scale can measure the volume of water and milk, which have different densities. This mode provides more accurate volume measurements for these liquids.

- When in volume mode (ml or fl'oz), the scale may differentiate between water and milk.
- Refer to the display icons or specific instructions on the screen for selecting between water and milk volume measurements.

Temperature Sensor

The scale includes a temperature sensor that displays the ambient temperature on the LCD screen, typically in Celsius or Fahrenheit.

- The temperature reading is usually displayed alongside the weight measurement or can be toggled using the **T-SET** button.

MAINTENANCE

Cleaning

The stainless steel platform and ABS plastic frame are designed for easy cleaning.

- Wipe the scale surface with a soft, damp cloth.
- For stubborn stains, use a mild detergent.
- Do not immerse the scale in water or use abrasive cleaners.
- Ensure the scale is completely dry before storing or next use.



EASY CLEAN UP



HANG TO STOW

Image: A hand wiping the stainless steel surface of the Uten Digital Kitchen Scale with a purple cloth, demonstrating its easy clean-up feature. Below, the scale is shown hanging on a rail, illustrating its 'hang to stow' design.

Storage

The slim design and integrated hook allow for convenient storage.

- Store the scale in a dry place, away from extreme temperatures.
- Utilize the hook design to hang the scale for space-saving storage.

TROUBLESHOOTING

If you encounter any issues with your Uten Digital Kitchen Scale, please refer to the following common problems and solutions:

Problem	Indication	Solution
Scale does not turn on	Blank display	Check battery installation. Ensure batteries are correctly inserted with proper polarity. Replace batteries if necessary.
Low Battery	"Lo" or battery icon displayed	Replace the 2 AAA batteries with new ones.
Overload	"Err" or "O-Ld" displayed	The weight on the scale exceeds its maximum capacity (11lb/5kg). Remove some items immediately to prevent damage.
Inaccurate readings	Inconsistent weight display	Ensure the scale is on a flat, stable, and hard surface. Avoid placing it on soft or uneven surfaces. Recalibrate if possible (refer to specific calibration instructions if available, not typically user-adjustable for this model).

SPECIFICATIONS

Feature	Detail
Model Number	Uten-Scale-X1372
Maximum Capacity	11 lb / 5 kg
Graduation	1 g / 0.1 oz
Units of Measurement	g, kg, lb:oz, ml, fl'oz
Display Type	LCD (Backlit)
Power Source	2 x AAA Batteries (included)

Feature	Detail
Platform Material	SUS401 Stainless Steel
Frame Material	ABS Plastic
Product Dimensions	9.25 x 6.5 x 1.06 inches
Item Weight	1.26 Pounds
Special Features	Alarm Timer, Real-Time Clock Display, Temperature Sensor, Water/Milk Volume Indicator, Zero & Tare Function, Hook Design

WARRANTY AND SUPPORT

Uten is committed to providing high-quality products. For any questions, concerns, or support needs regarding your Uten Digital Kitchen Scale, please refer to the contact information provided with your purchase or visit the official Uten website. Specific warranty details may vary; please retain your proof of purchase for warranty claims. For more information, you may visit the [Uten Store on Amazon](#).

© 2024 Uten. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question