

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 2-Speed Immersion Blender HB2402BC User Manual

BLACK+DECKER HB2402BC

BLACK+DECKER 2-Speed Immersion Blender HB2402BC User Manual

Brand: BLACK+DECKER | Model: HB2402BC

PRODUCT OVERVIEW

The BLACK+DECKER 2-Speed Immersion Blender provides efficient blending and mixing capabilities. Featuring a powerful 200-watt motor and intuitive one-touch controls, this appliance is designed for ease of use. It includes durable stainless steel blades suitable for blending smoothies, sauces, soups, and baby food. For convenient cleaning, many parts are dishwasher-safe. The ergonomic design ensures comfortable handling during operation, and the 2-speed option allows for controlled blending, pureeing, and crushing. A stainless steel whisk attachment is also included for additional mixing tasks.

Key Features

- **One-Touch Controls:** Simple and user-friendly operation.
- **Dishwasher-Safe Parts:** Designed for quick and easy cleanup.
- **Durable Stainless Steel Blades:** Efficiently blends smoothies, sauces, soups, and more.
- **Durable Stainless Steel Whisk:** Included for mixing, whisking, and baking tasks.
- **Ergonomic Design:** Provides comfortable handling during use.
- **2 Speeds:** Offers sustained control for blending, pureeing, and crushing.





Image: The BLACK+DECKER 2-Speed Immersion Blender with its whisk attachment.

COMPONENTS

The BLACK+DECKER 2-Speed Immersion Blender comes with the following main components:

- **Motor Unit:** The main body containing the motor and controls.
- **Blending Shaft:** A detachable stainless steel shaft with blades for immersion blending.
- **Whisk Attachment:** A detachable stainless steel whisk for aeration and mixing.



Image: Front view of the immersion blender unit.



**Durable
Stainless Steel Blades**

Image: Close-up of the durable stainless steel blending blades.



**Versatile
Stainless Steel Whisk**

Image: The versatile stainless steel whisk attachment.

IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please read and follow all instructions carefully before using your BLACK+DECKER Immersion Blender.

- Read all instructions before use.
- To protect against electrical shock, do not immerse the motor unit, cord, or plug in water or other

liquids.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the blending shaft or whisk to the motor unit before plugging into an outlet.
- When blending hot liquids, use extreme caution to prevent splashing.
- Blades are sharp. Handle carefully.

SETUP

Before first use, ensure all parts are clean. Refer to the 'Care and Cleaning' section for detailed instructions.

Attaching the Blending Shaft or Whisk

1. Align the blending shaft or whisk attachment with the motor unit.
2. Twist the attachment clockwise until it locks securely into place. You should hear a click.
3. Ensure the attachment is firmly seated before plugging in the appliance.



Image: The immersion blender with the whisk attachment, ready for assembly.

OPERATING INSTRUCTIONS

The BLACK+DECKER Immersion Blender is designed for efficient blending and mixing directly in pots, bowls, or the included blending cup.

Blending

1. Ensure the blending shaft is securely attached to the motor unit.
2. Plug the appliance into a standard electrical outlet.
3. Immerse the blending shaft into the ingredients. Ensure the blades are fully submerged to prevent

splashing.

4. Select your desired speed (Speed I or Speed II) using the one-touch controls.
5. Press and hold the corresponding speed button to activate the blender.
6. Move the blender gently up and down and in circular motions to ensure even blending.
7. Release the button to stop the blender.
8. Unplug the appliance from the outlet after use.

Using the Whisk Attachment

1. Ensure the whisk attachment is securely attached to the motor unit.
2. Plug the appliance into a standard electrical outlet.
3. Immerse the whisk into the ingredients you wish to aerate or mix.
4. Select your desired speed (Speed I or Speed II) using the one-touch controls.
5. Press and hold the corresponding speed button to activate the whisk.
6. Move the whisk gently to achieve desired consistency.
7. Release the button to stop the whisk.
8. Unplug the appliance from the outlet after use.

Speed Settings

The blender features two distinct speed settings:

- **Speed I:** Lower speed for lighter tasks, gentle mixing, or starting to blend to prevent splashing.
- **Speed II:** Higher speed for tougher ingredients, faster blending, pureeing, and crushing.



One-Touch Controls

Image: The one-touch controls for selecting speed settings.

CARE AND CLEANING

Proper cleaning and maintenance will extend the life of your immersion blender.

1. Always unplug the appliance from the electrical outlet before cleaning.
2. Detach the blending shaft or whisk attachment from the motor unit by twisting counter-clockwise and pulling apart.
3. The blending shaft and whisk attachment are dishwasher-safe (top rack recommended) or can be hand-washed with warm, soapy water. Rinse thoroughly and dry.
4. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. Do not use abrasive cleaners or scouring pads on any part of the appliance.
6. Store the blender and its attachments in a dry place.



Dishwasher-Safe Parts

Image: Detachable parts of the blender, indicating they are dishwasher-safe.

TROUBLESHOOTING GUIDE

If you encounter any issues with your immersion blender, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Blender does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a working electrical outlet.
	Attachment not properly secured.	Twist the blending shaft or whisk clockwise until it clicks into place.
Poor blending results.	Too little liquid or ingredients are too large.	Add more liquid or cut ingredients into smaller pieces. Ensure blades are fully submerged.
	Incorrect speed setting.	Use Speed II for tougher ingredients or faster blending.

Problem	Possible Cause	Solution
Splashing during operation.	Blades not fully submerged or too much liquid.	Ensure blades are fully immersed before starting. Use a deeper container or reduce liquid volume. Start on Speed I.

PRODUCT SPECIFICATIONS

Specification	Detail
Brand	BLACK+DECKER
Model Number	HB2402BC
Power/Wattage	200 watts
Material	Stainless Steel
Number of Speeds	2
Product Dimensions	6.4D x 6.4W x 34.9H Centimetres
Item Weight	980 g
Power Source	Corded Electric

WARRANTY AND SUPPORT

Warranty Information

Please refer to the product packaging or the official BLACK+DECKER website for detailed warranty information. Typically, BLACK+DECKER products come with a limited manufacturer's warranty covering defects in materials and workmanship.

Customer Support

For technical assistance, troubleshooting beyond this guide, or warranty claims, please contact BLACK+DECKER customer support. Contact details can usually be found on the product packaging or their official website.