

[Manuals.plus](#) /

› [Audecook](#) /

› Audecook Electric Hot Pot & Frying Pan (Model AC-1020) - User Manual

Audecook AC-1020

Audecook Electric Hot Pot & Frying Pan (Model AC-1020) - User Manual

Model: AC-1020 | Brand: Audecook

1. PRODUCT OVERVIEW

The Audecook Electric Hot Pot and Frying Pan (Model AC-1020) is a versatile 2-liter appliance designed for various cooking tasks. It features an 8-inch ceramic glaze non-stick surface and dual power control for precise temperature management. This portable cooker is suitable for preparing meals such as ramen, steak, fried rice, oatmeal, and soup.



Figure 1: Audecook Electric Hot Pot and Frying Pan (Matte Black)

Key Features:

- **2L Capacity:** Ideal for individual or small family meals.
- **8-Inch Ceramic Glaze Non-Stick Surface:** Durable, easy to clean, and PFOA-free for healthy cooking.
- **Dual Power Control (350W/800W):** Low power for gentle cooking (omelettes, ramen, pancakes) and high power for faster cooking (steaming, frying, hot pot, sautéing).
- **Quick & Even Heating:** 360° annular heating base ensures efficient heat distribution.
- **Overheating Protection:** Automatic power-off when temperature exceeds 180°C to prevent damage.
- **Portable and Stable Design:** Compact size and lightweight, with a four-leg non-slip base, making it suitable for various environments like RVs, dormitories, and travel.



Figure 2: Product Features and Quick Use Tips

2. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the interior of the pot and the glass lid with warm soapy water. Rinse thoroughly and dry completely. Do not immerse the main unit (with electrical components) in water.
3. **Handle Assembly:** Ensure the wooden handle is securely attached to the pot. If it requires assembly, use a screwdriver to fasten it firmly.
4. **Placement:** Place the electric hot pot on a stable, flat, heat-resistant surface away from water sources.
5. **Power Connection:** Connect the power cord to the appliance and then plug it into a standard electrical outlet. Ensure the voltage matches the appliance's requirements (220 Volts).

3. OPERATING INSTRUCTIONS

The Audecook Electric Hot Pot offers dual power settings for various cooking needs.



TERMINAL **DUAL** POWER CONTROLLABLE



Figure 3: Dual Power Control for Diverse Cooking

Power Settings:

- **Low Power (350W):** Ideal for gentle cooking, such as making omelettes, ramen, or pancakes. This setting provides a steady, lower heat.
- **High Power (800W):** Suitable for faster cooking methods like steaming, frying, cooking hot pot, sautéing vegetables, and searing steaks. This setting delivers higher heat for quicker results.

General Cooking Steps:

1. **Prepare Ingredients:** Wash, chop, and season your ingredients as required for your recipe.
2. **Add Oil/Liquid:** For frying or sautéing, add a small amount of cooking oil to the pot. For hot pot or soup, add the desired liquid.
3. **Select Power Setting:** Turn the control knob to either the 'Low' (350W) or 'High' (800W) setting based on your cooking needs. The indicator light will illuminate.
4. **Add Ingredients:** Once the pot is heated, carefully add your ingredients.

5. **Monitor Cooking:** Use the transparent glass lid to monitor your food without releasing heat. Adjust the power setting as needed.
6. **Serve:** Once cooking is complete, turn the power knob to 'OFF' and carefully remove the food.



Figure 4: Multifunctional Electric Pan Capabilities

Using the Steamer (if included):

If your model includes a steamer basket, you can use it for healthy steaming.



Figure 5: Steamer Basket in Use

1. Add water to the main pot, ensuring it does not exceed the maximum fill line.
2. Place the steamer basket into the pot.
3. Arrange your food (e.g., vegetables, fish) in the steamer basket.
4. Cover with the lid and select the 'High' power setting to bring the water to a boil and generate steam.
5. Steam until food is cooked to your preference.

Embedded Video: Audecook Hot Pot Electric 2L, Non-Stick Frying Pan 8 Inch

Your browser does not support the video tag.

Video 1: This video demonstrates the features and usage of the Audecook Electric Hot Pot and Frying Pan, highlighting its non-stick surface and versatility.

Embedded Video: Cooking roasted potatoes with the help of my electric pot!

Your browser does not support the video tag.

Video 2: This video shows the electric pot being used to cook roasted potatoes, demonstrating its heating capabilities and ease of use for various dishes.

Embedded Video: Audecook Electric Hot Pot with Steamer 2L

Your browser does not support the video tag.

Video 3: This video illustrates the use of the Audecook Electric Hot Pot, including its steamer function, for preparing a variety of meals.

4. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Audecook Electric Hot Pot.



HEALTHY CERAMIC NONSTICK

EASILY WIPE CLEAN

Figure 6: Easy Cleaning of the Non-Stick Surface

1. **Cool Down:** Always allow the appliance to cool completely before cleaning to prevent burns and damage.
2. **Disconnect Power:** Ensure the appliance is unplugged from the power outlet before cleaning.
3. **Interior Cleaning:** The ceramic glaze non-stick interior is easy to clean. Use a soft sponge or rag with mild dish soap and warm water. Avoid abrasive cleaners, metal scrubbers, or wire brushes, as these can damage the non-stick coating.
4. **Exterior Cleaning:** Wipe the exterior of the pot with a damp cloth. Do not immerse the main unit in water or other liquids.
5. **Lid Cleaning:** The glass lid can be washed with warm soapy water and rinsed thoroughly.
6. **Drying:** Dry all parts completely before storing.
7. **Utensils:** To protect the non-stick coating, use only silicone, wooden, or plastic utensils.
8. **Dishwasher Safety:** This appliance is **not dishwasher safe**. Hand washing is recommended.

5. TROUBLESHOOTING

If you encounter issues with your Audecook Electric Hot Pot, refer to the following common troubleshooting tips:

- **Appliance Not Heating:**

- Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
- Check if the power knob is turned to either 'Low' or 'High' and the indicator light is on.
- Verify that the electrical outlet is functioning by plugging in another appliance.

- **Automatic Power-Off During Use:**

- The appliance has an overheating protection feature that triggers if the internal temperature exceeds 180°C. This is a safety mechanism.
- Turn the power knob to 'OFF' and unplug the appliance. Allow it to cool down completely (approximately 15-20 minutes).
- Once cooled, you can plug it back in and resume cooking. If this happens frequently, ensure there is sufficient liquid in the pot or that you are not cooking at excessively high temperatures for extended periods without liquid.

- **Food Sticking to Non-Stick Surface:**

- Although the pot has a non-stick coating, using a small amount of oil or butter is recommended for frying and sautéing.
- Ensure the heat setting is appropriate for the food being cooked.
- Avoid using metal utensils that can scratch and damage the non-stick surface, leading to sticking.

- **Steam Leaking from Lid:**

- Ensure the lid is properly seated on the pot.
- The lid is designed with steam vents to prevent excessive pressure buildup and liquid spillage. Some steam release is normal.

If the issue persists after attempting these troubleshooting steps, please contact Audecook customer support for further assistance.

6. SPECIFICATIONS

Detailed technical specifications for the Audecook Electric Hot Pot and Frying Pan (Model AC-1020).

2.0L Capacity Design



Figure 7: Product Capacity and Dimensions

Feature	Specification
Brand	Audecook
Model Number	AC-1020
Capacity	2 Liters (2.1 Quarts)
Material	Aluminum (with Ceramic Glaze Non-Stick Coating)
Color	Matte Black
Finish Type	Matte
Product Dimensions (D x W x H)	8"D x 8"W x 2.1"H

Feature	Specification
Special Feature	Titanium Ceramic Non-Stick Coating, Overheating Protection
Wattage	800 watts (Dual Power: 350W/800W)
Item Weight	1.53 Kilograms
Control Method	Mechanical Knob
Operation Mode	Automatic
Voltage	220 Volts
Closure Type	Outer Lid (Pyrex Heat-Resistant Glass Lid)
Included Components	Pyrex Heat-Resistant Glass Lid, Titanium Ceramic Non-Stick Coating, Wooden Handle Silicone Spatula
Dishwasher Safe	No

7. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries regarding your Audecook Electric Hot Pot and Frying Pan, please contact the manufacturer directly. Refer to the product packaging or the official Audecook website for the most up-to-date contact details and warranty terms.

It is recommended to register your product upon purchase to facilitate any future support needs.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question