



Manuals.plus /

- › Aoyar /
- › Aoyar Automatic Food Feeder for Fish User Manual

Aoyar CY-099B

Aoyar Automatic Food Feeder for Fish User Manual

Model: CY-099B

PRODUCT OVERVIEW

The Aoyar Automatic Food Feeder is designed to provide convenient and precise feeding for your aquatic pets. Its intelligent design allows for scheduled feeding, ensuring your fish receive consistent nutrition even when you are away. This feeder is compatible with various types of fish food, including flakes, pellets, and powders.



The Aoyar Automatic Fish Feeder, showing its main components and the 360-degree rotatable base.



Detailed dimensions of the Aoyar Automatic Fish Feeder, indicating its length, height, and width.

STEP 1

Install a pair of AA batteries into the battery holder.
(not included)



STEP 2

Add the feed into the container.

STEP 3

Adjust the outlet block until the feeding quantity meet your need.



Close-up of the feeder's control panel, highlighting the display, manual button, power button, settings button, and adjustment keys.

Moisture-proof

The design is able to prevent feed from lumping because of humidity.



Illustration of the moisture-proof design, showing how the feeder prevents feed from clumping due to humidity.

Upgrade Food Outlet

The baffle plays efficient role in reducing feed pellets and control the food quantity.



View of the upgraded food outlet, demonstrating the baffle's role in controlling food quantity.

SETUP

Battery Installation

The Aoyar Automatic Food Feeder requires 2 AA batteries (not included) for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment on the feeder.
2. Open the battery compartment cover.
3. Insert two AA batteries, observing the positive (+) and negative (-) markings.
4. Close the battery compartment cover securely.

Settable Feeding Time & Circle

Enable you to set 4 precise feeding time and 1-3 laps for feeding amount.



Illustration showing the installation of two AA batteries into the feeder's battery holder.

Mounting the Feeder

The feeder offers two primary installation methods to suit different aquarium setups:

1. **Vertical Fixing (Rotating Base):** Attach the feeder to the edge of your aquarium using the adjustable clamp. The 360-degree rotatable base allows for flexible positioning.
2. **Plane Fixing (Pasting Sticker):** For aquariums with flat surfaces, use the provided adhesive sticker to secure the feeder.

Top Inlet

Convenient & quick for feeding



Visual guide demonstrating the two installation methods: vertical mounting with the rotating base and flat surface mounting with an adhesive sticker.

OPERATING INSTRUCTIONS

Adding Food

The feeder features an upgraded top-opening design for easy and quick food replenishment.

1. Slide open the top cover of the food container.
2. Pour the desired amount of fish food into the container.
3. Close the top cover securely to maintain food freshness and prevent moisture.

2 Installation Methods



MODE1

Vertical: rotating base



MODE2

Plane: pasting sticker



Comparison illustrating the convenience of the top inlet design for adding food without removing the feeder.

Setting Feeding Times and Cycles

The feeder allows you to program up to 4 precise feeding times per day, with 1 to 3 rotations (cycles) per feeding to control the dispensed amount.

1. Press the 'Set' button (gear icon) to enter time setting mode.
2. Use the '+' and '-' buttons to adjust the hour and minute for the first feeding time. Press 'Set' again to confirm and move to the next setting.
3. Adjust the number of feeding cycles (1-3) for this time using the '+' and '-' buttons.
4. Repeat for up to four feeding times as needed.
5. The display will show the current time and scheduled feeding times.


STEP 1

Install a pair of AA batteries into the battery holder.
(not included)



STEP 2

Add the feed into the container.

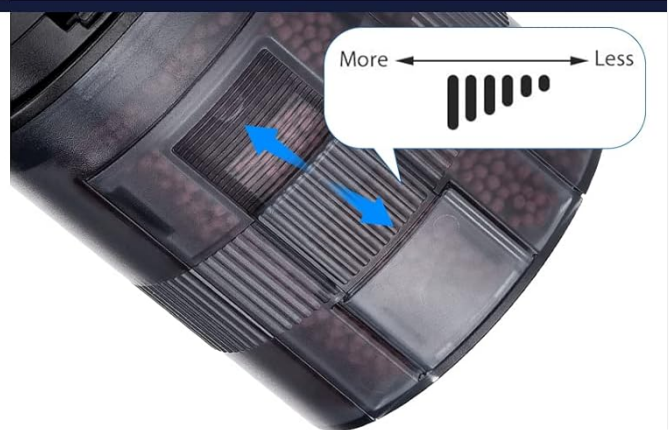

STEP 3

Adjust the outlet block until the feeding quantity meet your need.

Detailed view of the control panel, indicating buttons for setting feeding times, cycles, and manual operation.

Adjusting Feeding Amount

The quantity of dispensed food can be easily adjusted using the slider block on the feeder's outlet.

1. Locate the slider block near the food outlet.
2. Slide the block to increase or decrease the opening size, thereby controlling the amount of food dispensed per rotation.
3. Test the dispensing amount over a tray before placing it over your aquarium to ensure optimal feeding.

Settable Feeding Time & Circle

Enable you to set 4 precise feeding time and 1-3 laps for feeding amount.



Illustration showing how to adjust the food outlet block to control the feeding quantity.

Manual Feeding

For immediate feeding or to supplement scheduled feedings, use the manual feed button.

- Press the 'Manual' button (hand icon) once to initiate a single feeding rotation.

MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and hygiene for your feeder.

- Before cleaning, ensure the feeder is turned off and remove the batteries.
- Wipe the exterior of the feeder with a damp cloth. Do not submerge the main unit in water.
- The food container can be detached and rinsed with water if necessary. Ensure it is completely dry before reattaching and adding food.

- Clean the food outlet regularly to prevent blockages from food residue.

Food Storage

The feeder is designed to be moisture-proof to prevent food from clumping. For best results, store the feeder in a dry environment and ensure the food container lid is always securely closed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder not dispensing food.	Low battery; Food container empty; Food outlet blocked; Food clumped.	Replace batteries; Refill food container; Clear blockage from outlet; Check food for moisture and replace if clumped.
Food getting wet or jamming.	Exposure to excessive humidity or rain; Improperly closed food container.	Ensure feeder is in a dry environment; Verify food container lid is securely closed. This feeder is not designed for outdoor use without additional weather protection.
Feeder not turning on.	Batteries incorrectly installed or dead.	Check battery polarity; Replace with fresh AA batteries.
Incorrect feeding times or cycles.	Settings not saved correctly.	Re-enter desired settings and ensure each step is confirmed as per 'Setting Feeding Times' instructions.

SPECIFICATIONS

Feature	Detail
Model Number	CY-099B
Product Dimensions	15 x 7 x 12 cm
Item Weight	270 g
Material	Acrylonitrile Butadiene Styrene
Color	Upgrade Black
Power Source	2 x AA Batteries (not included)
Feeding Times	Up to 4 times per day
Feeding Cycles	1-3 rotations per feeding
Installation Methods	Vertical (clamp) and Plane (sticker)
Special Features	Digital Timer, Adjustable Feeding Amount, Top Inlet Design, Moisture-proof
Target Species	Fish, Tropical Animals, Reptiles (e.g., tetra, turtle, koi, goldfish, terrapin, tortoise, axolotl)

WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty claims regarding your Aoyar Automatic Food Feeder, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any warranty-related inquiries.