

TCDSTAR X12 Plus

TCDSTAR X12 Plus 7-Inch Retro Handheld Game Console Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your TCDSTAR X12 Plus 7-inch Retro Handheld Game Console. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

2. PACKAGE CONTENTS

Upon unboxing your TCDSTAR X12 Plus, verify that all items listed below are present:

- TCDSTAR X12 Plus Handheld Game Console
- USB Charging Cable
- AV Output Cable (for TV connection)
- Earphones
- Instruction Manual



Figure 2.1: TCDSTAR X12 Plus Handheld Game Console

The console features a 7-inch HD TFT color screen with a resolution of 800*480. It includes dual joysticks and various control buttons for an immersive gaming experience.



Figure 2.2: Top and Bottom View of the Console showing ports and buttons including lock screen, headset, TF card slot, USB port, volume controls, and power switch.





Figure 2.3: Detailed diagram of the console's key parameters, including L/R keys, direction keys, 360 joysticks, back key, function keys, start key, select key, lock screen key, earphone jack, TF card slot, USB port, volume controls, power on/off switch, and rear speakers.

3. SETUP

3.1. Charging the Device

The console is equipped with a 2500mAh rechargeable Lithium battery. For optimal performance and battery life, use the provided 5V 2A charger and USB cable. Avoid using chargers with higher current, as this may damage the device.

1. Connect the USB charging cable to the console's USB port.
2. Plug the other end of the USB cable into a compatible 5V 2A USB power adapter (not always included) or a powered USB port.
3. The charging indicator will illuminate. Allow the device to charge fully before first use.

3.2. Powering On/Off

- To power on: Slide the power switch located on the top edge of the console.
- To power off: Slide the power switch to the off position.

3.3. Inserting a TF Card

The console supports TF card expansion, allowing you to store more games, videos, or pictures.

1. Locate the TF card slot on the top edge of the console.
2. Gently insert the TF card into the slot until it clicks into place.
3. To remove, push the TF card inward until it springs out.

3.4. Connecting to a Television

The TCDSTAR X12 Plus supports AV connection for playing games, videos, and movies on a television screen.

1. Connect the AV output cable to the console's AV port.
2. Connect the red, white, and yellow RCA connectors to the corresponding input ports on your television.
3. Switch your television's input source to the correct AV channel.

4. OPERATING INSTRUCTIONS

4.1. Navigating the Interface

After powering on, the console will display its main menu. Use the direction keys and joysticks to navigate through the icons and options. The 'Select' and 'Start' buttons are typically used for confirmation and starting games.

4.2. Playing Games

The console comes with over 10,000 pre-installed games, supporting various formats including ZIP, MAME, GBA, GBC, GB, NES, SFC, FC, SMD, and MD. You can also download additional games.

1. From the main menu, navigate to the 'Games' section.
2. Browse through the available games using the direction keys.
3. Select a game by pressing the 'Start' button.
4. To exit a game, press the 'ESC' button.

4.3. Saving Game Progress

The device supports game archiving, allowing you to save your progress and resume later without interruption.

- During gameplay, access the in-game menu (usually by pressing 'ESC' or 'Select').
- Select the 'Save Game' option and choose a slot to save your progress.

4.4. Multimedia Functions

Beyond gaming, the X12 Plus functions as a music player, video player, camera, DV recorder, and e-book reader.



Figure 4.1: The console supports various functions including video play, game play, camera, video recorder, files, e-book, music play, and TF card support.

- **Music Player:** Navigate to the 'Music' icon to play audio files.
- **Video Player:** Access the 'Video' icon to watch stored video content.
- **Camera/DV:** Use the built-in camera for photos and video recording.
- **E-book Reader:** Open the 'E-book' application to read digital books.

4.5. Language Settings

The console supports 30 different languages, including English, Spanish, Japanese, and Chinese.

- Navigate to the 'Settings' menu.

- Select 'Language' and choose your preferred language from the list.

5. MAINTENANCE

5.1. Battery Care

- Charge the device regularly to maintain battery health.
- Avoid completely draining the battery frequently.
- Use only the provided or recommended charging accessories.

5.2. Screen Care

- Clean the screen with a soft, dry, lint-free cloth.
- Avoid using harsh chemicals or abrasive materials that could scratch the screen.
- Consider keeping the screen protector on for added protection.

5.3. General Care

- Keep the device away from extreme temperatures, direct sunlight, and moisture.
- Avoid dropping or subjecting the device to strong impacts.
- Store the device in a clean, dry place when not in use.

6. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect the charger and attempt to power on again.
- **Games not loading:** Verify the game files are not corrupted. If using a TF card, ensure it is properly inserted.
- **Screen issues:** If the screen is unresponsive or displaying incorrectly, try restarting the device.
- **Sound problems:** Check the volume settings and ensure earphones are properly connected if in use.

7. SPECIFICATIONS

Feature	Specification
Model Number	X12 Plus
Screen Size	7 inches HD TFT Color Screen
Screen Resolution	800*480
Internal Memory	16GB
Battery Capacity	2500mAh Lithium Ion
Supported Game Formats	ZIP, MAME, GBA, GBC, GB, NES, SFC, FC, SMD, MD
Product Dimensions	5 x 0.8 x 10 inches
Item Weight	1.12 Pounds
Manufacturer	TCDSTAR

8. WARRANTY AND SUPPORT

8.1. Protection Plans

Extended protection plans are available for purchase separately to cover your device beyond the standard warranty. Options include 2-Year and 3-Year Protection Plans, as well as a Complete Protect plan.

8.2. Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact TCDSTAR customer support through your retailer's support channels or visit the official TCDSTAR store online.

9. VIDEO DEMONSTRATION

9.1. TCDSTAR X12 Plus Unboxing and Features Overview

Video 9.1: This video provides an unboxing experience of the TCDSTAR X12 Plus, showcasing its contents, physical features, and demonstrating the initial power-on sequence and basic navigation. It highlights the console's various ports and its ability to connect to a TV.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

