

[Manuals.plus](#) /

› [Pssopp](#) /

› Pssopp 2L Mini Rice Cooker User Manual

Pssopp Pssopp61g8sdwmyu

Pssopp 2L Mini Rice Cooker User Manual

Model: Pssopp61g8sdwmyu

INTRODUCTION

Thank you for purchasing the Pssopp 2L Mini Rice Cooker. This multi-functional appliance is designed for convenience and efficiency, perfect for preparing a variety of dishes including rice, soups, stews, and grains. Its compact size makes it ideal for small households, travel, or dormitory use.

This manual provides important information regarding the safe operation, setup, maintenance, and troubleshooting of your new rice cooker. Please read it thoroughly before first use and retain it for future reference.



Image: The Pssoopp 2L Mini Rice Cooker, showing the yellow main unit, the detachable lid with a handle, and the power cord.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP

Unpacking

1. Carefully remove all components from the packaging.
2. Check that all listed parts are present: Mini Rice Cooker unit, Lid, Power Cord.
3. Remove any protective films or packaging materials from the appliance.

Initial Cleaning

Before first use, wash the inner pot and lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.

Placement

Place the rice cooker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation during operation.

450W Small Power
Can also be used in the school dormitory



Image: The compact Psopp Mini Rice Cooker placed on a table, demonstrating its small footprint suitable for various settings.

OPERATING INSTRUCTIONS

Basic Operation

1. **Prepare Ingredients:** Measure your desired amount of rice or other ingredients. Rinse rice thoroughly if required.
2. **Add to Pot:** Place the washed rice and the appropriate amount of water into the inner pot. For other dishes like soups or stews, add your ingredients.
3. **Insert Inner Pot:** Place the inner pot into the main rice cooker unit, ensuring it sits correctly.
4. **Close Lid:** Securely close the lid. Ensure the lid is properly sealed.
5. **Connect Power:** Plug the power cord into the rice cooker, then into a standard electrical outlet.
6. **Start Cooking:** Press the one-button mechanical switch to begin the cooking process. The indicator light will illuminate.
7. **Automatic Keep Warm:** Once cooking is complete, the cooker will automatically switch to a "keep warm" mode.
8. **Serve:** Open the lid carefully, avoiding steam. Serve your cooked food.

9. **Unplug:** After serving, unplug the rice cooker from the power outlet.



Image: A close-up view of the simple one-button mechanical switch for easy operation.

Multi-functional Cooking

This rice cooker is designed for versatility, allowing you to prepare various dishes beyond just rice:

- **Rice Cooking:** Ideal for perfectly cooked rice. The 360-degree full wrap fit liner ensures even heating for soft and sweet grains.
- **Soups & Porridge:** Prepare comforting soups and creamy porridge with ease.
- **Stews:** Cook various meat or vegetable stews.
- **Stir Fry:** The non-stick inner pot can also be used for quick stir-fries.

MULTIPURPOSE



Cooking Rice



Soup



Porridge



Stir Fry



Tonic Stew



Meat Stew

Image: Visual representation of the multi-purpose capabilities of the rice cooker, including cooking rice, soup, porridge, stir fry, tonic stew, and meat stew.

360 Degree Full Wrap Fit Liner
Even heating at the bottom of the hot plate
Makes every grain of rice soft and sweet



Image: An illustration demonstrating the 360-degree full wrap fit liner and even heating at the bottom, ensuring every grain of rice is soft and sweet.

MAINTENANCE

Cleaning

Regular cleaning will ensure the longevity and optimal performance of your rice cooker.

1. **Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Wash Inner Pot and Lid:** The inner pot features an anti-stick coating, making it easy to clean. Wash it and the removable inner lid with warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick surface.
3. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Clean Heating Plate:** If any food particles are on the heating plate, gently wipe them off with a damp cloth. Do not

use water directly on the heating plate.

Easy to Clean

Rice does not stick to the pot

Soup and porridge do not paste the bottom

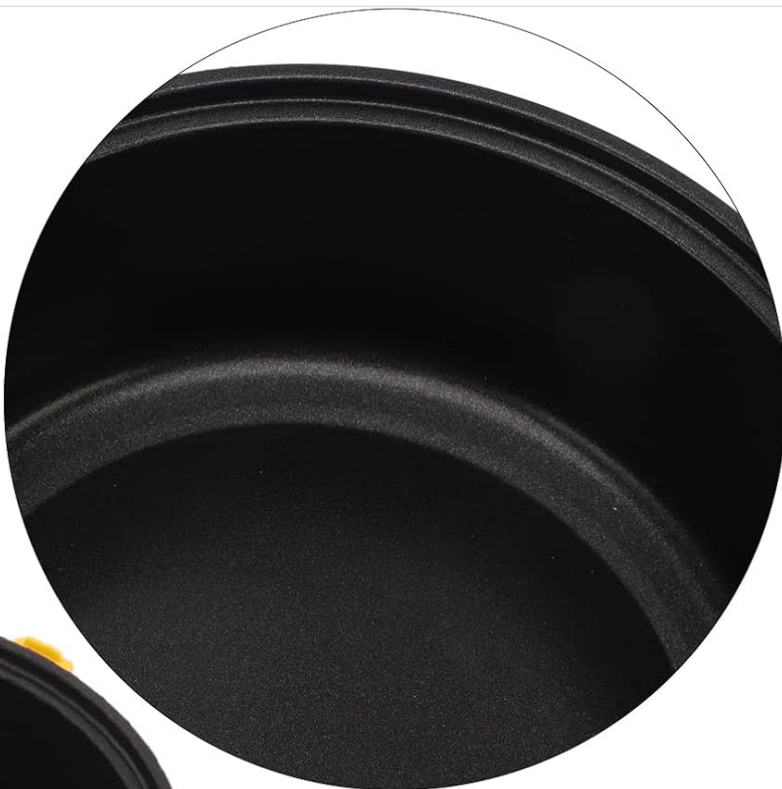


Image: A close-up view of the inner pot, highlighting its non-stick surface which prevents rice and other foods from sticking, making cleaning easy.



Portable Carrying Handle
Easy to carry and move

Removable and Washable
Inner Lid
No dirt left behind



Image: Details showing the portable carrying handle for easy transport and the removable and washable inner lid, designed for thorough cleaning without leaving dirt behind.

Storage

Store the rice cooker in a dry, cool place when not in use. Its compact design allows for easy storage on a countertop or in a cabinet.

Small and Easy to Store
Space saving
Easy to put on the table and in the cabinet



Image: The Pssopp Mini Rice Cooker neatly stored inside a cabinet, illustrating its space-saving design.

TROUBLESHOOTING

If you encounter any issues with your rice cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into both the cooker and a working electrical outlet. Check circuit breaker.
Rice is too dry or undercooked.	Insufficient water; lid not properly sealed.	Add more water next time; ensure lid is securely closed during cooking.
Rice is too wet or mushy.	Too much water.	Reduce water amount next time.

Problem	Possible Cause	Solution
Food sticks to the inner pot.	Non-stick coating damaged; insufficient oil for stir-fry.	Ensure only soft utensils are used. For stir-fry, add a small amount of cooking oil.
Steam leaking from lid.	Lid not properly seated; lid seal dirty or damaged.	Adjust lid to ensure proper fit. Clean or inspect lid seal for damage.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Item Type	Mini Rice Cooker
Brand	Pssopp
Model Name	Pssopp61g8sdwmyu
Material	ABS (exterior), Stainless Steel (inner pot, lid)
Power	450W
Capacity	2 Liters
Voltage	120 Volts
Color	Multicolor (Yellow)
Special Feature	Portable
Item Weight	2.33 pounds (Approx. 1056g)
Package Dimensions	7.87 x 7.87 x 7.87 inches
ASIN	B0BMVYTT5S
Date First Available	November 18, 2022

WARRANTY AND SUPPORT

Warranty information for your Pssopp 2L Mini Rice Cooker is typically included with the product packaging or can be obtained directly from the manufacturer or retailer at the time of purchase. Please refer to these sources for details regarding warranty coverage and terms.

For technical support, service, or inquiries regarding your product, please contact the retailer where the product was purchased or refer to the contact information provided in the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BMVYTT5S>

More documents and user manuals: <https://manuals.plus/>