

Tzumi 8016SC

Probuds V2

INSTRUCTION MANUAL

Brand: Tzumi

Introduction

The Tzumi Probuds V2 offer a blend of comfort and high-quality audio for hands-free listening and phone calls. Designed for versatility and convenience, these true wireless earbuds are an ideal companion for daily use. They feature intuitive touch controls, voice assistant compatibility, and the ability to use each earbud independently.

The compact charging case ensures your Probuds V2 are always ready, providing extended listening time on the go. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your Probuds V2 to ensure optimal performance.

Package Contents

- Probuds V2 Wireless Earbuds
- Charging Case
- Silicone Earbud Tips
- Neck Strap
- Type-C Charging Cable
- Instruction Manual (this document)

Setup

1. Charging the Probuds V2

Before first use, fully charge your Probuds V2 and their charging case. Connect the included Type-C charging cable to the charging port on the case and to a compatible USB power source. The charging time for a full charge is approximately 5 hours. Indicators on the case will show charging status.



Image: Tzumi Probuds V2 wireless earbuds shown inside their open charging case. The case is black and has a black carabiner clip attached to its side, indicating portability. The earbuds themselves are also black and fit snugly within the case.

2. Pairing with Your Device

1. Ensure the Probuds V2 are charged and placed inside the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.
4. Search for available devices and select "Probuds V2" from the list.
5. Once connected, you will hear an audible confirmation, and the earbuds will be ready for use.
6. The Probuds V2 utilize reliable Bluetooth 5.0 technology for a stable connection.

3. Achieving a Comfortable Fit

The Probuds V2 come with silicone earbud tips designed for a comfortable fit. Experiment with different tip sizes (if provided, though not explicitly mentioned in input, it's standard) to find the best seal for optimal sound quality and comfort. Gently insert each earbud into your ear canal and twist slightly to secure them. A neck strap is also included for added security during activities.

Operating Your Probuds V2

Touch Controls

The Probuds V2 feature full touch controls for media playback and call management. Specific touch gestures for functions like play/pause, skip track, answer/end call, and activating voice assistant are typically detailed in a quick start guide or on the product packaging. Refer to those for precise commands.

- **Media Control:** Manage your music and audio playback.
- **Voice Control:** Activate your device's voice assistant (e.g., Siri, Google Assistant).

Call Management and Single Earbud Use

The Probuds V2 allow for high-quality phone calls. Each earbud can be used separately, providing flexibility for shared calls or listening to music while keeping one ear open to your surroundings.

Battery Life

Enjoy up to 5 hours of music playback time on a single charge. The charging case provides additional charges, extending the total standby time to approximately 40 hours.

Maintenance

Proper care will extend the life of your Probuds V2.

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Avoid Moisture:** Do not expose the earbuds or charging case to excessive moisture, rain, or liquids.
- **Temperature:** Store and operate the device within recommended temperature ranges to prevent battery degradation.

Troubleshooting

Problem	Possible Cause / Solution
Earbuds not pairing	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Make sure Bluetooth is enabled on your device. • Forget "Probuds V2" from your device's Bluetooth list and try pairing again. • Place earbuds back in the case, close, then open to reset pairing mode.
No sound from earbuds	<ul style="list-style-type: none"> • Check device volume and earbud volume. • Ensure earbuds are properly connected to your device. • Try playing different audio sources.
Charging case not charging	<ul style="list-style-type: none"> • Verify the Type-C cable is securely connected to both the case and the power source. • Try a different charging cable or power adapter. • Ensure the power source is active.
Earbuds not charging in case	<ul style="list-style-type: none"> • Ensure the charging case itself is charged. • Clean the charging contacts on both the earbuds and inside the case with a dry cotton swab. • Ensure earbuds are correctly seated in the charging slots.

Specifications

Feature	Detail
Model Name	ProBuds V2
Model Number	8016SC
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.0
Material	Silicone
Charging Time	5 Hours
Control Type	Media Control
Control Method	Touch, Voice
Battery Life (Music Playback)	Up to 5 Hours
Standby Time	Up to 40 Hours
Ear Placement	In Ear
Form Factor	In Ear
Color	Black
UPC	841351180160
Manufacturer	Tzumi

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Tzumi website. You can also contact Tzumi customer service directly for assistance with product inquiries, technical support, or warranty claims.

Manufacturer: Tzumi