

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Luqeeg](#) /

› [Luqeeg Double Joystick Game Console Instruction Manual](#)

Luqeeg Luqeegg46sidymv3

Luqeeg Double Joystick Game Console Instruction Manual

MODEL: LUQEEGG46SIDYMV3

1. Introduction

Thank you for choosing the Luqeeg Double Joystick Game Console. This system is designed to provide an engaging gaming experience with a wide selection of classic games. It features a plug-and-play design for easy setup and dual wireless joysticks for two-player interaction. This manual provides essential information for setting up, operating, and maintaining your game console.

2. Package Contents

Please verify that all items listed below are included in your package:

- 2 x Joystick Controllers
- 1 x TV Stick (Game Console Unit)
- 1 x Memory Card (pre-installed in TV Stick)
- 1 x Screwdriver (for battery compartment)
- 1 x User Manual



Image: All components included in the Luqeeg Double Joystick Game Console package.

3. Specifications

Feature	Detail
Item Type	Double Joystick Game Console
Material	ABS, Metal
Battery Type (per joystick)	6 x AA Battery (Not Included)
Approximate Size	13.3 x 10.1 x 5 cm / 5.2 x 4 x 2 inches
Color	Black
Connectivity	2.4G Wireless (Joysticks), HD Multimedia Interface (TV Stick)
Model Number	Luqeegg46sidymv3

4. Setup Instructions

Follow these steps to set up your Luqeeg Double Joystick Game Console:

- 1. Install Batteries in Joysticks:** Each joystick requires 6 AA batteries (not included). Use the provided screwdriver to open the battery compartment on the underside of each joystick. Insert the batteries, ensuring correct polarity, then close the compartment securely.
- 2. Connect TV Stick:** Locate an available HD Multimedia Interface port on your television or monitor. Plug the TV Stick directly into this port.

3. **Power On TV/Monitor:** Turn on your television or monitor and select the correct HD Multimedia Interface input source.
4. **Power On Joysticks:** Once the TV Stick is connected and powered, the joysticks should automatically connect. If not, ensure batteries are correctly installed and the joysticks are powered on.

Plug directly into your TV
High resolution graphics
Excellent sounds
Make the game play very exciting



Image: Connecting the TV Stick to a television.

Mini Retro Game Console

Simulation Plug and play Dual wireless controller



Image: Overview of the game console components.

5. Operating Instructions

Once the console is set up and connected to your display, you can begin playing.

- **Game Selection:** Use the joystick to navigate the on-screen menu and select from the various classic games available.
- **Gameplay:** The joysticks provide intuitive control for the games. Refer to individual game instructions within the console for specific controls if needed.
- **Two-Player Mode:** The system supports two players simultaneously using the dual joysticks, allowing for competitive or cooperative gameplay.
- **High Resolution Graphics and Sound:** The console delivers high-resolution graphics and excellent sound quality through the HD Multimedia Interface connection, enhancing the gaming experience.

Wireless dual joystick controller

2.4G wireless game controller, sensitive, no latency. Get rid of the line, away from the TV can also enjoy the fun of classic nostalgic games.



Image: Wireless dual joystick controllers in operation.



Image: Example of two players using the game console.

6. Maintenance

Proper care will ensure the longevity of your game console:

- **Cleaning:** Use a soft, dry cloth to wipe down the joysticks and TV stick. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the console and joysticks in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries in the joysticks when performance degrades or if the console is stored for extended periods to prevent leakage.
- **Avoid Impact:** Do not drop or subject the components to strong impacts, as this can damage internal circuitry.

7. Troubleshooting

If you encounter issues with your game console, refer to the following common problems and solutions:

- **No Power/No Display:**
 - Ensure the TV Stick is fully inserted into the HD Multimedia Interface port.

- Verify your TV/monitor is set to the correct HD Multimedia Interface input source.
- Check if the TV Stick is receiving power (some HD Multimedia Interface ports provide power, others may require an external USB power source if available on the stick, though not specified for this model).

- **Joysticks Not Responding:**

- Check that batteries are correctly installed and not depleted. Replace if necessary.
- Ensure the joysticks are powered on.
- Move closer to the TV Stick to ensure a strong wireless connection.
- Restart the TV Stick by unplugging and re-plugging it from the HD Multimedia Interface port.

- **Poor Game Performance:**

- Ensure the TV Stick is not obstructed, which could interfere with the wireless signal to the joysticks.
- Check for any other wireless devices operating on the 2.4GHz frequency that might cause interference.

8. Warranty and Support

Specific warranty details and direct customer support contact information are not provided in the product description. For warranty claims or technical assistance, please refer to the retailer or your purchase documentation. You may also visit the [Luqeeg Store on Amazon](#) for general brand information.

© 2023 Luqeeg. All rights reserved.

Documents - Luqeeg – Luqeegg46sidymv3
no relevant documents