

[manuals.plus](#) /› [Whirlpool](#) /› [Whirlpool FFT M11 8X3WSY 8 kg Heat Pump Dryer User Manual](#)

Whirlpool FFT M11 8X3WSY

Whirlpool FFT M11 8X3WSY 8 kg Heat Pump Dryer User Manual

Model: FFT M11 8X3WSY

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool FFT M11 8X3WSY 8 kg Heat Pump Dryer. Please read these instructions carefully before using the appliance and keep them for future reference.

2. SAFETY INFORMATION

Important Safety Instructions:

- Read all instructions before using the appliance.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or operate the appliance if it is damaged. Contact authorized service personnel.
- Always disconnect the appliance from the power supply before cleaning or performing any

maintenance.

3. PRODUCT OVERVIEW

The Whirlpool FFT M11 8X3WSY is an 8 kg capacity heat pump dryer designed for efficient and gentle drying of your laundry. Its advanced features ensure optimal performance and energy savings.



Figure 1: Front view of the Whirlpool FFT M11 8X3WSY 8 kg Heat Pump Dryer, showing the control panel, drum door, and ventilation grille.

Key Components:

- **Control Panel:** Features a central program selection knob and various buttons for additional functions and settings. The display shows program status and remaining time.
- **Drum Door:** Large front-loading door for easy access to the drum.
- **Lint Filter:** Located inside the door opening, collects lint during drying.
- **Water Tank:** Collects condensed water, typically located at the top left or right of the appliance.
- **Ventilation Grille:** Located at the bottom front, for air intake.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your dryer.

1. **Unpacking:** Carefully remove all packaging materials. Inspect the dryer for any damage.
2. **Positioning:** Place the dryer on a firm, level floor. Ensure adequate ventilation around the appliance. Do not install in areas where the temperature may fall below 5°C (41°F).
3. **Leveling:** Adjust the adjustable feet at the bottom of the dryer to ensure it is perfectly level. This prevents vibrations and excessive noise during operation.
4. **Electrical Connection:** Connect the dryer to a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate. Do not use extension cords or multiple adapters.
5. **Water Drainage:** The condensed water is collected in a removable tank. For continuous drainage, you can connect a drainage hose (if supplied or purchased separately) to a suitable drain. Refer to the specific instructions in the full manual for drainage hose connection.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal drying results:

1. **Prepare Laundry:** Sort laundry by fabric type and desired dryness level. Close zippers, hooks, and tie loose strings.
2. **Load the Dryer:** Open the drum door and load the laundry. Do not overload the dryer; ensure there is enough space for clothes to tumble freely. The maximum capacity is 8 kg.
3. **Close the Door:** Ensure the drum door is firmly closed.
4. **Select Program:** Turn the program selection knob on the control panel to choose the desired drying program (e.g., Cotton, Synthetics, Delicates).
5. **Adjust Settings (Optional):** Use the function buttons to select additional options such as dryness level, anti-crease, or delayed start, if available for the selected program.
6. **Start Drying:** Press the Start/Pause button to begin the drying cycle.
7. **End of Cycle:** The dryer will signal when the cycle is complete. Remove laundry promptly to minimize creasing.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dryer.

- **Clean the Lint Filter:** After every drying cycle, remove and clean the lint filter. This is crucial for preventing fire hazards and maintaining drying performance.

- **Empty the Water Tank:** Empty the condensed water tank after each cycle. If the tank is full, the dryer will stop operating.
- **Clean the Condenser:** For heat pump dryers, the condenser needs periodic cleaning (e.g., every few months). Refer to the full manual for specific instructions on how to access and clean the condenser.
- **Clean the Exterior:** Wipe the exterior surfaces of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Dryer does not start.	Power cord unplugged, door not closed, program not selected, Start button not pressed.	Check power connection, ensure door is latched, select a program, press Start.
Clothes are not drying properly.	Lint filter clogged, water tank full, condenser dirty, overloaded, incorrect program.	Clean lint filter, empty water tank, clean condenser, reduce load size, select appropriate program.
Dryer is noisy.	Appliance not level, foreign objects in drum.	Adjust leveling feet, check drum for loose items.
Water tank full indicator on.	Water tank is full.	Empty the water tank.

If the problem persists after checking these points, please contact authorized service personnel.

8. SPECIFICATIONS

- **Brand:** Whirlpool
- **Model Number:** FFT M11 8X3WSY
- **Type:** Heat Pump Dryer
- **Capacity:** 8 Kilograms
- **Energy Class:** A+++
- **Dimensions (W x D x H):** 60 cm x 65 cm x 85 cm (approximate)
- **Color:** White
- **Form Factor:** Front Load
- **Access Position:** Front Load

9. WARRANTY AND SUPPORT

For detailed information regarding the product warranty, please refer to the warranty card included with your appliance or consult the official Whirlpool website for your region. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service requests, please contact Whirlpool customer service. Contact details can typically be found in the documentation supplied with the product or on the official Whirlpool website.

Note: The provided product information mentions return policies for Amazon.it. This section refers to the manufacturer's warranty and support.