

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Mattel](#) /

› [Mattel Disney and Pixar Cars Piston Cup Action Speedway Playset Instruction Manual \(Model HPD81\)](#)

Mattel HPD81

Mattel Disney and Pixar Cars Piston Cup Action Speedway Playset Instruction Manual

Model: HPD81

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Mattel Disney and Pixar Cars Piston Cup Action Speedway Playset. Please read these instructions carefully before use to ensure proper function and safety. This interactive track set allows users to power the race and control the action without the need for batteries.

SAFETY INFORMATION

- **Recommended Age:** This product is suitable for children aged 4 years and up.
- **Small Parts:** The playset may contain small parts before assembly. Keep away from younger children to prevent choking hazards.
- **Adult Supervision:** Adult supervision is recommended during assembly and initial play to ensure correct usage.
- **Proper Use:** Use the playset only as intended. Do not modify the product.

WHAT'S IN THE BOX

Verify that all components are present before beginning assembly.

- 1 Track Set
- 1 Lightning McQueen Die-Cast Vehicle (1:55 Scale)



Image: The product packaging displays the track set and the included Lightning McQueen vehicle.

SETUP AND ASSEMBLY

Follow these steps to assemble your Piston Cup Action Speedway Playset.

1. **Unpack Components:** Carefully remove all track pieces, accessories, and the vehicle from the packaging.
2. **Connect Track Sections:** Join the various track sections together. Ensure all connections are secure and flush. Refer to the diagram for the correct layout.
3. **Attach Accessories:** Securely attach the pit stop area, winner's circle ramp, and any other decorative elements to their designated spots on the track.



Image: An overhead view of the assembled track set, showing the complete layout with the booster, pit stop, and winner's circle.

OPERATING INSTRUCTIONS

The Piston Cup Action Speedway Playset is designed for interactive, battery-free racing.

1. **Place Vehicle:** Position the Lightning McQueen vehicle (or other 1:55 scale die-cast cars, sold separately) at the starting line or booster area.
2. **Wind the Booster:** To initiate the race, manually wind the booster mechanism. This action powers the car around the track. If the car slows, wind the booster again to maintain speed.



Wind the booster to power the race!

Image: A hand is shown winding the red knob of the booster mechanism, which propels the cars around the track.



Image: Multiple cars are shown in motion within the booster section of the track, illustrating the racing action.

3. **Pit Stop Tune-Up:** Use the control panel lever to guide your racecar into the pit area for a quick tune-up.



Use lever for a tune-up from the pitty!

Image: A hand is shown moving a lever on the control panel, which activates the pit stop mechanism to service a car.



Image: A detailed view of the pit stop area, showing a car positioned for a tune-up with the lever mechanism.

4. **Re-enter Race:** After a tune-up, press the 'go' button on the control panel to send your car back onto the track.



Press 'go' to reenter the race!

Image: A hand presses the green 'GO' button, releasing a car from the pit stop area back onto the main track.

5. **Winner's Circle:** To crown a winner, turn the large screen located near the track. This action will reveal the winner's circle ramp, launching the winning racer onto the stage.



Image: A car is shown launching onto the yellow winner's circle platform, indicating the end of a race.



Image: The Lightning McQueen car is proudly displayed on the winner's podium, signifying victory.

MAINTENANCE

- **Cleaning:** Wipe the track and vehicles with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the playset in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect all parts for wear or damage. Discontinue use if any part is broken or compromised.

TROUBLESHOOTING

- **Car Not Moving:** Ensure the booster mechanism is fully wound. Check for any obstructions on the track.
- **Track Disconnection:** If track pieces separate during play, re-connect them firmly until they click into place.
- **Vehicle Compatibility:** Only 1:55 scale die-cast vehicles are recommended for optimal performance on this track.

SPECIFICATIONS

Feature	Detail
Product Dimensions	14.65 x 40.59 x 7.28 inches
Item Weight	2.77 pounds
Model Number	HPD81
Manufacturer Recommended Age	4 years and up
Release Date	July 30, 2023
Manufacturer	Mattel, Inc.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Mattel website. Keep your proof of purchase for any warranty claims.