

[Manuals.plus](#) /

› [Hot Wheels](#) /

› Hot Wheels RC Monster Trucks Mega-Wrex 1:6th Scale Instruction Manual

Hot Wheels HPK28

Hot Wheels RC Monster Trucks Mega-Wrex 1:6th Scale Instruction Manual

Model: HPK28

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Hot Wheels RC Monster Trucks Mega-Wrex. Please read all instructions carefully before use and retain this manual for future reference.

The Hot Wheels Monster Trucks RC 1:6th Mega-Wrex is an extra-large remote-control toy truck designed for dynamic play. It features all-terrain tires suitable for various landscapes and can perform stunts like wheelies. The truck itself is rechargeable via an included USB cable, and the remote control operates on a 2.4 GHz frequency for interference-free play.

SETUP

1. **Unboxing:** Carefully remove the Mega-Wrex truck and its components from the packaging. Ensure all parts are present: 1 Hot Wheels Monster Truck RC 1:6th Mega-Wrex, 1 remote control, and 1 USB charging cable.
2. **Remote Control Batteries:** The remote control requires 2 AAA batteries (not included). Open the battery compartment on the remote control, insert the batteries with correct polarity, and securely close the compartment.
3. **Charging the Truck:** The Mega-Wrex truck has a built-in rechargeable battery. Locate the USB charging cable on the underside of the truck. Connect the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status. Allow sufficient time for a full charge before first use.
4. **Power On:** Once the truck is charged and the remote control has batteries, turn on the truck using its power switch. Then, turn on the remote control. The devices should automatically pair.



Figure 1: Hot Wheels RC Monster Trucks Mega-Wrex 1:6th Scale. This image shows the large remote-control monster truck with its distinctive shark-like design and oversized wheels.



Figure 2: The compact remote control for the Mega-Wrex truck. It features two joysticks for directional control.

OPERATING INSTRUCTIONS

The Mega-Wrex is designed for both indoor and outdoor use on various surfaces. Its 2.4 GHz remote control ensures a stable connection.

- **Driving:** Use the joysticks on the remote control to steer and accelerate the truck. Push both joysticks forward to move forward, pull both back to reverse. Move one joystick forward and the other back to turn.
- **All-Terrain Capability:** The truck's large, all-terrain tires allow it to navigate over obstacles and different surfaces such as carpet, gravel, and even small toy cars (additional cars sold separately).
- **Wheelie Stunts:** Prop the Mega-Wrex onto its wheelie bar to perform impressive two-wheeled stunts. Practice makes perfect!



Figure 3: The Mega-Wrex navigating rough terrain, showcasing its large, durable all-terrain tires designed for various surfaces.



FULL-FUNCTION REMOTE CONTROL!

Figure 4: The Mega-Wrex performing a wheelie, demonstrating its ability to balance on its rear wheels for stunts.

MAINTENANCE

- **Cleaning:** After use, especially outdoors, gently wipe the truck clean with a damp cloth to remove dirt and debris. Avoid submerging the truck in water or using harsh chemicals.
- **Storage:** Store the truck and remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from the remote control if storing for extended periods.
- **Battery Care:** Always ensure the truck's internal battery is fully charged before storage to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Truck does not respond to remote control.	Low batteries in remote control or truck. Not paired. Out of range.	Replace remote control batteries. Charge truck battery. Ensure truck and remote are turned on and within range (approx. 2.4 GHz frequency).
Truck moves slowly or inconsistently.	Low truck battery. Obstruction in wheels.	Recharge truck battery. Check wheels for debris and clear if necessary.
Remote control indicator light is off.	Remote control is off or batteries are dead.	Turn on remote control. Replace AAA batteries.

SPECIFICATIONS

- **Brand Name:** Hot Wheels
- **Model Name:** Hot Wheels Monster Trucks XL 1:6 Scale Mega-Wrex RC Vehicle
- **Model Number:** HPK28
- **Item Dimensions:** 18.5 x 28.66 x 15.43 inches
- **Size:** Over 2 feet long (approx. 60.96 cm)
- **Item Weight:** 3.96 Pounds
- **Material Type:** Plastic
- **Power Source:** Battery Powered (Truck: Rechargeable via USB; Remote: 2 AAA batteries)
- **Operation Mode:** Remote Control
- **Manufacturer Minimum Age:** 60 Months
- **Included Components:** 1 Hot Wheels Monster Truck RC 1:6th Mega-Wrex, remote control, USB charging cable

WARRANTY

This product is sold with no explicit manufacturer warranty. Please refer to your retailer's return policy for details on returns or exchanges.

SUPPORT

For further assistance or inquiries regarding your Hot Wheels RC Monster Trucks Mega-Wrex, please visit the official Hot Wheels website or contact Mattel, Inc. customer service. Keep your product model number (HPK28) handy when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BN15NBS1>

More documents and user manuals: **<https://manuals.plus/>**