

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [COSYLAND](#) /
- › [COSYLAND CS0038-5 Kids Kitchen Step Stool Helper Instruction Manual](#)

## COSYLAND CS0038-5

# COSYLAND CS0038-5 Kids Kitchen Step Stool Helper Instruction Manual

Model: CS0038-5 | Brand: COSYLAND

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, safe operation, and maintenance of your COSYLAND Kids Kitchen Step Stool Helper. Designed for toddlers aged 18 months to 3 years, this multi-functional stand allows children to safely participate in kitchen activities alongside adults. Please read all instructions carefully before use.



Image: The COSYLAND Kids Kitchen Step Stool Helper in black, positioned at a kitchen counter with a child standing safely inside.

## SAFETY INFORMATION

- **Adult Supervision Required:** Never leave a child unattended or unsupervised while using the step stool.
- **Stable Placement:** Always place the product on a flat, even indoor floor. Do not use it on an uneven surface.
- **Secure Positioning:** Position the step stool with the top front against a kitchen island or sink to enhance stability.
- **Weight Limit:** The step stool safely supports up to 150 lbs.
- **Age Range:** Suitable for toddlers aged 18 months to 3 years old.
- **Anti-Drop Railing:** Utilize the removable anti-drop railing for enhanced child safety.

# SAFE USAGE GUIDELINE



**ATTENTION: PLACE THE TOWER ON A SAFE, EVEN INDOOR FLOOR, WITH THE TOP FRONT AGAINST A KITCHEN ISLAND OR SINK. ADULT SUPERVISION REQUIRED.**

Image: Visual guidelines illustrating safe and unsafe placement of the step stool, emphasizing adult supervision and stable surfaces.

## PRODUCT FEATURES

- **Unique Patented Design:** Features a removable anti-drop railing for enhanced safety (Patent No: USD1,007,881S).
- **Stable "A" Structure:** Engineered with an "A" shape structure to reduce the risk of toppling, meeting child safety standards.
- **Durable Construction:** Made from solid natural bamboo with a child-safe finish, designed for longevity.
- **Non-Slip Feet:** Equipped with non-slip feet for added stability on various floor surfaces.
- **Adjustable Platform:** The standing platform can be adjusted to accommodate your child's growth.
- **Multi-functional:** Can be converted into a two-step stool for adults or a small table/desk as your child grows.

### New Removable Anti-drop bar

Removable gate for easy access and effective protection for your children.



### Other Version



Image: Detail of the removable anti-drop safety bar, highlighting its easy access and protective function.

### Upgraded Safety

"A" shape structure  
Make sure your child will not fall



### Other Version



Image: Illustration of the stable "A" shape design, emphasizing its 150 lbs weight capacity and anti-toppling features.



Image: The step stool demonstrating its versatility, used by a toddler in the kitchen and as a two-step stool for an adult.

## ASSEMBLY INSTRUCTIONS

---

The COSYLAND Kids Kitchen Step Stool Helper requires assembly. All necessary installation tools and non-slip gloves are included in the package. Follow the numbered parts and screws as indicated in the provided instructions. For visual guidance, refer to the assembly video available on the product page (if applicable).

### Key steps generally include:

1. Unpack all components and verify against the parts list.
2. Assemble the main frame using the designated screws.
3. Attach the standing platform at the desired height.
4. Install the removable anti-drop railing.
5. Apply non-slip feet to the base of the stool.

# Removable Anti-drop bar

Removable gate for easy access and effective protection for your children



Image: Detailed view of the step stool's dimensions, highlighting the non-slip rubber feet and the inclusion of installation gloves for assembly.

## OPERATING INSTRUCTIONS

### Placing Your Child in the Stool:

- Ensure the step stool is on a stable, flat surface.
- If the anti-drop bar is in place, slide it open or remove it temporarily.
- Carefully lift your child and place them onto the standing platform.
- Once your child is securely inside, close or re-insert the anti-drop bar.
- Always maintain adult supervision.

# Safe Usage Guideline



Image: Visual instructions on how to safely place a child into the step stool and secure them, contrasting with unsafe practices.

## Adjusting Platform Height:

The standing platform can be adjusted to different heights to grow with your child. Consult the assembly instructions for specific details on how to safely adjust the platform level. Ensure the platform is securely locked into place before allowing your child to use the stool.

## Converting to a Step Stool:

For older children or adult use, the top enclosure can be removed, transforming the unit into a two-step stool. This provides versatility for various household tasks. Refer to the assembly instructions for details on safely converting the unit.

## MAINTENANCE

- **Cleaning:** Wipe the step stool with a damp cloth or sponge soaked in a mild cleaning solution or water. Avoid harsh chemicals that may damage the finish.
- **Inspection:** Regularly inspect all screws and connections to ensure they are tight. Tighten as needed to maintain stability.

- **Storage:** Store the step stool in a dry, indoor environment to prevent damage from moisture or extreme temperatures.

## SPECIFICATIONS

Feature	Detail
Model Name	CS0038-5
Brand	COSYLAND
Product Dimensions	15.7"D x 17.7"W x 35.26"H
Material	Bamboo
Color	Black
Weight Limit	150 Pounds
Age Range (Description)	Toddler 18 months to 3 years old
Assembly Required	Yes
Special Features	Heavy Duty, Removable Anti-Drop Railing, Sturdy, Non-Slip Feet

## WARRANTY AND SUPPORT

For warranty information, product support, or to report any issues, please contact COSYLAND customer service. Refer to the product packaging or the official COSYLAND website for contact details.