

Aigostar B30202B3T

Aigostar Sandwich Maker Instruction Manual

Model: B30202B3T

1. INTRODUCTION

Thank you for purchasing the Aigostar Sandwich Maker. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

3. PRODUCT COMPONENTS

The Aigostar Sandwich Maker features a compact design with non-stick plates for versatile cooking.



Figure 1: Aigostar Sandwich Maker with two prepared sandwiches.

This image displays the Aigostar Sandwich Maker in an open position, revealing two perfectly grilled sandwiches on its non-stick cooking plates. The exterior is a sleek stainless steel finish with a black handle and indicator lights.

- **Stainless Steel Housing:** Durable and easy to clean exterior.
- **Non-Stick Cooking Plates:** Ensures easy food release and quick cleanup.
- **Cool-Touch Locking Handle:** For safe operation and convenient portability.
- **Indicator Lights:** Red light for power on, green light for preheating complete.
- **Cord Wrap:** Located on the bottom for tidy storage.
- **Non-Skid Feet:** Provides stability during use.

4. SETUP

1. **Unpacking:** Carefully remove the sandwich maker from its packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Ensure the appliance is completely dry before plugging it in.
3. **Placement:** Place the sandwich maker on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.
4. **Power Connection:** Plug the appliance into a standard 120V AC electrical outlet. The red indicator light will illuminate, signaling that the unit is powered on.



Figure 2: Underside of the Aigostar Sandwich Maker, highlighting the cord wrap and non-skid feet for stability and tidy storage.

This image provides a view of the bottom of the sandwich maker, showing the integrated cord wrap for convenient storage and the non-skid feet designed to keep the appliance stable on your countertop during use.

5. OPERATING INSTRUCTIONS

5.1. Preheating

After plugging in the sandwich maker, both the red and green indicator lights will illuminate. The green light will turn off once the appliance has reached its optimal cooking temperature, indicating it is ready for use.



Figure 3: Close-up of the Aigostar Sandwich Maker's indicator lights. Red signifies power, green indicates readiness for cooking.

This image shows the top of the Aigostar Sandwich Maker with its red and green indicator lights. The red light confirms the unit is powered on, while the green light signals that the appliance has reached the correct temperature for cooking.

5.2. Making a Sandwich or Panini

1. Prepare your ingredients (bread, cheese, fillings). For best results, lightly butter the outer sides of your bread.
2. Once the green light turns off, carefully open the sandwich maker using the cool-touch handle.
3. Place your sandwich or panini onto the bottom cooking plate. Ensure it is centered.
4. Gently close the top plate and secure the locking latch. Do not force it closed if the sandwich is too thick.
5. Cook for approximately 3-5 minutes, or until the bread is golden brown and the cheese is melted. Cooking time may vary based on ingredients and desired crispness.
6. Carefully open the appliance and remove the cooked sandwich using a heat-resistant spatula.



COOL-TOUCH HANDLE
For safe, effortless use

Figure 4: A panini being carefully placed onto the bottom cooking plate of the Aigostar Sandwich Maker.

This image captures a hand placing a panini onto the hot non-stick surface of the open Aigostar Sandwich Maker. The cool-touch handle is visible, emphasizing safe operation.



LIGHTWEIGHT & PORTABLE

Perfect for kitchen, dorm, RV



Figure 5: A hand closing the lid of the Aigostar Sandwich Maker, securing the panini inside for cooking.

This image shows a hand gently closing the lid of the Aigostar Sandwich Maker, preparing to grill the panini. The locking mechanism is designed for secure closure during cooking.

5.3. Grilling Other Foods (e.g., Eggs, Bacon, Vegetables)

The non-stick plates are suitable for grilling various foods. Ensure the appliance is preheated before adding ingredients.

- For eggs, lightly grease the plates if desired, then crack eggs directly onto the hot surface. Close the lid for even cooking.
- For bacon or vegetables, place them directly onto the preheated plates. Close the lid to cook both sides simultaneously.
- Monitor cooking progress to achieve desired doneness. Use heat-resistant utensils for turning and removal.



Figure 6: The Aigostar Sandwich Maker in use, grilling bacon strips and pancakes simultaneously on its double-sided heating plates.

This image shows the versatility of the Aigostar Sandwich Maker, with bacon sizzling on one side and pancakes cooking on the other. The double-sided heating ensures efficient and even cooking for various breakfast items.

Your browser does not support the video tag.

Video 1: This video demonstrates the Aigostar Sandwich Maker's ability to cook various items like steak, eggs, and sandwiches, highlighting its non-stick coating and easy cleaning. It shows the process of preparing different meals and the final grilled results.

Your browser does not support the video tag.

Video 2: This video showcases the Aigostar Sandwich Maker's features, including its stainless steel shell, preheat process, safety lock, cool-touch handle, double-sided heating, and non-stick coating. It demonstrates making pancakes, eggs, and sandwiches, emphasizing quick and easy breakfast preparation.

Your browser does not support the video tag.

Video 3: This video illustrates how to make a breakfast sandwich using the Aigostar Sandwich Maker, showing the steps from preparing ingredients to grilling the sandwich. It also highlights the appliance's ability to cook various items like bacon, salmon, and vegetables, and its easy-to-clean non-stick surface.

6. CLEANING AND MAINTENANCE

1. **Always Unplug:** Ensure the sandwich maker is unplugged from the power outlet and completely cooled before cleaning.
2. **Cleaning Plates:** The non-stick cooking plates can be wiped clean with a damp cloth or sponge. For stubborn food residue, use a small amount of mild dish soap. Avoid abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior housing with a damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and dry, the sandwich maker can be stored upright to save space. Use the integrated cord wrap for tidy storage of the power cord.



Figure 7: A hand wiping the non-stick cooking plate of the Aigostar Sandwich Maker with a damp cloth for easy cleaning.

This image demonstrates the ease of cleaning the Aigostar Sandwich Maker. A damp cloth is used to wipe down the non-stick surface, showing how simple it is to remove food residue after use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in or power outlet malfunction.	Ensure the appliance is securely plugged into a working electrical outlet. Check the circuit breaker.
Food sticks to the plates.	Plates not properly greased or damaged non-stick coating.	Lightly grease plates before use. Avoid using metal utensils that can scratch the coating. If coating is damaged, contact customer support.
Food is not cooking evenly.	Appliance not preheated or uneven food placement.	Allow the green indicator light to turn off before adding food. Ensure food is spread evenly on the plates.

8. SPECIFICATIONS

- **Brand:** Aigostar
- **Model:** B30202B3T
- **Material:** Stainless Steel
- **Color:** Black
- **Wattage:** 750 watts
- **Voltage:** 120 Volts
- **Product Dimensions:** 9.3"D x 9.17"W x 3.5"H
- **Item Weight:** 3.14 pounds
- **Special Features:** Cool Touch, Lightweight, Non-Stick Coating

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided in your product packaging or visit the official Aigostar website. Keep your purchase receipt as proof of purchase.
Official Aigostar Store: [Aigostar Store on Amazon](#)

