

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BesBuy](#) /

› [Instruction Manual for BesBuy RV Door Lock](#)

BesBuy 26d16405-c68e-481e-a665-9dd876147736

Instruction Manual for BesBuy RV Door Lock

Model: 26d16405-c68e-481e-a665-9dd876147736

Brand: BesBuy

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Upgraded Black RV Door Lock with Paddle Deadbolt. Designed for campers, horse trailers, cargo haulers, and similar vehicles, this lock offers enhanced security and ease of use. Please read this manual thoroughly before installation and operation to ensure proper function and safety.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x RV door handle assembly
- 4 x Mechanical keys
- 16 x Screws of different lengths
- 1 x Screwdriver
- Mounting hardware
- Owner's manual/install guide (this document)



Image: All components included in the BesBuy RV Door Lock package.

3. SPECIFICATIONS

Feature	Detail
Brand	BesBuy
Model Number	26d16405-c68e-481e-a665-9dd876147736
Material	Metal, Zinc
Lock Type	Key Lock
Special Feature	Waterproof
Item Dimensions (L x W x H)	7.48 x 5.51 x 2.75 inches

Item Weight	2.48 pounds
Color	Black
Recommended Uses	Securing RV doors, trailers, trucks, horse trailers, and cargo haulers

4. SETUP AND INSTALLATION

This RV door lock is designed for straightforward replacement of existing handles. Ensure your door's cutout dimensions match the requirements for proper fitment.

4.1. Pre-Installation Check

- Verify your door's hole cutout is approximately 2.67" wide x 3.6" tall.
- Confirm door thickness is between 1.25" and 1.5".
- Ensure your door has right-side hinges for compatibility.

CUTOUT SIZE DIMENSIONS



Common OEM Handle Size:
3.50" Wide x 4.25" Tall

Lock Hole Opening:
2.67" Wide x 3.6" Tall x
1.25"-1.50" Deep



For Doors With Right Side Hinges

Hole Cutout is 2.67" x 3.6"

WILL REPLACE
THESE HANDLES



WILL NOT REPLACE
THESE HANDLES



Image: Critical cutout size dimensions for installation compatibility.

4.2. Installation Steps

1. **Remove Old Lock:** Use the provided screwdriver to remove the screws securing your existing RV door lock. Carefully detach the old lock assembly from the door.
2. **Insert New Lock:** Align the new BesBuy RV door lock with the existing cutout in your door. Gently push the lock into place, ensuring the bolts and handle mechanism fit correctly.
3. **Secure External Plate:** From the exterior side of the door, secure the external plate of the lock using the appropriate screws. The provided screwdriver can be used for this step.
4. **Secure Internal Plate:** From the interior side, attach the internal plate, ensuring it aligns with the external mechanism. Fasten with the remaining screws.
5. **Install Strike Plate:** On the door frame, align the strike plate with the latch bolt and deadbolt. Mark and pre-drill holes if necessary, then secure the strike plate with screws.
6. **Test Functionality:** Before closing the door, test the paddle handle, deadbolt, and key operation to ensure smooth and secure locking/unlocking.



Image: Labeled components of the RV door lock, showing external and internal parts.

4.3. Installation Video Guide

For a visual guide on the installation process, please refer to the official product video below:

Your browser does not support the video tag.

Video: BesBuy RV Door Locks with 4 Keys and Paddle Deadbolt - demonstrating installation and operation.

5. OPERATING INSTRUCTIONS

Your BesBuy RV door lock provides multiple ways to secure and access your vehicle.

5.1. Locking from Exterior

- **Using the Key:** Insert one of the provided keys into the upper keyhole on the exterior side of the lock. Turn the key to engage the deadbolt. Remove the key.
- **Paddle Handle:** The paddle handle on the exterior side operates the main latch. When the deadbolt is engaged, the

paddle handle will not open the door.

5.2. Unlocking from Exterior

- **Using the Key:** Insert the key into the upper keyhole. Turn the key to retract the deadbolt. Then, press the paddle handle to open the door.

5.3. Locking from Interior

- **Internal Red Lock:** On the interior side, locate the red lever. Push or slide this lever to engage the internal deadbolt. This provides additional security from the inside.

5.4. Unlocking from Interior

- **Internal Red Lock:** Push or slide the red lever to disengage the internal deadbolt.
- **Internal Door Handle:** Press the internal door handle to retract the latch and open the door.

An advertisement for a car lock system. At the top, a red banner contains the text "HIGHER SECURITY" in white. Below this, a photograph shows a person in a black balaclava and clothing crouching in a dark, wooded area at night, reaching towards the side mirror of a car. A glowing red triangle with an exclamation mark is superimposed over the scene. A large, circular inset on the left shows a close-up of a hand in a black leather glove touching a blue, hexagonal-patterned lock cylinder. The lock cylinder has a keyhole and a small circular icon. Below the photograph, there are three feature descriptions, each with an icon and a title: 1. A keyhole icon, "Double lock cylinder keyhole", "Anti-thief and safe". 2. A heavy-duty material icon, "Heavy Duty Strong Material", "Prevent violent disassembly". 3. A shield with a key icon, "Every Key Has Single No.", "Anti-copy and unique".

HIGHER SECURITY

- **Double lock cylinder keyhole**
Anti-thief and safe
- **Heavy Duty Strong Material**
Prevent violent disassembly
- **Every Key Has Single No.**
Anti-copy and unique

Image: The lock features a double lock cylinder keyhole and heavy-duty materials for enhanced security.

6. MAINTENANCE

Regular maintenance will ensure the longevity and smooth operation of your RV door lock.

- **Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Lubrication:** Periodically apply a small amount of graphite lubricant or a silicone-based spray to the keyholes and moving parts of the latch mechanism. Do not use oil-based lubricants as they can attract dirt.
- **Screw Tightness:** Check all mounting screws periodically and tighten them if they have become loose.

7. TROUBLESHOOTING

If you encounter issues with your RV door lock, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Key does not turn or is stiff.	Dirt/debris in keyhole, lack of lubrication, bent key.	Clean keyhole with compressed air. Apply graphite lubricant. Try a different key. If key is bent, replace it.
Latch bolt does not retract fully.	Misalignment with strike plate, debris in mechanism, loose screws.	Check strike plate alignment and adjust if necessary. Clean the latch mechanism. Tighten mounting screws.
Deadbolt does not engage/disengage.	Misalignment, internal mechanism issue.	Ensure the door is fully closed and aligned with the frame. Check for obstructions. If the issue persists, contact customer support.
Door handle feels loose.	Loose mounting screws.	Tighten all visible mounting screws on both the interior and exterior plates.

8. WARRANTY AND SUPPORT

BesBuy stands behind the quality of its products. For warranty information, technical support, or any questions not covered in this manual, please contact BesBuy customer service through the retailer where you purchased the product or visit the official BesBuy website.

For more information, visit the [BesBuy Store on Amazon](#).

