

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY NS-RC5NA-14 Remote Control User Manual for Insignia Digital Analog TV Converter Box NS-DXA2

ECONTROLLY NS-RC5NA-14

ECONTROLLY NS-RC5NA-14 Remote Control User Manual

MODEL: NS-RC5NA-14

1. Introduction

This manual provides instructions for the ECONTROLLY NS-RC5NA-14 replacement remote control. This remote is designed to operate the Insignia Digital Analog TV Converter Box, model NS-DXA2. Please read these instructions carefully before use to ensure proper operation and longevity of your device.



Image 1.1: Angled view of the NS-RC5NA-14 remote control. This image shows the ergonomic design and button layout from a side perspective.

2. Setup

The NS-RC5NA-14 remote control requires two AAA batteries for operation. No programming is necessary; simply insert the batteries, and the remote will be ready for use.

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



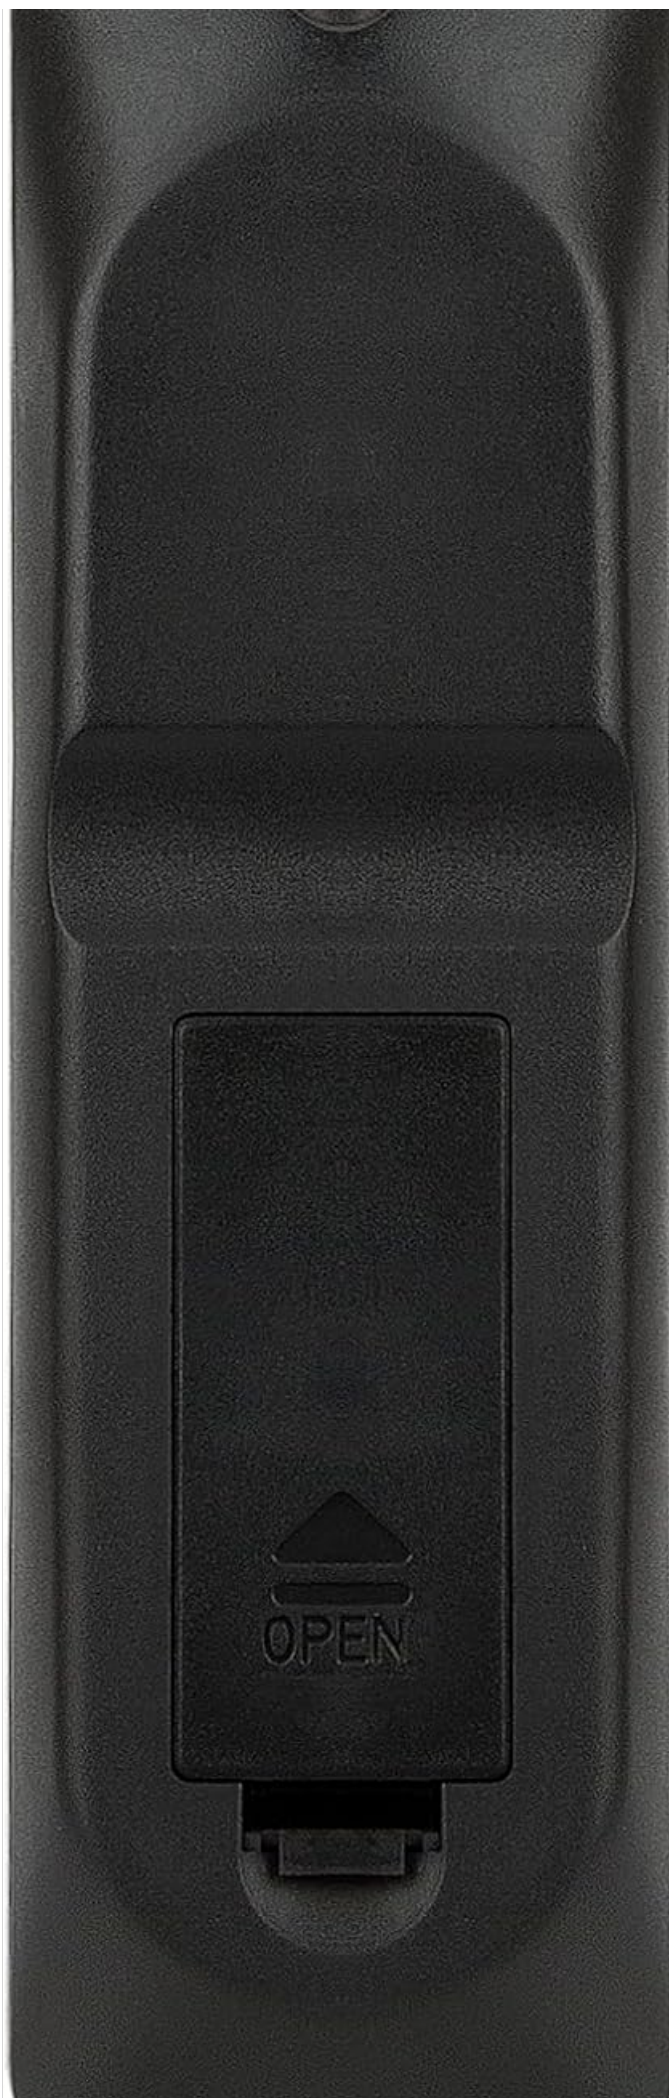




Image 2.1: Back view of the NS-RC5NA-14 remote control with the battery compartment. The image highlights the 'OPEN' indicator for battery access.

3. Operating Instructions

The NS-RC5NA-14 remote control features a standard layout for easy navigation and control of your Insignia Digital Analog TV Converter Box. Below is a description of the primary buttons and their functions.





Image 3.1: Front view of the NS-RC5NA-14 remote control. This image displays all buttons and their labels for easy identification.

3.1 Button Functions

- **POWER:** Turns the converter box on or off.
- **PASS-THROUGH:** Switches between converter box output and direct antenna signal (if supported by the converter box).
- **OK:** Confirms selections in menus or displays channel information.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and channel lists.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MUTE:** Silences the audio output.
- **MENU:** Accesses the main menu of the converter box.
- **INFO:** Displays program information.
- **VOLUME (+/-):** Adjusts the audio volume.
- **CHANNEL (Up/Down):** Changes the channel.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **(-):** Used for entering sub-channels (e.g., 5-1).

4. Maintenance

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

5. Troubleshooting

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote and the converter box's infrared sensor.
- Confirm the remote is pointed directly at the converter box.

- **Buttons not working:**

- Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.
- If only specific buttons are not working, the remote may be damaged and require replacement.

- **Short operating range:**

- Replace batteries.
- Ensure the remote's infrared emitter and the converter box's sensor are clean and unobstructed.

6. Specifications

Product Dimensions	7 x 2 x 0.65 inches
Item Weight	3 ounces
Batteries	2 AAA batteries (not included)
Compatible Devices	Insignia Digital Analog TV Converter Box NS-DXA2
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic design

7. Warranty and Support

This manual does not contain specific warranty information. For details regarding warranty coverage or technical support, please contact the manufacturer, ECONTROLLY, or your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BN1M3YRX>

More documents and user manuals: <https://manuals.plus/>