

SCHMÉCKÉ SHMFWCC441WB

Schmecke 44 Bottle Compressor Wine Cooler Refrigerator User Manual

Model: SHMFWCC441WB

INTRODUCTION

Thank you for choosing the Schmecke 44 Bottle Compressor Wine Cooler Refrigerator. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch cold surfaces immediately after the unit has been plugged in.
- Ensure proper grounding. Connect only to properly grounded outlets.
- Do not use if the power cord is damaged. Contact qualified service personnel.
- Unplug the appliance before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstructions.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended for household use only.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the wine cooler for any damage. Keep packaging materials away from children.

Placement

This is a freestanding unit. Place the wine cooler on a flat, solid surface strong enough to support it when fully loaded. Ensure adequate air circulation around the unit. Avoid direct sunlight or heat sources.

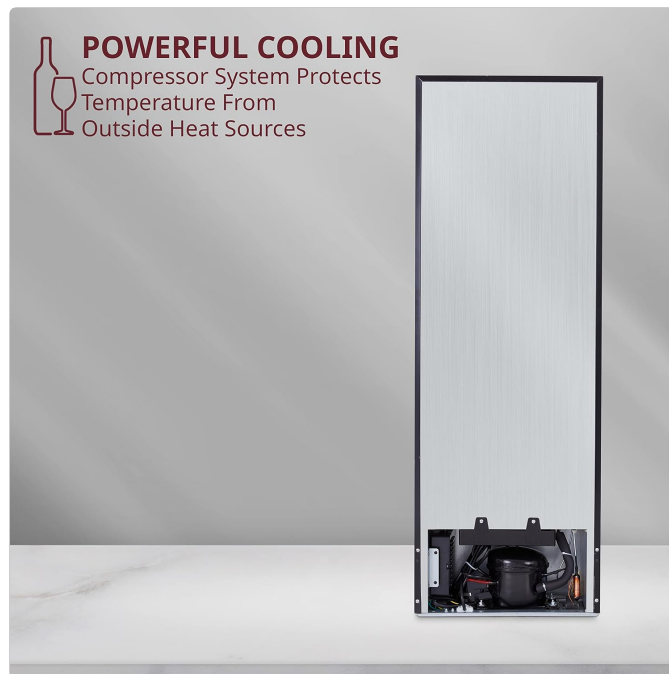


Figure 1: Front view of the Schmecke 44 Bottle Wine Cooler, illustrating its dimensions (49.7 in height, 18.9 in depth, 16.9 in width) and the soft interior LED lighting.

Leveling

Adjust the leveling legs at the bottom of the unit to ensure it is stable and level. This is crucial for proper operation and door alignment.

Power Connection

Plug the appliance into a dedicated, grounded 120V AC outlet. Do not use extension cords or adapter plugs.

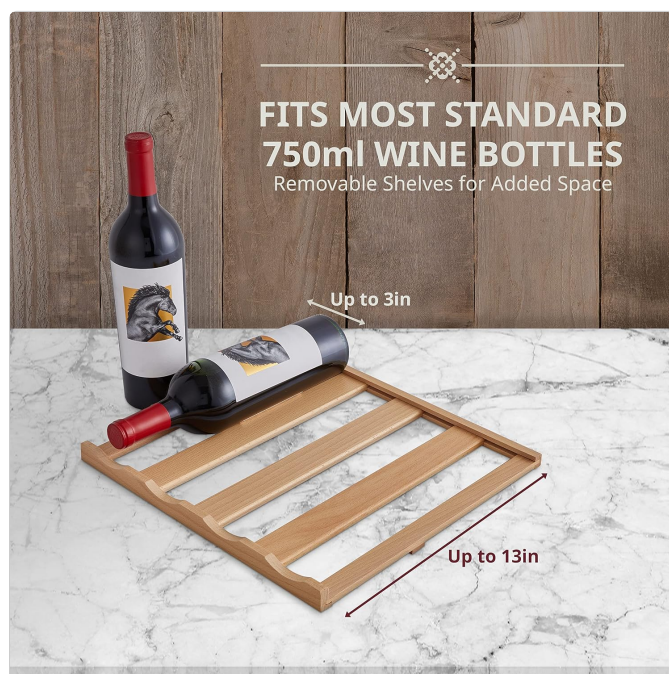


Figure 2: Rear view of the wine cooler, highlighting the compressor system responsible for powerful and consistent cooling, protecting internal temperatures from external heat sources.

OPERATING INSTRUCTIONS

Temperature Control

The wine cooler features an easy-to-use digital touch control panel. The temperature range is 41°F to 64°F (5°C to 18°C). Use the up and down arrows to adjust the desired temperature. Press the lock button to secure your settings.



Figure 3: Close-up of the easy-touch temperature control panel, allowing users to adjust and lock in desired temperature settings with a simple tap.



Figure 4: Interior view demonstrating the built-in fan system that maintains consistent temperature throughout the cooler, preserving the wine's flavor and aroma.

Interior Lighting

The energy-efficient LED light illuminates your wine collection. Press the light button on the control panel to turn it on or off. This soft lighting helps in viewing labels without affecting wine quality.

Adjustable Shelves

The wooden shelves are removable to accommodate various bottle sizes, from standard 750ml bottles to larger formats like champagne. Gently slide shelves out and lift to remove or reposition.



Figure 5: A removable wooden shelf designed to fit most standard 750ml wine bottles (up to 3 inches in diameter and 13 inches in length), offering flexibility for various bottle sizes.



Figure 6: Detail of the wine cooler's sturdy seal and double-paned, smoked glass door, which insulates the interior, blocks harmful UV light, and locks out moisture to maintain ideal temperature and protect wine.

MAINTENANCE

Cleaning

- Always unplug the unit before cleaning.
- Clean the interior with a soft cloth and a mild detergent solution.
- Wipe down the exterior with a soft, damp cloth. Avoid abrasive cleaners.
- Clean the door gasket regularly to ensure a proper seal.

Defrosting

This appliance features an automatic defrost system, minimizing the need for manual defrosting. Any accumulated frost will melt and evaporate automatically.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wine cooler does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Door not closed properly; excessive door openings; warm ambient temperature; unit placed near heat source.	Check door seal; reduce door openings; ensure proper ventilation; relocate unit if necessary.
Unit is making unusual noise.	Unit not level; loose parts; normal compressor operation.	Adjust leveling legs; check for loose items inside; some compressor noise is normal.
Vibration.	Unit not level; bottles touching each other or interior walls.	Level the unit; ensure bottles are spaced correctly.

SPECIFICATIONS

Feature	Detail
Brand	SCHMÉCKÉ
Model Name	SHMFWCC441WB
Capacity	44 Bottles / 4.4 cubic feet
Configuration	Freestanding, Single Zone
Temperature Range	41°F - 64°F (5°C - 18°C)
Cooling Method	Compressor
Defrost System	Automatic
Voltage	120 volts
Door Material Type	Double-Paned Glass
Shelf Type	Wire (Removable)
Item Weight	87.1 pounds
UPC	843812170925
Included Components	Wine fridge

WARRANTY AND SUPPORT

Warranty Information

This Schmecke wine cooler comes with a 1-Year Limited Manufacturer's Warranty. Please refer to the warranty card included with your product for full terms and conditions.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Schmecke customer support. Contact details can typically be found on the manufacturer's website or on your purchase documentation.

VIDEO RESOURCES

No official product videos from the seller are available for embedding at this time.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question